



CABINET PARTS LIST

Ref.	Description	Part No.
1	Cabinet Top Assy	176601
2	Lid PCB	176602
3	Screw Cap	171363
4	Frame FDD	176603
5	Frame HDD	176604
6	Frame Fixing Metal	176605
7	Cabinet Top Assy	176606
8	Frame Power Top	176607
9	Button Push	176607
10	Frame Power Bottom	176608
11	Plate Earth Expansion	176612
12	Bracket Key Switch	176609
13	Knob Volume	176610
14	Tubular Key Cam Lock	171362
15	Cabinet Bottom Assy	176021
16	Plate Bottom	176611
17	Lid Jack	176612
18	Cabinet Top Keyboard	176613
19	Plate Brand	176023
20	Cabinet Bottom Keyboard	176024
21	Sheet Railing	
22	Stand Keyboard	171358
23		

CABINET EXPLODED VIEW

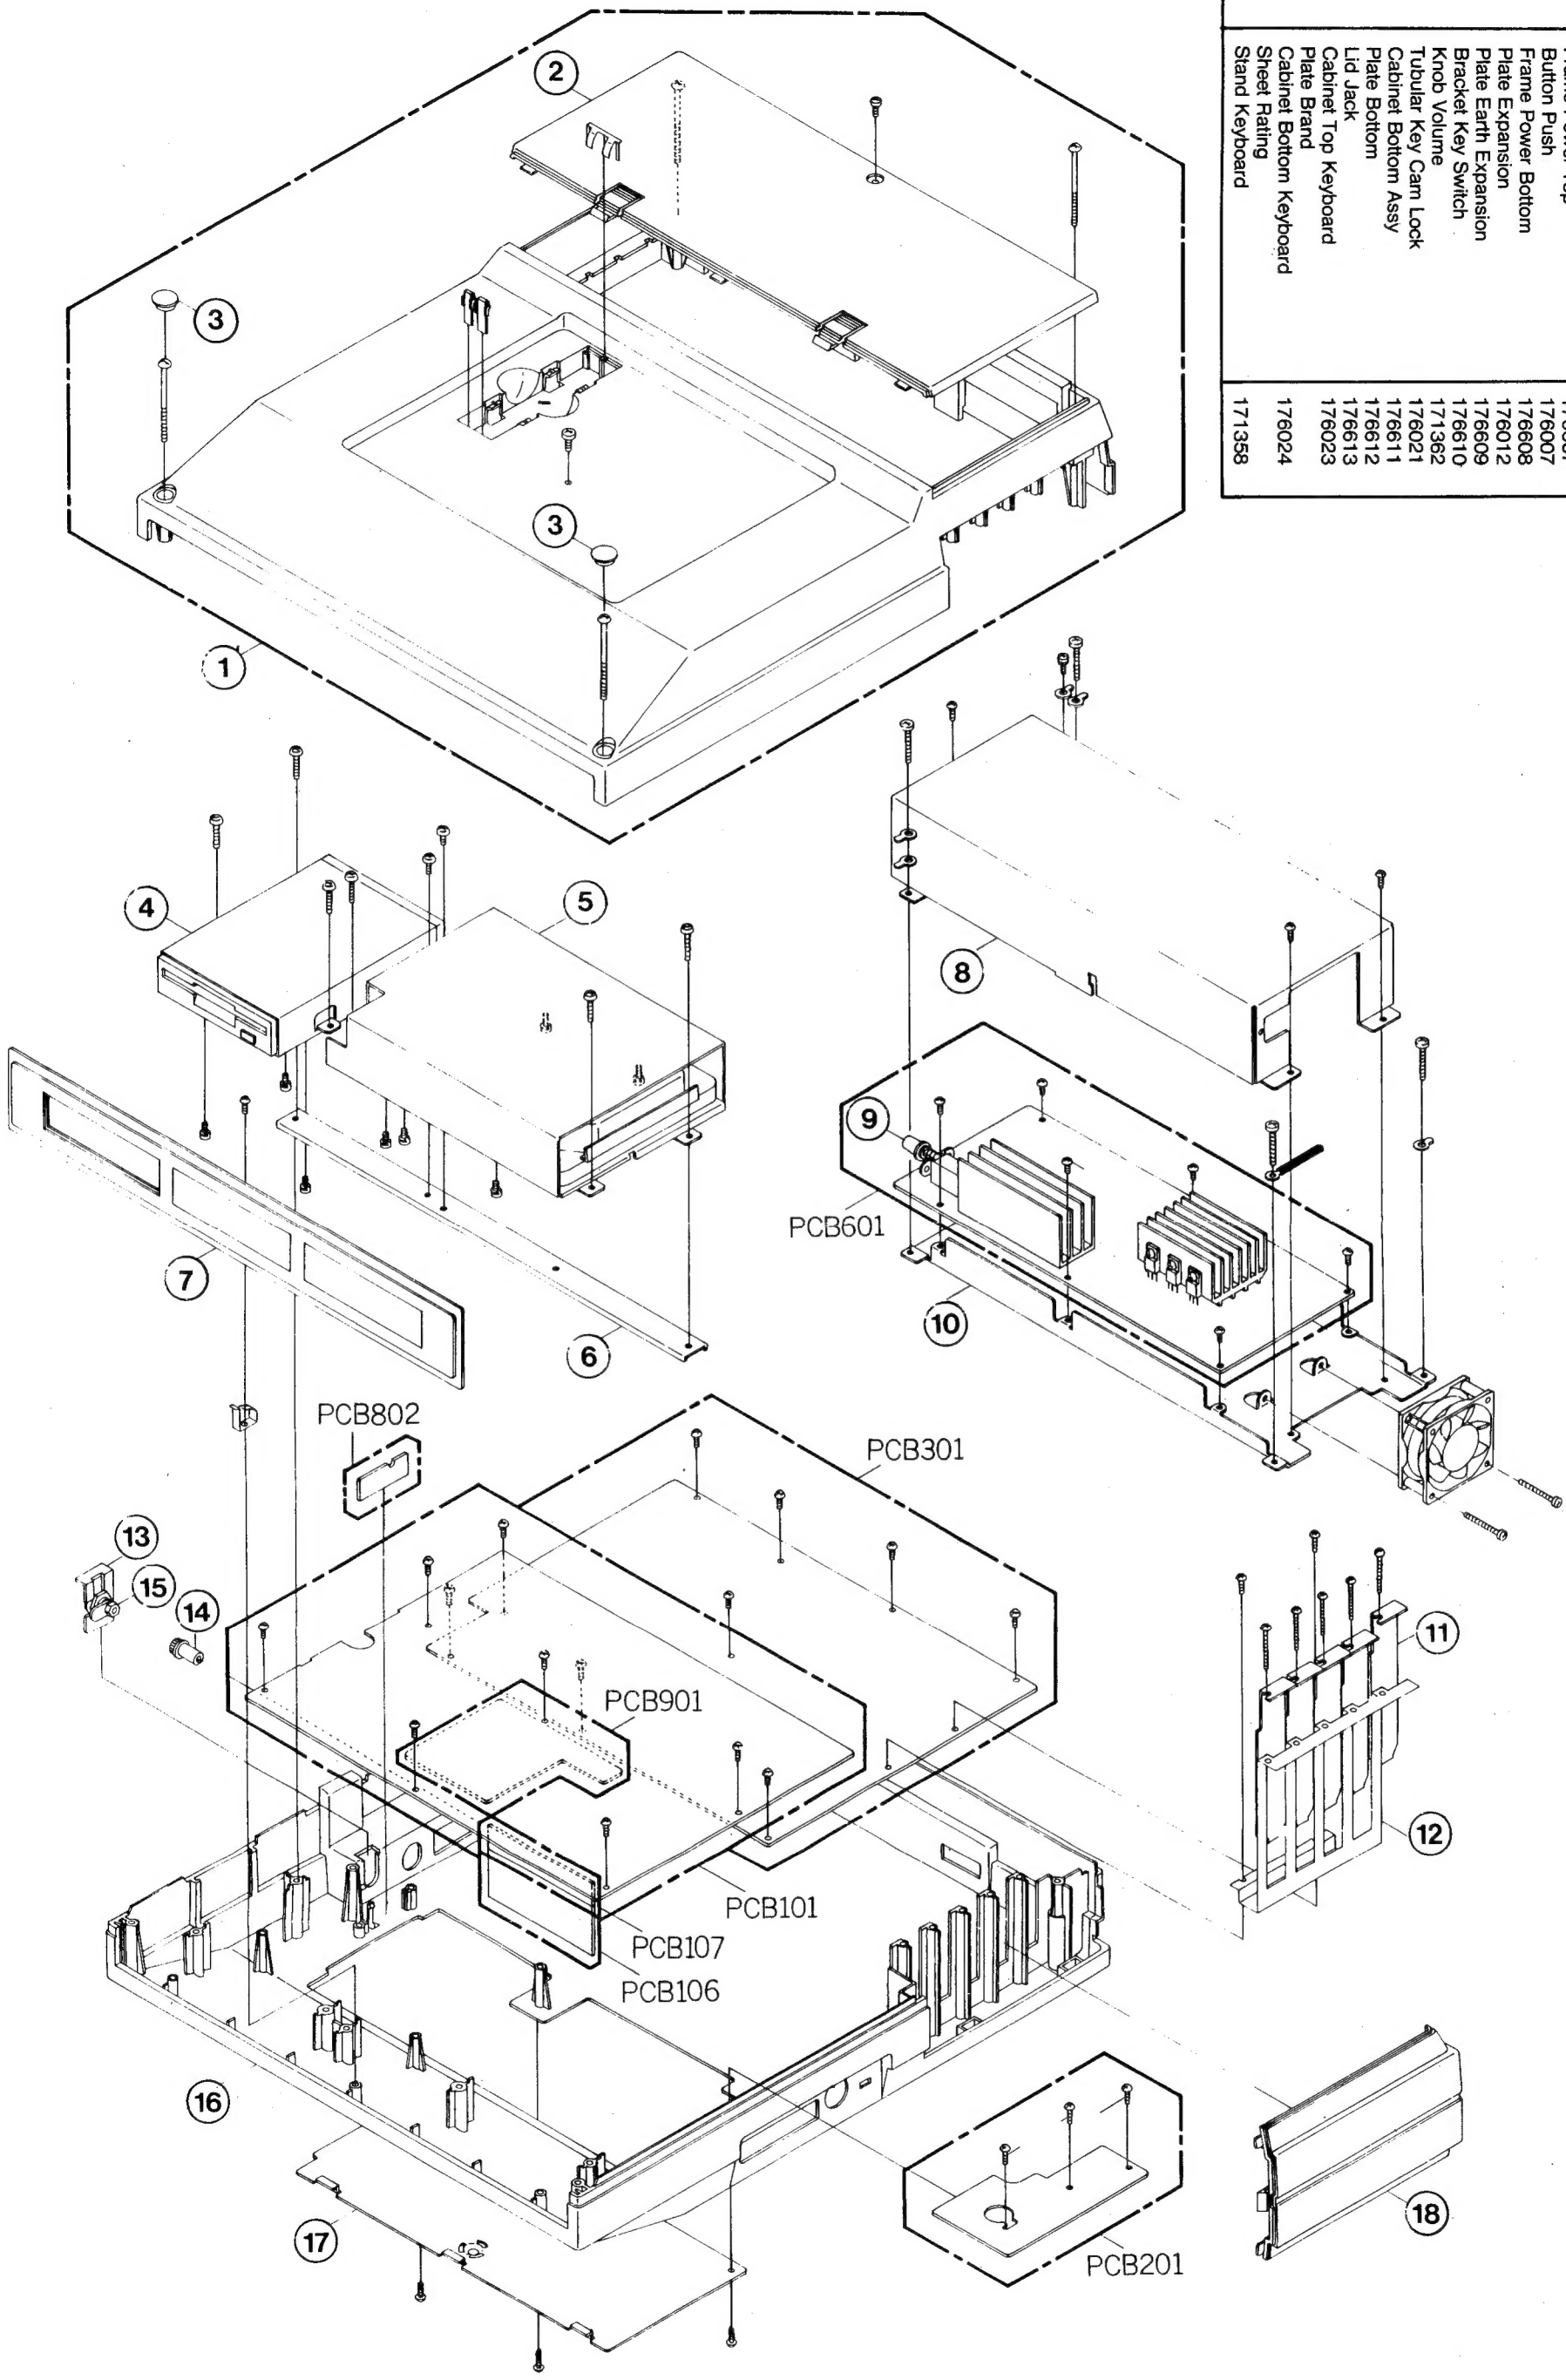

POWER SUPPLY CHASSIS SCHEMATIC DIAGRAM

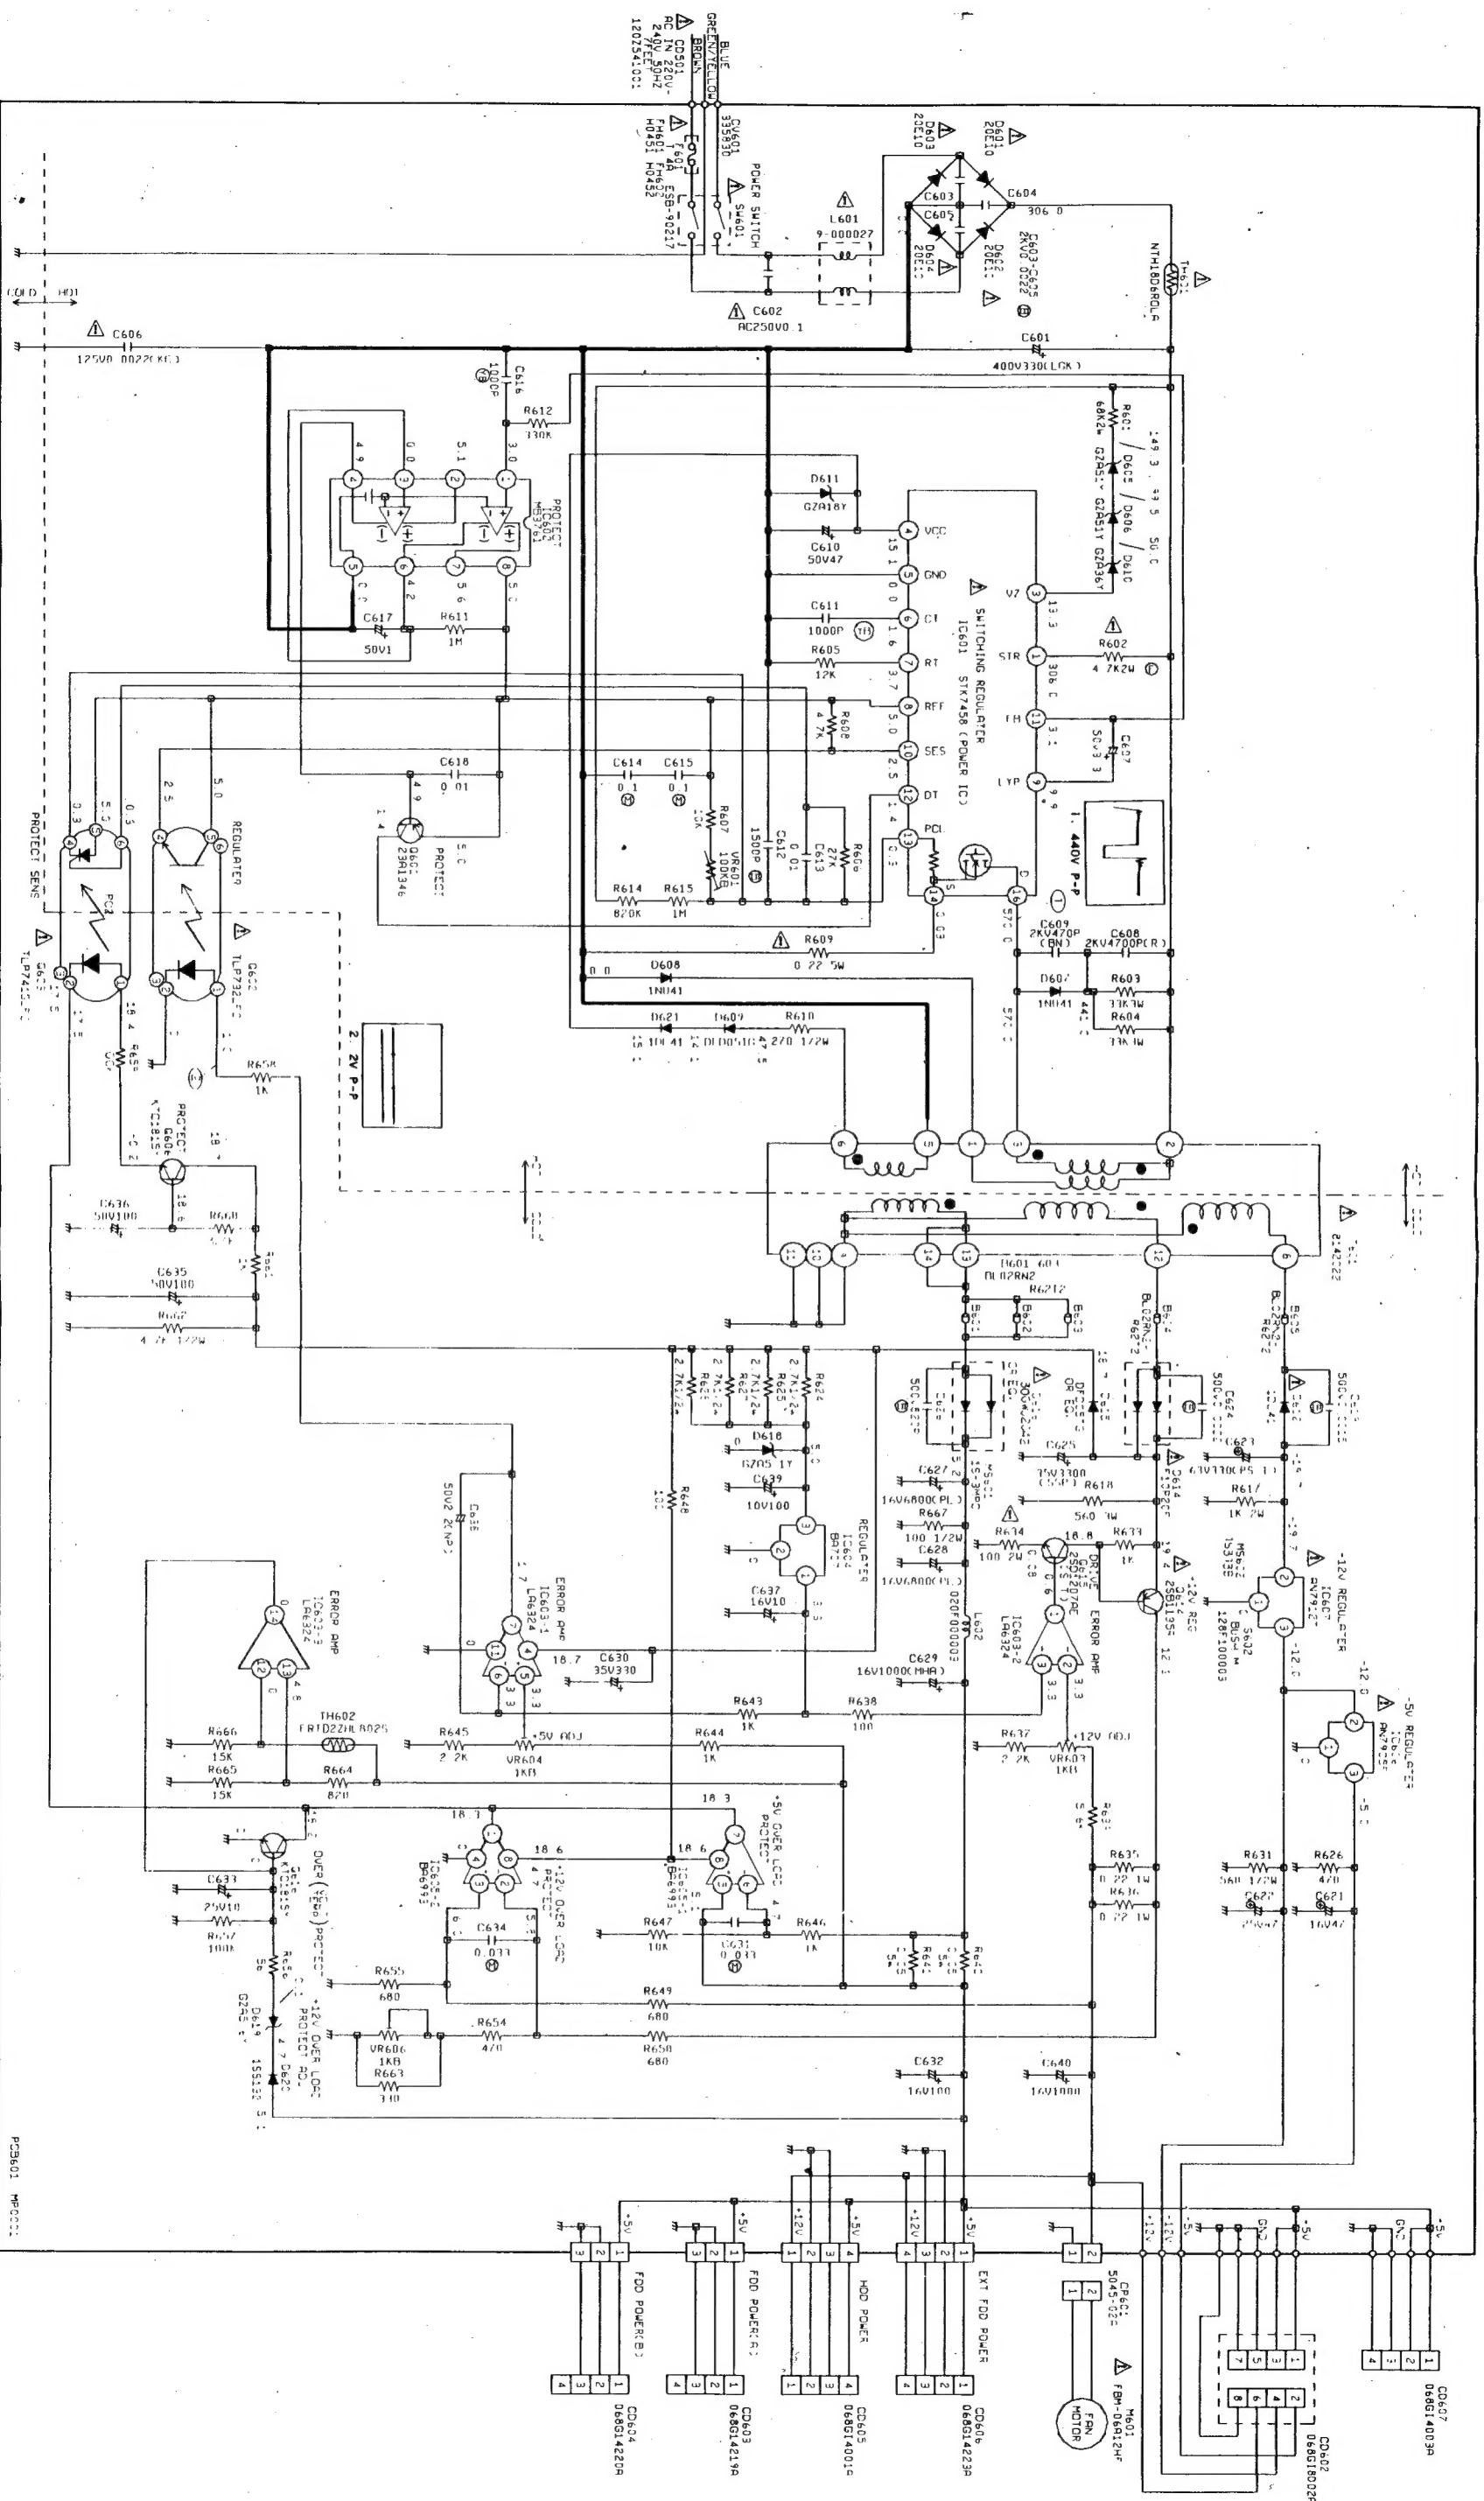

CAUTION: SINCE THESE PARTS MARKED BY Δ ARE DESCRIBED IN PARTS LIST ONLY, THEY ARE NOT DESCRIBED IN THIS SCHEMATIC.

ATTENTION: LES PIÈCES REPÉRÉES PAR UN Δ SONT DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.