


COMPUTERFACTS™

Technical Service Data

APPLE® IIc MODELS A2S4000, A2M4090 COMPUTER/MONITOR

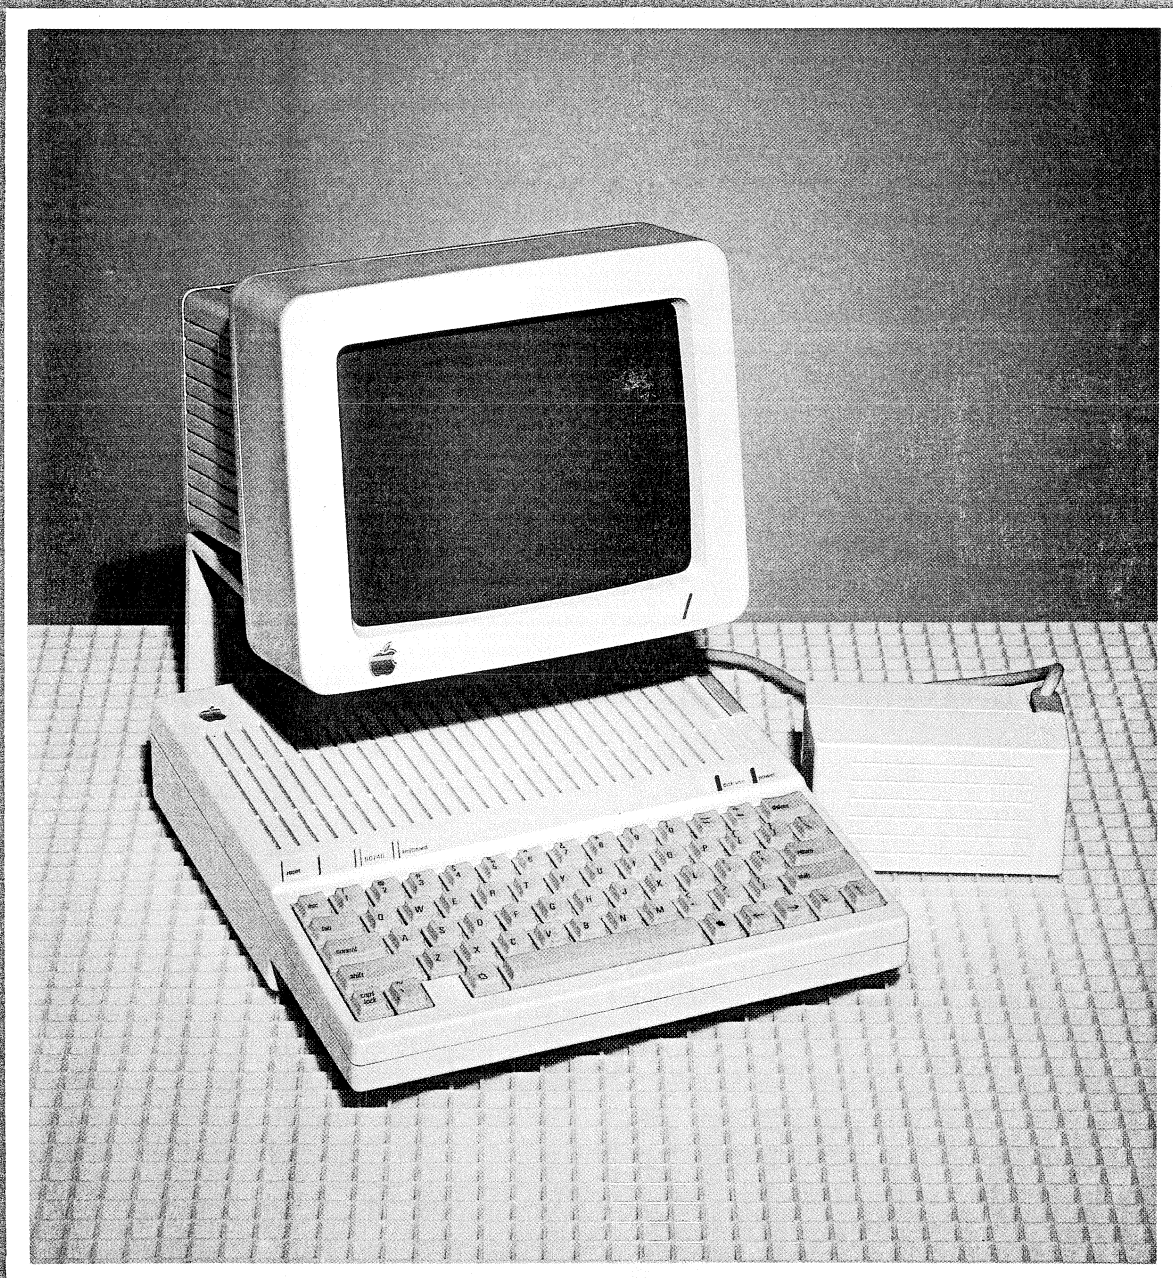

FEATURES COMPLETE SCHEMATICS • PRELIMINARY SERVICE CHECKS • TROUBLESHOOTING TIPS •
EASY-READ WAVEFORMS • REPLACEMENT PARTS LISTS • SEMICONDUCTOR CROSS-REFERENCE

DISK DRIVE


See Folder CSCS7-A

MONOCHROME MONITOR

See Folder CSCS7-B

KEYBOARD, SYSTEM BOARD POWER SUPPLY

CSCS7
APPLE
MODEL IIc

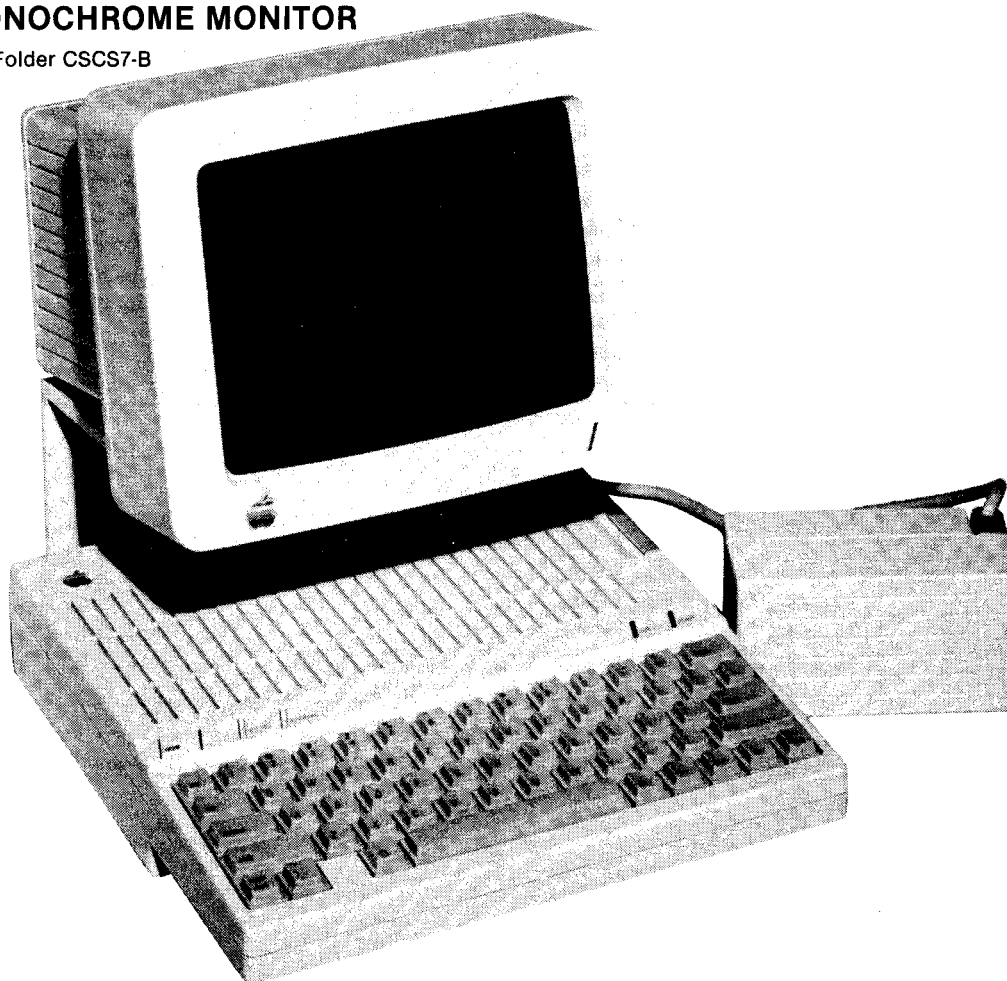

CSCS7
APPLE
MODEL IIc

SAFETY PRECAUTIONS

See page 6.

PRELIMINARY SERVICE CHECKS

ENCLOSED

INDEX

	Page		Page
Block Diagram	12	Photos (Continued)	
Disassembly Instructions	4	Switching Power Supply Board	21,23
General Operating Instructions	4	System Board	22,25
GridTrace Location Guide		Safety Precautions	6
Switching Power Supply Board	20	Schematics	
System Board	7	IC Pinouts & Terminal Guides	5,24
Line Definitions	20	Keyboard	2
Logic	17,18,19	Notes	6
Miscellaneous Adjustments	12	Switching Power Supply	3,26
Parts List	13,14,15,16	System Board	2,27,28,29
Photos		Test Equipment	8
Keyboard	17	Troubleshooting	8,9,10,11,12

SAMS™

Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

© 1985 Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

Printed in U.S. of America.

85CS14956

DATE 9-85

CSCS7-A
APPLE
MODEL IIc

KEYBOARD, SYSTEM BOARD POWER SUPPLY

See Folder CSCS7

MONOCHROME MONITOR

See Folder CSCS7-B

CSCS7-A
APPLE
MODEL IIc

INDEX

	Page		Page
GridTrace Location Guide		Photos (Continued)	
Analog Board	3	Mechanical-Top View	13
Motor Speed Control Board	12	Mechanical-Bottom View	13
Line Definitions	5	Motor Speed Control Board	11,12
Logic Chart	8	Schematics	
Miscellaneous Adjustments	9,10	Disk Drive	2
Parts List	6,7,8	IC Pinouts	2
Photos		Terminal Guides and Notes	2
Analog Board	2,3	Troubleshooting	4,5

SAMSTM Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

© 1985 Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

Printed in U.S. of America.

85CS14956

DATE 9-85

TROUBLESHOOTING

CONTINUOUS OPERATION OF DISK DRIVE

To operate the Disk Drive continuously, type in and run the following program:

```
10 X = PEEK (- 16151): X = PEEK (- 16150)
```

Press the Control and Reset keys simultaneously to stop the Disk Drive.

POWER SUPPLY

Connect the Disk Drive to the Computer. Insert a blank diskette into the Disk Drive and turn On the Computer. Put the Computer in the Basic mode and type in and run the Basic program given in the "Continuous Operation of Disk Drive" section of this Troubleshooting guide.

Check for 11.5V at the emitter of Switch Transistor (Q1). If the voltage is missing at the emitter of Q1, check Choke Coil (L1) and Connector J1. If the voltage is missing at Connector J1, check the Disk Drive interface cable and connectors. If the voltage is present at the emitter of Transistor Q1, check for 11.5V at the collector of Q1. If the voltage is missing at the collector of Q1, check for a logic Low at pin 16 of Driver IC (4D). If pin 16 of IC 4D is Low, check Transistor Q1 and Resistor R3.

Check for 5.0V at the positive lead of Electrolytic C4 and -11.3 V at the negative lead of Electrolytic C5. If either voltage is missing, check Connector J1 and the interface cable. Also check Choke Coil (L2).

WARNING

It is possible for a defective Disk Drive to write on or erase information from a write protected diskette. When checking a questionable Disk Drive, make sure that the diskette being used is backed up by at least one duplicate copy.

HEAD POSITION MOTOR

If the Head Position Motor (M2) is inoperative, check the voltages on pins 11 through 14 of Driver IC (4D). If any of the voltages are not approximately 11.5V, check the resistance of the associated Motor winding. Measure between pin 5 and pin 1, 2, 3 or 4 of Connector J2. Also check Connector J2 for good connections. If pin 11, 12, 13 or 14 of IC 4D is shorted to ground, check IC 4D.

If the voltages at pins 11 thru 14 of IC 4D are normal, type in and run the following basic program:

```
10 X = PEEK (- 16151)
20 FOR Y = - 16153 TO - 16160 STEP-1
30 X = PEEK (Y)
40 NEXT Y
50 GOTO 20
```

WARNING: If the Head Position Motor is partially operative unplug Connector J2 before running the above program.

With the program running, check for pulses at pins 11 thru 14 of IC 4D. If the pulses are missing at any of the pins 11 thru 14, check for pulses at pins 3 through 6 of IC 4D. If pulses are present at pins 3 thru 6, check IC 4D. If the pulses are missing at any of the pins 3 thru 6, check the interface cable and Connector J1.

DISK DRIVE MOTOR MALFUNCTION

If the Disk Drive will not run, check for 11.5V at the emitter of Motor Control Transistor (Q3) on the Motor Speed Control board. If 11.5V is missing at the emitter of Q3, refer to the "Power Supply" section of this Troubleshooting guide. If 11.5V is present at the emitter of Q3, check for 11.2V at the emitter of Motor Control Transistor (Q4). If the voltage is missing at the emitter of Q4, check Resistor R9. If 11.2V is present at the emitter of Q4, check for approximately 6.9V at the collector of Q4. If the voltage is normal at the collector of Q4, check Drive Motor (M1) for an open winding.

If the voltage is missing at the collector of Q4, check for 0.7V at the base of Switch Transistor (Q2). If 0.7V is present at the base of Q2, check Transistors Q2, Q3 and Q4. If the voltage is missing at the base of Q2, check for a logic Low at pin 15 of Connector J1. If a logic Low is present at pin 15 of J1, check Transistor Q1, Diode CR5 and Resistor R7. If pin 15 of Connector J1 is not logic Low, check the interface cable and Connector J1.

If the Disk Drive spindle speed is not correct, perform the "Motor Speed Adjustment" procedure in the Adjustments section. If the spindle speed cannot be correctly adjusted, connect a scope to pin 1 of Speed Control IC (IC1) on the Motor Speed Control board and check for the 2V peak-to-peak tach signal shown in Figure 1. If the tach signal is missing at pin 1 of IC1, check for an open Drive Motor tach winding. Also check Diodes CR1 thru CR4 on the Motor Speed Control board. If the tach signal is present at pin 1 of IC1, check IC1 and associated components. Also check Switch Transistor (Q2) and Motor Control Transistor (Q4).

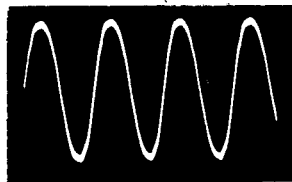


Figure 1

WILL NOT READ

Insert a blank diskette in the Disk Drive and close the door. Type in and run the following basic program:

```
10 X = PEEK (- 16151)
20 X = PEEK (- 16150)
30 X = PEEK (- 16148)
40 X = PEEK (- 16146)
50 X = PEEK (- 16145)
60 X = PEEK (- 16147)
70 GOTO 40
```

WARNING! Do not use a diskette containing important data when running this program. This program will write random data over any data already on the diskette.

Check for data pulses at pin 11 of IC 4B. If the data pulses are missing at pin 11 of IC 4B, check for pulses at pin 10 of IC 1B. If the pulses are present at pin 10 of IC 1B, check IC 4B. If the data pulses are missing at pin 10 of IC 1B, check the voltages and waveforms associated with IC 1B. If any voltages are abnormal or any waveforms are missing, check IC 1B and associated components. Also check the Read/Write head coils and Connector J3.

TROUBLESHOOTING (Continued)

WILL NOT WRITE

Verify that the write protect circuit is functioning properly by inserting a diskette that is not write protected. Check for a Low logic reading on pin 3 of IC 4B. If the logic reading is not Low, see the "Write Protect Does Not Function" section of this Troubleshooting guide.

Insert a blank diskette in the Disk Drive and close the door. Type in and run the program given in the "Will Not Read" section of this Troubleshooting guide.

WARNING! Do not use a diskette containing important data when running this program. The program will write random data over any data already on the diskette.

With the program running, check for pulses at pin 8 of IC 4B. If the pulses are missing at pin 8 of IC 4B, check for pulses at pin 9 of IC 4B. If pulses are present at pin 9 of 4B, check IC 4B. If the pulses are missing at pin 9 of IC 4B, check the interface cable and Connector J1. If the BWRITE REQ pulses are present at pin 9 of IC 4B, check for WRITE DATA pulses at pin 6 of IC 4B. If the pulses are missing at pin 6 of IC 4B, check for pulses at pin 5 of IC 4B. If the pulses are present at pin 5, check IC 4B.

If the WRITE DATA pulses are present at pin 6 of IC 4B, check for pulses at pins 1 and 5 of Write Amp IC (3A). If the pulses are missing at either pins 1 or 5, check IC 3A. If the pulses are present at both pins 1 and 5 of IC 3A, check Diodes CR1 and CR2. Also check the read/write head coils and Connector J3.

ERASE HEAD

Verify that the erase head is not open by checking for continuity between pins 2 and 3 of Plug P3. If the erase head checks good, type in and run the program given in the "Will Not Read" section of this Troubleshooting guide.

WARNING! Do not use a diskette containing important data when running this program. This program will write random data over any data already on the diskette.

Connect scope to pin 8 of IC 3A and set the time base to 5mSec. With the program running, check for approximately 1.0V peak-to-peak pulses. If the pulses are missing at pin 8 of IC 3A, check IC 3A. If the pulses are present at pin 8 of IC 3A, check for approximately 13.0V peak-to-peak pulses at the collector of Switch Transistor (Q2). If the pulses are missing at the collector of Q2, check Transistor Q2.

WRITE PROTECT DOES NOT FUNCTION

If a write protected disk is being written on, use the following procedure to check the write protect circuit. Insert a write protected diskette in the Disk Drive and close the door. Type in and run the program given in the "Will Not Read" section of this Troubleshooting guide. **WARNING!** Make sure that the diskette being used does not contain important data since this program will write random data over the data already on the diskette.

With the program running, check for a High logic reading on pin 3 of IC 4B. If pin 3 of IC 4B is logic High, the write protect circuit is working. If pin 3 of IC 4B is logic Low, check for a logic High on pin 2 of IC 4B. If pin 2 of IC 4B is logic High, check IC 4B. If pin 2 of IC 4B is logic Low, check for approximately 0V at the base of Transistor Q3. If the base of Q3 is approximately 0V, check Transistor Q3. If the base of Transistor Q3 is approximately 0.7V, check for a shorted Write Protect Detector Phototransistor.

If pin 3 of IC 4B is logic High when attempting to write on a non-write protected diskette, check for a logic Low on pin 2 of IC 4B. If pin 2 of IC 4B is logic Low, check IC 4B. If pin 2 of IC 4B is logic High, check Transistor Q3. If Transistor Q3 is good, check the Write Protect Detector and Resistor R36.

CSCS7-A
MODEL IIC
APPLE

LINE DEFINITIONS

BWRITE REQ	Buffered Write Request
ENABLE	Enable
READ DATA	Read Data
WRITE REQ	Write Request

Any Bar above any Alphabetical or numerical combination indicates line active in a low (0) state.

9 PARTS LIST AND DESCRIPTION

When ordering parts, state Model, Part Number, and Description

SEMICONDUCTORS (Select replacement for best results)

			REPLACEMENT DATA					
ITEM No.	TYPE No.	MFGR. PART No.	GENERAL ELECTRIC PART No.	NTE PART No.	ECG PART No.	RCA PART No.	WORKMAN PART No.	ZENITH PART No.
DISK DRIVE ANALOG BOARD								
CR1 thru CR5	1N4148		GE-514	NTE519	ECG519	SK3100/519	WEP925/519	103-131
Q1	2SB1080		GE-82	NTE159	ECG159	SK3466/159	WEP62/159	121-Z9003
Q2	2N3906		GE-123AP	NTE123AP	ECG123AP	SK3854/123AP	WEP736/123A	121-Z9000A
Q3	2N3904			NTE3470	ECG3470			
1B	MC3470P					SK3697		221-94
3A	CA3146E		74LS125A	NTE74LS125A	ECG74LS125A	SK74LS125A		HE-443-811
4B	HD74LS125AP			NTE2013	ECG2013	SK9093/2013		
4D	TD62003P							
DISK DRIVE MOTOR SPEED CONTROL BOARD								
CR1,CR2	1S1555		GE-300	NTE177	ECG177	SK9091/177	WEP1062/177	103-131
CR3 thru CR5	MA150		GE-514	NTE519	ECG519	SK3100/519	WEP925/519	103-131
Q1,Q2	2SC1815		GE-62	NTE85	ECG85	SK3124A/289A	WEP66/199	121-Z9065
Q3	2SA1015		GE-269	NTE290A	ECG290A	SK9132	WEP911/290A	121-Z9003*
Q4	2SB596-0		GE-250	NTE197	ECG197	SK3083/197	WEP757/197	121-988-03
IC1	CX065B							

* Lead configuration may vary from original.

WIRING DATA

Shielded Hook-up Wire	Use BELDEN No. 8401 or 8421 (Single-Conductor)
	8208 (Two-Conductor)
	9534 (Four-Conductor)
General-use Unshielded Hook-up Wire	Use BELDEN No. 8529 (Solid) Available in 13 Colors
	8522 (Stranded) Available in 13 Colors
75-Ohm Input Lead	Use BELDEN No. 8241

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

CAPACITORS

Items Not Listed Are Normally Available At Local Distributors.

ITEM No.	RATING	MFGR. PART No.
C7	DISK DRIVE ANALOG BOARD	
	330 NPO 50V 5%	

ITEM No.	RATING	MFGR. PART No.
C8	330 NPO 50V 5%	
C10	100 NPO 50V 5%	
C11	510 NPO 50V 5%	
C13	.0033 NPO 50V 5%	

CONTROLS (All wattages 1/2 watt, or less, unless listed)

ITEM NO.	FUNCTION	RESISTANCE	MFGR. PART NO.	NOTES
R28 R33	DISK DRIVE ANALOG BOARD			
	Threshold Pulse Width Duration	10K 10K	8418(1) 8418(1)	
VR1	DISK DRIVE MOTOR SPEED CONTROL BOARD Speed	20K		

(1) Number on unit.

RESISTORS (Power and Special)

ITEM No.	RATING	REPLACEMENT DATA		
		MFGR. PART No.	NTE PART No.	WORKMAN PART No.
R19 R22 R23 R30 R31 R32	DISK DRIVE ANALOG BOARD			
	634 1% 1/4W Metal Film			
	887 1% 1/4W Metal Film			
	887 1% 1/4W Metal Film			
	137 1% 1/4W Metal Film			
	137 1% 1/4W Metal Film			
R2 R10	DISK DRIVE MOTOR SPEED CONTROL BOARD			
	68K 1% 1/4W Metal Film 5100 3% 1/4W Metal Film		QW251	

COILS (RF-IF)

ITEM No.	FUNCTION	MFGR. PART No.
L1 L2	DISK DRIVE ANALOG BOARD	
	RF Choke RF Choke	

ITEM No.	FUNCTION	MFGR. PART No.
L3	Peaking	
L4	Peaking	
L5	Peaking	

APPLE
MODEL IIC

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

MISCELLANEOUS

ITEM No.	PART NAME	MFGR. PART No.	NOTES
LED1	LED		Busy, Red
M1	Motor		Drive
M2	Motor		Head Position
M3	Head		Read/Write, Erase
M4	Sensor		Write Protect
	PC Board		Analog Board
	PC Board		Motor Speed Control Board

CABINET & CABINET PARTS (When ordering specify model, chassis & color)

MECHANICAL PARTS LIST

Reference number assigned for parts location.

REF. NO.	PART NO.	DESCRIPTION
1		Door Assembly
2		Door Spring
3		Drive Belt
4		Hub Support
5		Hub Frame
6		Arm Support Assembly
7		Tension Pulley

REF. NO.	PART NO.	DESCRIPTION
8		Head Assembly
9		Eject Spring
10		Eject Plate
11		Carriage Stopper
12		Tension Spring
13		Stepper Pulley

DISK DRIVE LOGIC

PIN NO.	IC 4B	IC 4D
1	L(1)	H
2	L(1)	L
3	L(1)	L(2)
4	P	L(2)
5	P	L(2)
6	P	L(2)
7	L	P
8	P	L
9	P	H
10	L(1)	P
11	P	H(2)
12	P	H(2)
13	L	H(2)
14	H	H(2)
15		H
16		L

```

10 DS = CHR$(4)
20 PRINT DS; "OPEN SAMS"
30 PRINT DS; "WRITE SAMS"
40 FOR X = 1 TO 50
50 PRINT "THIS IS A TEST"
60 NEXT X
70 PRINT DS; "CLOSE"
80 GOTO 20

```

Logic Probe Display

L = Low

H = High

P = Pulse

* = Open (No light On)

- (1) Probe indicates H if diskette is write protected or Head Position Motor is operating.
- (2) Probe indicates P when Head Position Motor is operating.
- (3) Readings taken after pressing Space Bar on keyboard.
- (4) Probe indicates H when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (5) Probe indicates H when Caps Lock key is up.
- (6) Probe indicates P when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (7) Probe indicates P when Computer is in "Basic" mode.
- (8) Probe indicates L when the Control key is pressed.

Voltages, logic readings and waveforms taken on the Disk Drive while running the following program (with DOS 3.3) and during the period when the Head is not moving unless noted. An initialized diskette, with DOS 3.3 only (no other programs or data), was used in the Disk Drive. Note: Put the Caps Lock key in the down position.

MISCELLANEOUS ADJUSTMENTS

WARNING

It is possible for a defective Disk Drive to write on or erase information on a diskette even if the diskette has been write protected. Check a questionable Disk Drive by first using a diskette that contains programs that have been duplicated on another diskette. Do not leave the alignment diskette in the drive while checking voltages and waveforms unless so instructed in the alignment procedures. The test equipment may cause the disk drive circuits to erase sections of the alignment diskette even when the diskette is write protected with a write protect tab.

EQUIPMENT

Use a Disk Drive test program or Disk Drive Tester capable of turning the Disk Drive On, putting the Disk Drive in Read mode and moving the Head to any track. Use a Dysan Analog Alignment Diskette 208-10 when an alignment diskette is specified in the alignment procedures. Note: The Dysan Alignment Diskette has only alignment patterns on it and does not contain any alignment programs.

MOTOR SPEED ADJUSTMENT

Run the following program to keep the Disk Drive running continuously.

```
10 X = PEEK (- 16151): X = PEEK (- 16150)
```

Insert a diskette into the Disk Drive and close the door. Set the Disk Drive on its side so the strobe pattern on the spindle pulley is visible. Use a fluorescent light to view the strobe pattern. Use the outside pattern if a 60 cycle light is being used or the inside pattern if a 50 cycle light is being used. Adjust the Speed Control (VR1) until the strobe pattern appears to stand still.

RADIAL ALIGNMENT

Connect the channel 1 input of a scope to TP8 and the channel 2 input to TP9. Set the scope sweep time to 20mSec, vertical inputs to .2V range and AC input, mode switch to Add mode and one channel inverted. Insert the Alignment Diskette into the Disk Drive and close the door. Turn the Disk Drive On and set the Head to track 16. Observe the two lobes that appear on the scope (trigger the scope on the index burst that occurs at the beginning of the two lobes). The amplitude of the lobes should be within 70% of each other (See Figure 1). If the lobe amplitudes are not within 70% of each other, loosen the two phillips screws holding the Head Position Motor (M2) and rotate the motor until the two lobes are equal or within 70% of each other. Retighten the Head Position Motor screws and recheck the radial alignment by stepping the Head to track 39 and back to track 16, then step the Head to track 00 and back to track 16, checking the two lobes for proper amplitudes each time the Head is on track 16.



Figure 1

READ CIRCUIT ADJUSTMENT

Connect the channel 1 input of a scope to TP5 and channel 2 input to TP7. Set the scope to Add mode, sweep time to 2μSec vertical inputs to 2V range and trigger on channel 2. Turn the Disk Drive On and set the Drive to Read mode with the Head on Track 00 (to read the 125kHz pattern on the Alignment Diskette). Insert the Alignment Diskette in the Drive and close the door. Adjust the Threshold Control (R28) for MINIMUM jitter on the leading edges of the pulses and adjust the Pulse Width Duration Control (R33) for MINIMUM crossover distortion on the trailing edges of the pulses. (See Figures 2 and 3).

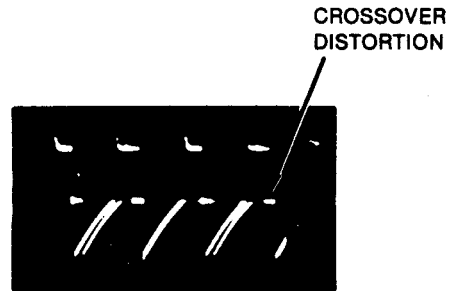


FIGURE 2

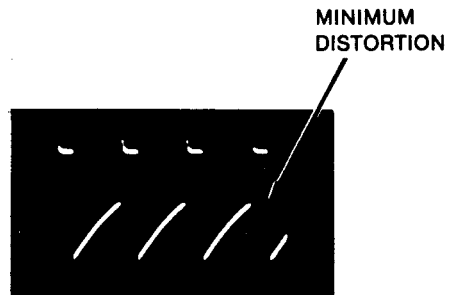


FIGURE 3

Note: The following procedures can also be used for the Read Circuit adjustment.

Turn the Computer On and type in and run the following Basic program.

```
10 X = PEEK (- 16151)
20 X = PEEK (- 16150)
30 X = PEEK (- 16148)
40 X = PEEK (- 16146)
```

The program will turn the Disk Drive On in Read mode. Insert the Alignment diskette into the Disk Drive and close the door. Manually set the Head back to track 00. Hook up the scope and adjust Controls R28 and R33 using the instructions given in the first procedure.

APPLE
MODEL IIC

MISCELLANEOUS ADJUSTMENTS (Continued)

AZIMUTH CHECK

Connect the channel 1 input of a scope to TP8 and the channel 2 input to TP9. Set the sweep time to .5mSec range, the vertical inputs to the .2V range and AC input and set the mode switch to add mode with one channel inverted. Insert the Alignment diskette into the Disk Drive and close the door. Turn the Disk Drive On and set the Head to track 34. A pattern of four vertical bars should appear on the scope (trigger the scope on the index burst that occurs at the beginning of the bars). The correct azimuth is indicated when the two inside bars are longer than the two outside bars. See Figure 4.



Figure 4

TRACK 00 STOP ADJUSTMENT

Connect the input of a scope to TP9. Set the scope vertical input to the .5V range, AC input and the sweep time to 10 μ Sec. Insert the Alignment Diskette into the Disk Drive and close the door. Turn the Disk Drive On and set the Head to track 00. Verify that the Head is on track 00 by checking for a .5V peak to peak, 125kHz signal at TP9. Loosen the phillips screw holding the track 00 stop. Adjust the Stop for a clearance of .005" between the Stop and the raised cam and retighten the track 00 Stop screw. See Figure 5.



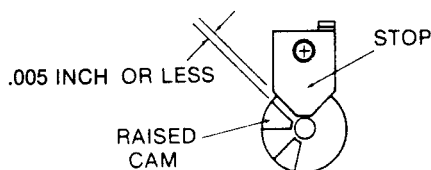


Figure 5

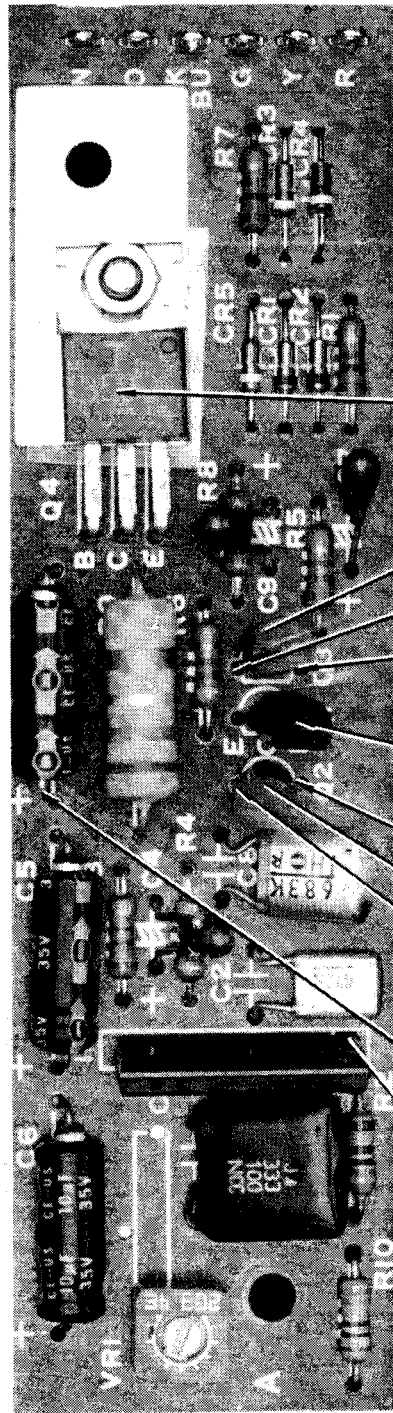

IC1
E C B Q2
E C B Q1
B E C Q3
Q4
11.6V(A)

ARROWS ON IC'S INDICATE PIN 1 UNLESS NOTED.

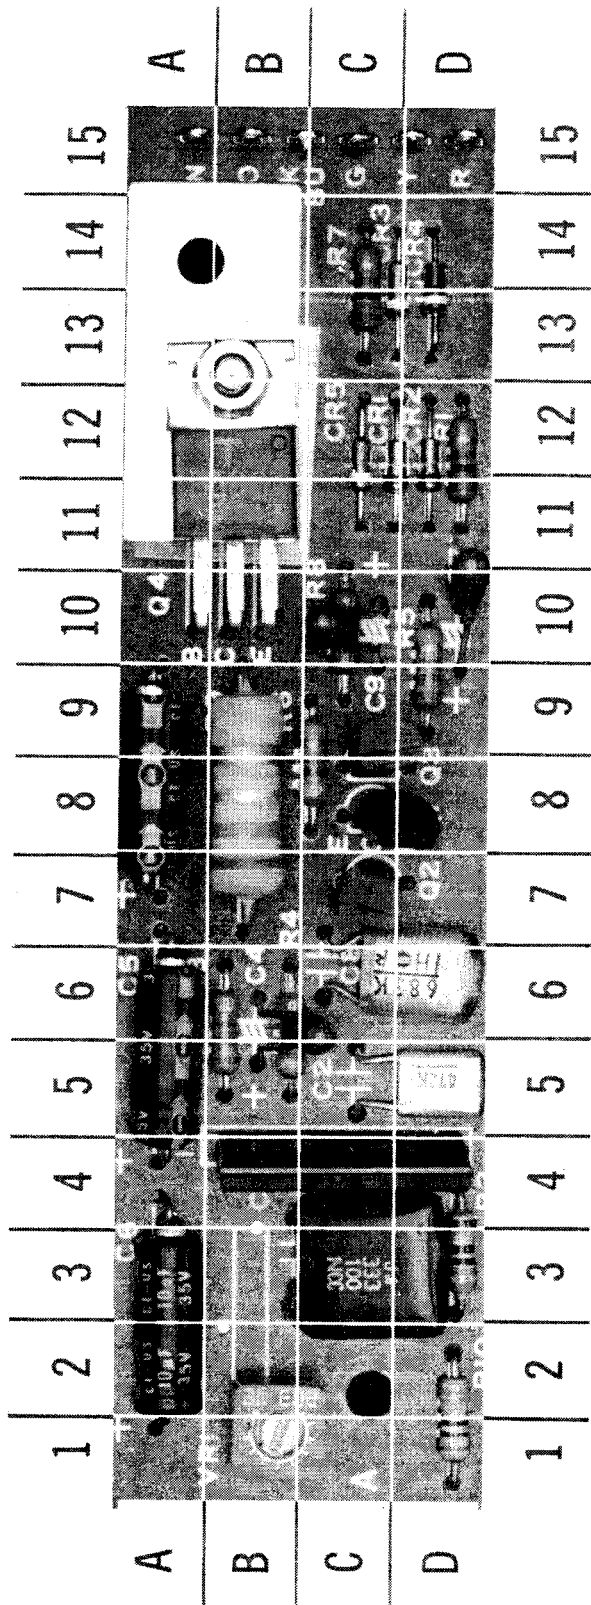


DISK DRIVE MOTOR SPEED CONTROL BOARD GridTrace LOCATION GUIDE


C1	A-8	C8	IC1	C-4	R3	B-6	R10	D-2
C2	D-5	C9	Q1	C-8	R4	B-6	VR1	B-1
C3	C-3	CR1	Q2	C-7	R5	D-10		
C4	B-6	CR2	Q3	C-9	R6	C-8		
C5	A-6	CR3	Q4	B-11	R7	C-14		
C6	A-3	CR4	D-14	D-12	R8	C-8		
C7	D-10	CR5	C-12	D-3	R9	B-8		

A Howard W. Sams GRIDTRACE™ Photo

DISK DRIVE MOTOR SPEED CONTROL BOARD

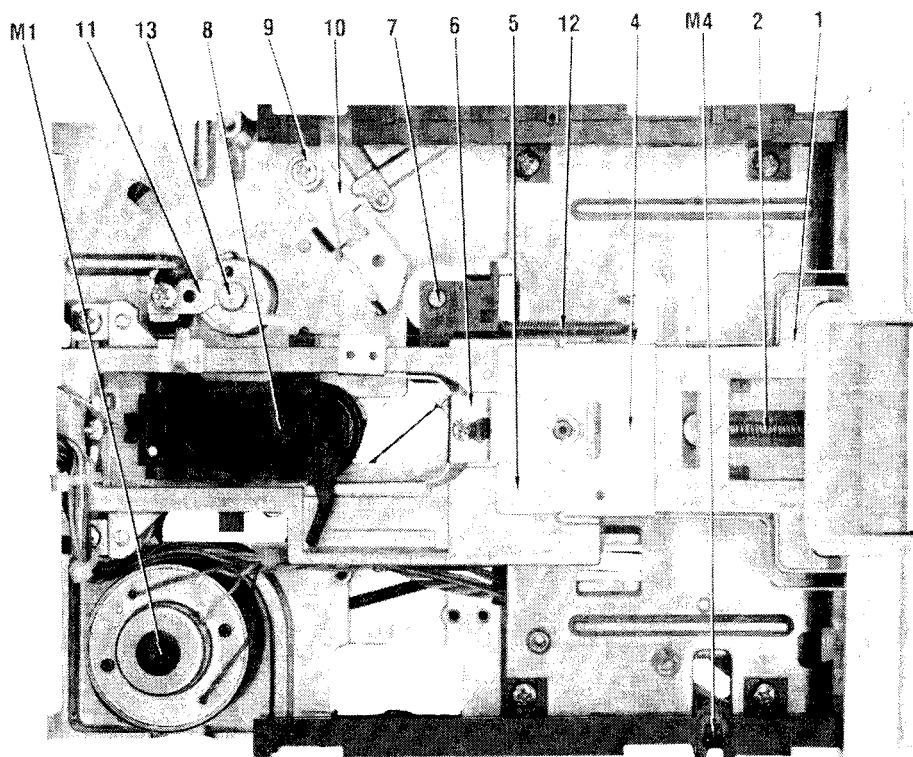

MECHANICAL-TOP VIEW

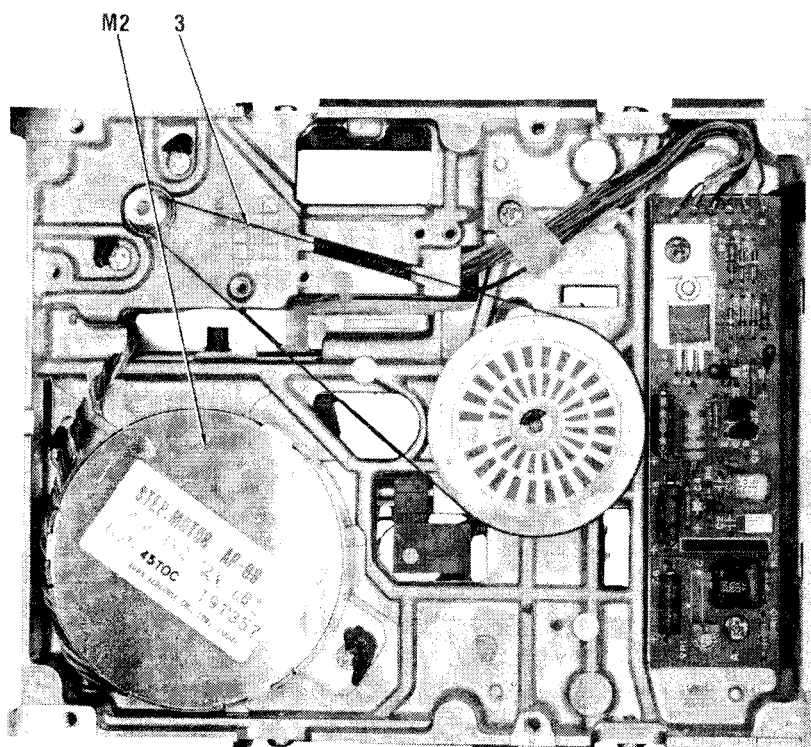

MECHANICAL-BOTTOM VIEW

CSCS7-B
APPLE
MODEL IIc

**KEYBOARD, SYSTEM BOARD
POWER SUPPLY**

See Folder CSCS7

DISK DRIVE

See Folder CSCS7-A

CSCS7-B
APPLE
MODEL IIc

INDEX

	Page		Page
Disassembly Instructions	13	Photos (Continued)	
GridTrace Location Guide		Monitor Power Supply Board	12
Monitor Board	4	Resistance Measurements	2
Miscellaneous Adjustments	3	Schematics	
Parts List		Terminal Guides and Notes	2
Monitor	6,7,8	Monitor	2
Photos		Servicing in the Field	13
Cabinet View	13	Troubleshooting	5
CRT Socket Board	11	Troubleshooting Aid	4
Monitor Board	9,10		

SAMS™

Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

© 1985 Howard W. Sams & Co., Inc.

4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

Printed in U.S. of America.

85CS14956

DATE 9-85

MISCELLANEOUS ADJUSTMENTS

ALIGNMENT TOOLS

GC ELECTRONICS

L503 5000, 5009, 8276
L505 9440, 8282, 8606

NOTE: Pattern generator with 1Vp-p into 75 ohms (VTR Standard) output used with appropriate pattern.

INITIAL MONITOR TEST

Connect a crosshatch generator to the Video In Jack. Turn the Monitor On and adjust the Brightness and Contrast controls for the best display. Check the adjustment of the Vert Hold, Horiz Hold, Vert Lin, Vert Size and Focus controls. If any of these controls produce erratic operation, clean that control with contact cleaner and recheck.

ADJUSTMENTS

NOTE: Connect a crosshatch generator to the Video In Jack for the following adjustments.

FOCUS ADJUSTMENT

Adjust the Focus Control (VR502) for sharp, well defined lines on the display.

VERT AND HORIZ HOLD ADJUSTMENT

Adjust the Vert Hold Control (VR401) and Horiz Hold Control (VR501) for the most stable display.

VERT SIZE ADJUSTMENT

Adjust the Vert Size Control (VR403) for the desired height on the display.

VERT LIN ADJUSTMENT

Adjust the Vert Lin Control (VR402) for even spacing between the vertical lines on the display.

VOLTAGE REGULATOR ADJUSTMENT

Connect a voltmeter to the collector of Voltage Regulator Transistor (Q701). Adjust the Voltage Regulator Control (VR701) for 12.0V.

SUB BRIGHTNESS ADJUSTMENT

Connect a crosshatch generator to the Video In Jack. Set the Brightness and Contrast Controls to Maximum clockwise position.

Adjust the Sub Brightness Control (VR503) for Maximum brightness without retrace lines.

CENTERING ADJUSTMENT

Center the CRT display by adjusting the two magnetic centering rings located on the deflection yoke rear cover.

HORIZ LIN ADJUSTMENT

Adjust the Horiz Lin Coil (L503) for even spacing between the horizontal lines on the display.

WIDTH ADJUSTMENT

Adjust the Width Coil (L505) for the desired width on the display.

SUB CONTRAST

Set the Brightness and Contrast Controls to Maximum clockwise position. Adjust the Sub Contrast Control for best display with no distortion.

CSCS7-B
APPLE
MODEL IIC

TROUBLESHOOTING AID

Note: Waveforms taken with triggered scope, Keyed-Rainbow generator. Schematic voltages measured with digital meter, no signal. Controls adjusted for normal operation.

PICTURE OR SOUND

NO PIC, NO RASTER: Check AC power supply, sources generated from Horizontal Output Transformer (T502) and Video circuit. Refer to "Troubleshooting" Power Supply, Video and Horizontal circuits.

NO PIC, HAS RASTER: Refer to "Troubleshooting" Video circuit.

LOW OR EXCESSIVE BRIGHTNESS: Check Video and Luminance circuits. Refer to "Troubleshooting" Video circuit.

SWEEP

NO RASTER: Check HV Rectifier, Rectifiers D20 and D21 and Horizontal circuit. Refer to "Troubleshooting" Horizontal circuit.

NO VERT DEFLECTION: Refer to "Troubleshooting" Vertical circuit.

POOR VERT LIN OR FOLDOVER: Refer to "Troubleshooting" Vertical circuit.

POOR HORIZ LIN OR FOLDOVER: Refer to "Troubleshooting" Horizontal circuit.

NARROW PICTURE: Refer to "Troubleshooting" Horizontal circuit.

VERT OFF FREQUENCY: Refer to "Troubleshooting" Vertical circuit.

HORIZ OFF FREQUENCY: Refer to "Troubleshooting" Horizontal circuit.

SYNC

NO VERT/HORIZ SYNC: Refer to "Troubleshooting" Sync circuit.

MONITOR BOARD GridTrace LOCATION GUIDE

C101	F-3	C516	I-13	P4	A-11	R403	I-5	VR501	G-4
C102	E-4	C517	F-8	P5	A-10	R404	H-7	VR502	A-12
C103	C-4	C518	J-9	P6	H-8	R405	H-5	VR503	H-9
C104	B-5	C701	A-3	P7	A-11	R406	I-5	VR504	K-10
C105	C-6	C702	D-1	Q11	A-9	R407	J-7	VR701	D-1
C106	D-6	C703	A-2	Q12	B-8	R408	H-7		
C107	A-7	C704	G-3	Q13	A-5	R409	I-8		
C108	A-9	D10	C-7	Q14	C-6	R410	G-7		
C109	B-7	D11	C-8	Q15	C-5	R411	G-7		
C110	B-9	D12	G-6	Q16	E-3	R412	F-7		
C111	C-4	D13	F-8	Q17	D-4	R413	H-8		
C401	I-8	D14	F-13	Q18	D-12	R501	D-7		
C402	I-8	D15	F-13	R01	A-10	R502	F-4		
C403	J-7	D16	J-11	R101	J-12	R503	F-5		
C404	I-6	D17	G-9	R102	D-4	R504	F-5		
C405	I-5	D18	G-9	R103	E-4	R505	E-7		
C406	J-6	D19	F-8	R104	C-4	R506	D-9		
C407	I-7	D20	I-13	R105	C-5	R507	I-12		
C408	H-6	D21	H-9	R106	C-5	R508	I-20		
C409	G-8	D22	C-13	R107	B-4	R510	C-12		
C410	H-8	D701	E-2	R108	B-4	R511	D-11		
C411	H-5	D702	F-2	R109	C-5	R512	C-13		
C412	G-5	D703	F-2	R110	A-6	R513	F-8		
C413	G-6	D704	F-1	R111	B-6	R514	I-12		
C501	D-6	F701	H-3	R112	A-6	R515	G-13		
C502	D-7	IC11	H-6	R113	A-9	R516	G-9		
C503	D-7	IC12	E-5	R114	B-9	R517	H-9		
C504	E-5	IC701	B-2	R115	B-7	R518	J-10		
C505	E-5	J1	K-11	R116	B-6	R519	D-9		
C506	F-5	L101	C-3	R117	C-7	R701	B-1		
C507	E-5	L102	A-5	R118	B-8	R702	C-1		
C508	F-7	L103	B-8	R119	D-4	R703	E-1		
C509	E-6	L501	A-4	R120	C-4	R704	C-2		
C510	D-10	L502	E-9	R121	D-5	T2A	G-1		
C511	E-12	L503	B-13	R123	B-10	VR101	F-4		
C513	I-10	L505	C-11	R124	B-7	VR401	K-6		
C514	B-10	P2	G-2	R401	I-8	VR402	I-4		
C515	A-11	P3	D-2	R402	J-8	VR403	K-8		

TROUBLESHOOTING

POWER SUPPLY

Check the AC Line Fuse (F771) and the DC Fuse (F701). If Fuse F771 is open, check Diodes D701 thru D704, Capacitor C771 and Electrolytic C701 for possible shorts. Also check Power Transformer (T2) for shorted windings. If Fuse F701 is open, check Electrolytics C704 and C412 for shorts. Also check Electrolytic C514 in the Horizontal Sweep Circuit for a possible short. If both fuses are good, check for 18.8V DC at the emitter of Voltage Regulator Transistor (Q701). If 18.8V is missing at the emitter of Q701, check for an open Diode D701 thru D704, an open Power Transformer T2 winding or an open Line Choke L771. Also check Power Switch SW1 and the power cord.

If the 18.8V is present at the emitter of Q701, check for 12V at the collector of Q701. If the voltage is missing or incorrect at the collector of Regulator Transistor Q701, check Transistor Q701, Resistor R705, Error Amplifier (IC701) and associated components. If 12V is present at the Collector of Q701, check Resistor R405 and Choke L101.

HORIZONTAL

If there is no high voltage, inject a horizontal drive signal at the base of Horizontal Output Transistor (Q18). If the high voltage returns, check Horizontal Driver Transformer (T501), Horizontal Processor (IC12), Resistors R505 and R506. Also check other components associated with the Horizontal Driver circuit and the Horizontal Processor IC. If the high voltage does not return when a horizontal drive signal is injected at the base of Horizontal Output Transistor (Q18), check Q18, Horizontal Output Transformer (T502), Deflection Yoke (DY1) and Diodes D14, D15, D17 and D18. Also check Horizontal Linearity Coil (L503), Width Coil (L505), Capacitors C511 and C516, Electrolytics C513, C514, C515, and C517. Check for possible shorts at the outputs of Diodes D20 and D21 that could load down the Horizontal Output Transformer.

Poor horizontal linearity or foldover problems may be caused by Capacitor C511, Electrolytics C514 or C515, Deflection Yoke DY1, Horizontal Linearity Coil L503 or Width Coil L505. Also check Resistor R510, R511 and R512 and Diode D22. If the horizontal sweep is off frequency, check the adjustment of the Horizontal Hold Control (VR501). If horizontal sync cannot be obtained with the Horizontal Hold Control, check the Horizontal Processor (IC12) and its associated components. If the monitor has a narrow raster, check the 11.8V source in the power supply. If the 11.8V source is normal, check the waveform at the base of the Horizontal Output Transistor (Q18). If the drive waveform at the base of Q18 has insufficient amplitude, check the voltages on the Horizontal Processor IC12. Also check Capacitors C501, C502, C503 and C509 in the Horizontal Drive circuit. If the waveform at the base of the Horizontal Output Transistor is normal, check Resistors R510 and R511, Coils L503 and L505 and Electrolytic C515 in the horizontal yoke circuit.

VIDEO

Inject a video signal at the Video Input Jack (J1) and check the waveform at the emitter of the Video Preamplifier Transistor (Q16). If the waveform is missing at the emitter of Q16, check Resistor R103, Capacitor C101, Electrolytic C102 and Transistor Q16. If the waveform is present at the emitter of Q16, check the waveform at the base of Video

Amplifier Transistor (Q13). If the waveform is missing at the base of Q13, check Video Amplifier Transistor (Q15), Resistors R104, R106, R108 and R109 and Electrolytic C104. If the waveform is present at the base of Transistor Q13, check the waveform at the base of Video Driver Transistor (Q11). If the video signal is missing at the base of Q11, check Transistor Q13, Resistors R110, R112 and R113, Electrolytics C107 and C108, Contrast Control (VR1) and Horizontal Blanking Transistor (Q12).

If the video waveform is present at the base of Q11, check the waveform at the base of Video Output Transistor (Q19) on the CRT Board. If the waveform is missing on the base of Q19, check Transistor Q11 and Resistor R114. If the waveform is present at the base of Q19, check the waveform at pin 2 of the CRT. If the video signal is missing at pin 2 of the CRT, check Transistor Q19, Resistors R151, R153 and R157, Coil L151, and Electrolytic C151. If the video signal is present at pin 2 of the CRT, check the voltages on pins 5, 6 and 7 of the CRT. If all voltages on the CRT are normal, check the CRT. If the monitor has low brightness or excessive brightness, check the voltages on Transistors Q11 and Q19.

SYNC

If there is no horizontal or vertical sync, check the composite video waveform at pin 1 of Horizontal Processor (IC12). If the waveform is missing at pin 1 of IC12, check for the composite video signal at the base of Sync Amplifier Transistor (Q17). If the composite video signal is present at the base of Q17, check Transistor Q17, Resistors R120 and R121 and Electrolytic C111. If the composite video signal is missing at the base of Q17, check Resistor R119 and Transistor Q16. If the composite signal is present at pin 1 of the Horizontal Processor IC12, check IC12 by substitution.

If there is no horizontal sync, check Horizontal Processor IC12 and its associated components. If there is no vertical sync, check for vertical sync pulses at pin 2 of IC12. If the vertical sync pulses are missing at pin 2 of IC12, check IC12. If there are vertical pulses present at pin 2 of IC12, check for vertical sync pulses at pin 1 of the Vertical Processor (IC11). If the vertical sync pulses at pin 1 of IC11 are missing or have low amplitude, check Resistors R401 and R402, Capacitors C401, C402 and C403. If the vertical sync pulses are normal at pin 1 of Vertical Processor IC11, check IC11 by substitution.

VERTICAL

If there is no vertical sweep, check the waveform at pin 8 of Vertical Processor (IC11). If the vertical sweep signal is present at pin 8 of IC11, check Electrolytic C409 and Deflection Yoke (DY1). If the vertical sweep signal is missing at pin 8 of IC11, check Vertical Processor IC11 and associated components. Poor vertical linearity or foldover may be caused by a defective component in the vertical feedback circuit. Check Resistors R404, R406, R407, R408 and R409, Controls VR402 and VR403 and Electrolytics C404, C406, C407, C408, C411 and Capacitor C410. If the Vertical sweep is off frequency, check Vertical Hold Control (VR401), Resistor R403 and Electrolytic C404. If these components check good, check IC11 by substitution. If vertical retrace lines appear in the raster, check Resistors R411 and R412, Diodes D13 and D19 and Capacitor C152 on the CRT Board.

9 PARTS LIST AND DESCRIPTION

When ordering parts, state Model, Part Number, and Description

SEMICONDUCTORS (Select replacement for best results)

ITEM No.	TYPE No.	MFG. PART No.	REPLACEMENT DATA					
			GENERAL ELECTRIC PART No.	NTE PART No.	ECG PART No.	RCA PART No.	WORKMAN PART No.	ZENITH PART No.
D10	3.9B2		GEZD-3.9	NTE5007A	ECG5007A	SK3A9/5007A	WEP1407/5007	
D11								
D12	G18410							
D13								
D14 thru	G18415							
D16								
D17,D18	G18419							
D19								
D20	G18337							
D21	G18419							
D22	G18410							
D701 thru	G2DG1							
D704								
IC11	AN5763							
IC12	AN5753							
IC701	L123CB		GEIC-260	NTE923D	ECG923D	SK3165/923D	WEP2331/923D	221-Z9020
Q11	2SC829B		GE-20*	NTE85	ECG85	SK3122	WEP829	121-Z9021
Q12	2SC828R		GE-61	NTE85	ECG85	SK3931/90	WEP828	121-972
Q13	2SC829B		GE-20*	NTE85	ECG85	SK3122	WEP829	121-Z9021
Q14	2SC828R		GE-61	NTE85	ECG85	SK3931/90	WEP828	121-972
Q15,Q16	2SC829B		GE-20*	NTE85	ECG85	SK3122	WEP829	121-Z9021
Q17	2SC828R		GE-61	NTE85	ECG85	SK3931/90	WEP828	121-972
Q18	BU406			NTE379	ECG379	SK9085/379	WEP379/379	121-Z9111
Q19	2SC1360A		GE-62	NTE199	ECG199	SK3132	WEP66/199	121-972
Q701	BD534L		GE-69A	NTE153	ECG153	SK3274/153	WEP746/153	121-988-03

* Lead configuration may vary from original.

WIRING DATA

High Voltage Lead	Use BELDEN No. 8869 (17 KV) or 8868 (24 KV)
Shielded Hook-up Wire	Use BELDEN No. 8401 or 8421 (Single-Conductor) 8208 (Two-Conductor)
General-use Unshielded Hook-up Wire	Use BELDEN No. 8529 (Solid) Available in 13 Colors 8522 (Stranded) Available in 13 Colors
75-Ohm Tuner Input Lead	Use BELDEN No. 8241

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

ELECTROLYTIC CAPACITORS Items Not Listed Are Normally Available At Local Distributors.

ITEM No.	RATING	MFGR. PART No.
C102	47 16V NP	
C107	47 16V NP	

ITEM No.	RATING	MFGR. PART No.
C108	10 16V NP	
C515	4 25V NP	

CAPACITORS Items Not Listed Are Normally Available At Local Distributors.

ITEM No.	RATING	MFGR. PART No.
C101	22 N220 50V	

ITEM No.	RATING	MFGR. PART No.
C502	33 NPO 500V 5%	

CONTROLS (All wattages 1/2 watt, or less, unless listed)

ITEM NO.	FUNCTION	RESISTANCE	MFGR. PART NO.	NOTES
VR1	Contrast	500		
VR101	Sub Contrast	500		
VR401	Vert Hold	100K		
VR402	Vert Linearity	10K		
VR403	Vert Height (Size)	50K		
VR501	Horiz Hold	500		
VR502	Focus	2M		
VR503	Sub Brightness	200K		
VR504	Brightness	200K		
VR701	Voltage Regulator	1000		

APPLE
MODEL IIC

RESISTORS (Power and Special)

ITEM No.	RATING	REPLACEMENT DATA		
		MFGR. PART No.	NTE PART No.	WORKMAN PART No.
R404	6.8 2% 1/4W Metal Film		QW6D8	22-2246
R405	6.8 2% 1/4W Metal Film		QW6D8	
R408	1.1 2% 1/4W Metal Film		QW1D1	
R504	2700 2% 1/4W Metal Film		QW227	
R507	6.8 2% 1/4W Metal Film		QW6D8	
R516	6.8 2% 1/4W Metal Film		QW6D8	
R705	27 5% 10W WW		10W027	

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

COILS (RF-IF)

ITEM No.	FUNCTION	MFGR. PART No.
L101	RF Choke	
L102	RF Choke	
L103	RF Choke	

ITEM No.	FUNCTION	MFGR. PART No.
L151	RF Choke	
L771	Line Filter	

COILS & TRANSFORMERS

ITEM No.	FUNCTION	MFGR. PART No.	OTHER IDENTIFICATION	NOTES
DY1	Yoke Horiz 156uH	TMD-2728(1)		
L502	90° Vert 9.9mH	HW-440(1)		
L503	Width	2449-717-0109(1)		
T2	Horiz Linearity	2869-239-0104(1)		
T501	Power	027-0108-DD156(1)		
T502	Driver	TMF-2222(1)		
	Horiz Output			

For SAFETY use only equivalent replacement part.

(1) Number on unit.


FUSE DEVICES

ITEM NO.	DESCRIPTION	MFGR. PART NO.		NOTES
		DEVICE	HOLDER	
F701	1.5A @ 250V			
F771	Fast-Acting			
	750mA @ 250V			
	Fast-Acting			

MISCELLANEOUS

ITEM No.	PART NAME	MFGR. PART No.	NOTES
D01	LED		Power, Green
L501	Ferrite Bead		
L502	Ferrite Bead		
M1	Spark Gap		
Thru			
M5			
P1	Cord		AC Power
SG1	Lamp		Neon
SW1	Switch		Power
V1	CRT		C10M42P31(D)-ARF-SB
	PC Board		Main
	PC Board		Power Supply
	PC Board		CRT Socket

CABINET & CABINET PARTS (When ordering specify model, chassis & color)

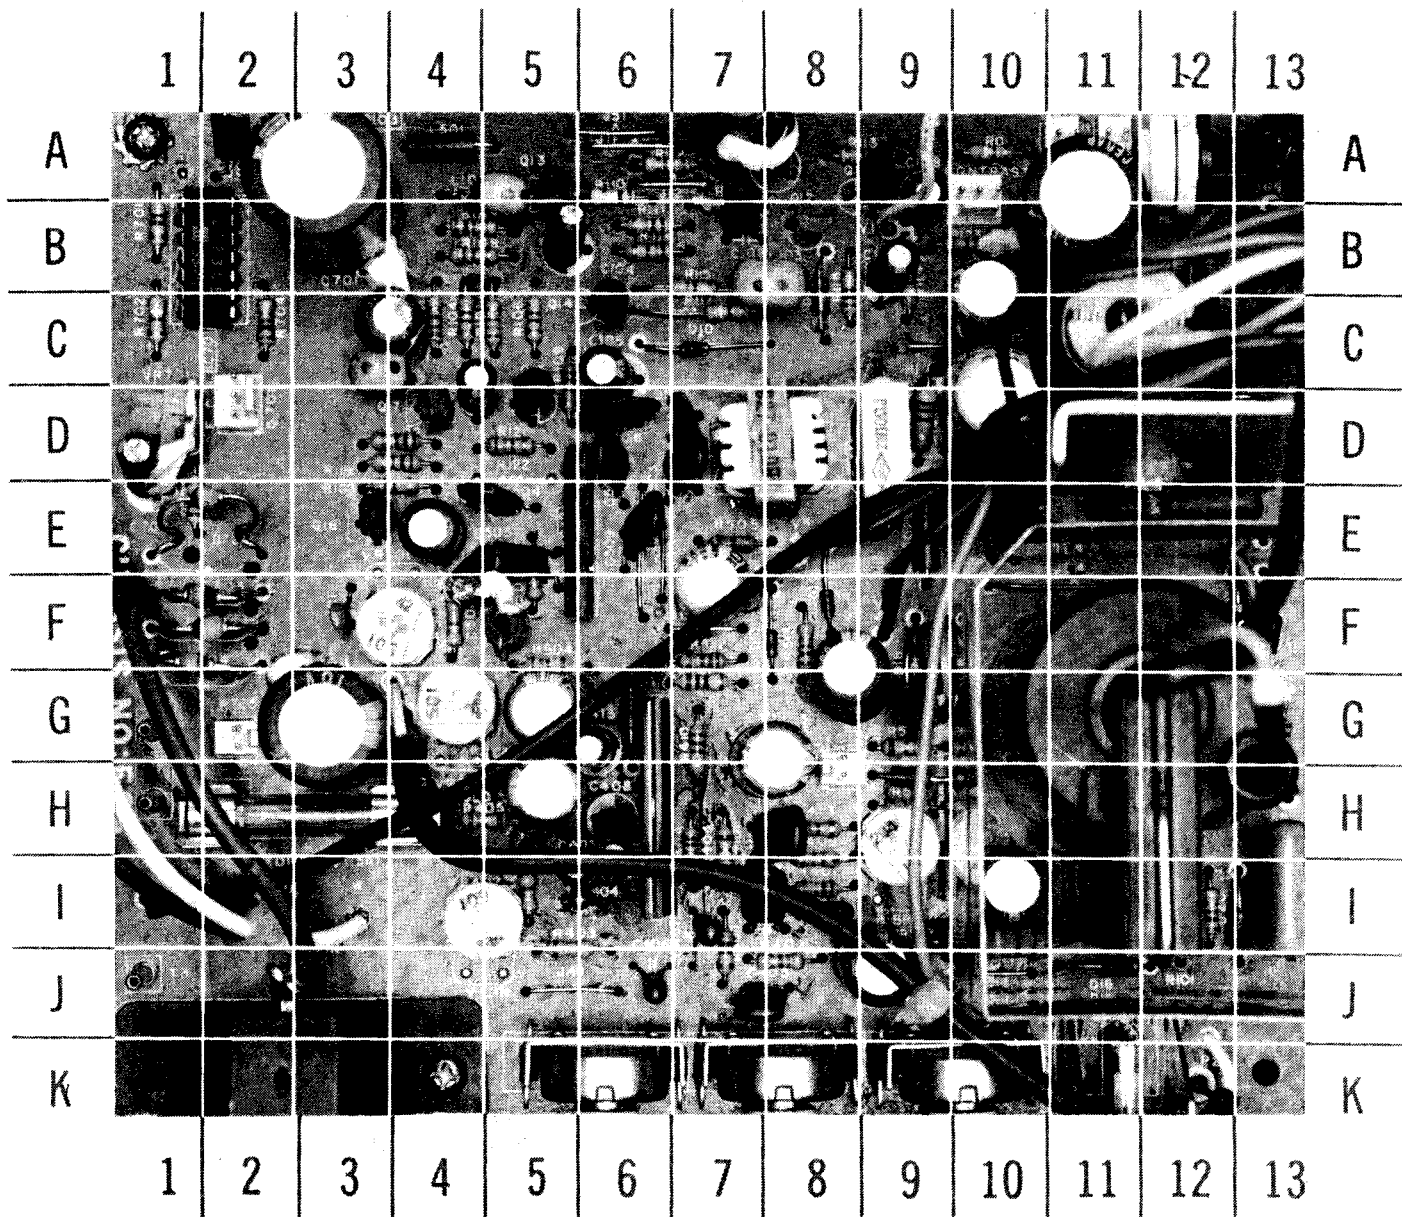


APPLE
MODEL IIC

A Howard W. Sams GRIDTRACEM Photo


MONITOR BOARD

MONITOR BOARD

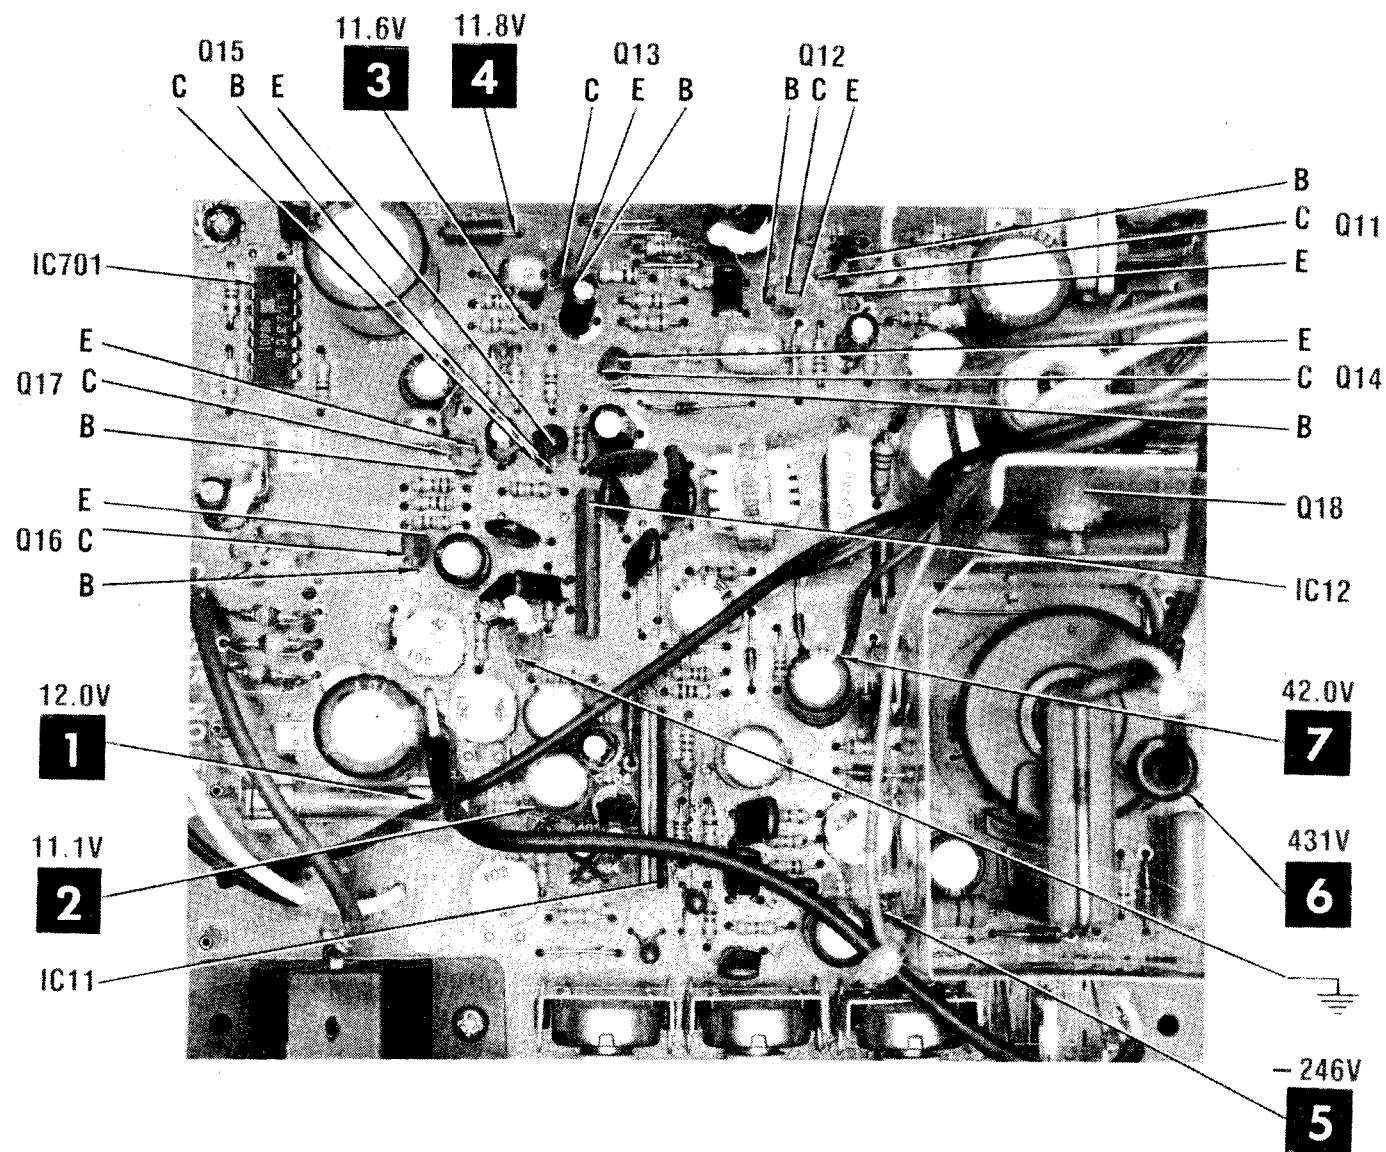
A Howard W. Sams **CIRCUITRACE** Photo

ARROWS ON IC'S INDICATE PIN 1 UNLESS NOTED



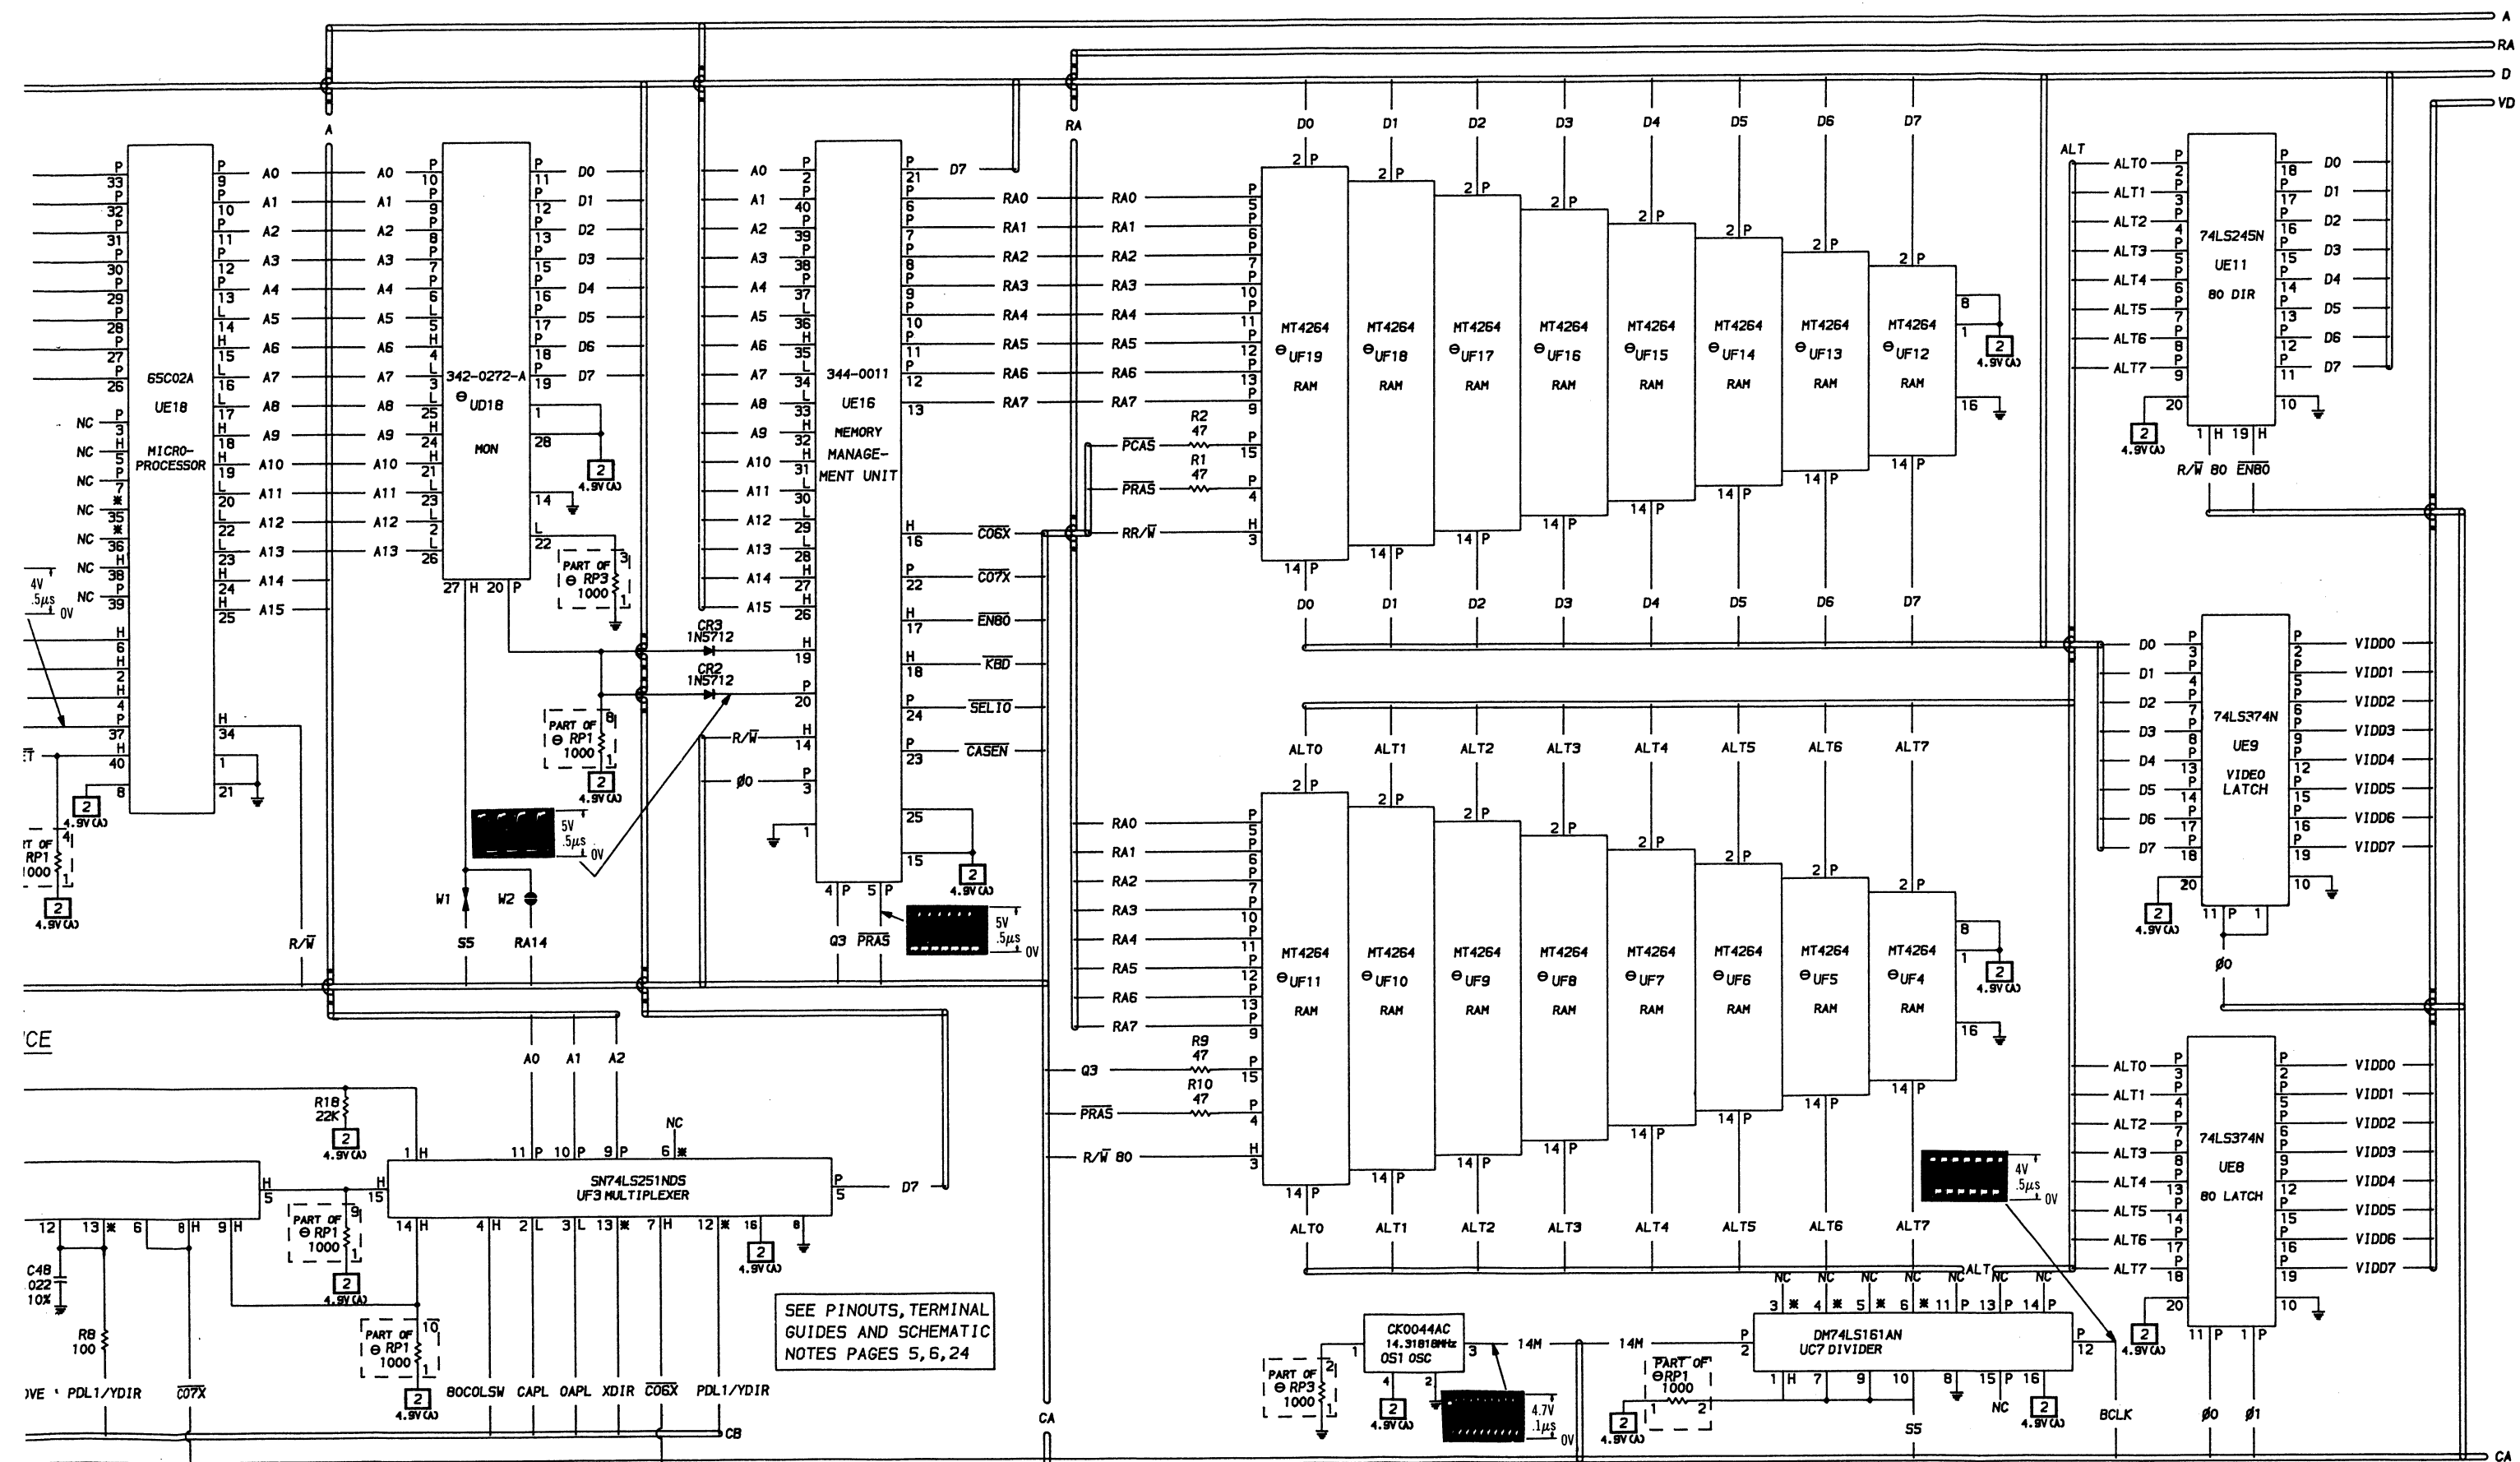

APPLE
SYSTEM BOARD MODEL IIc

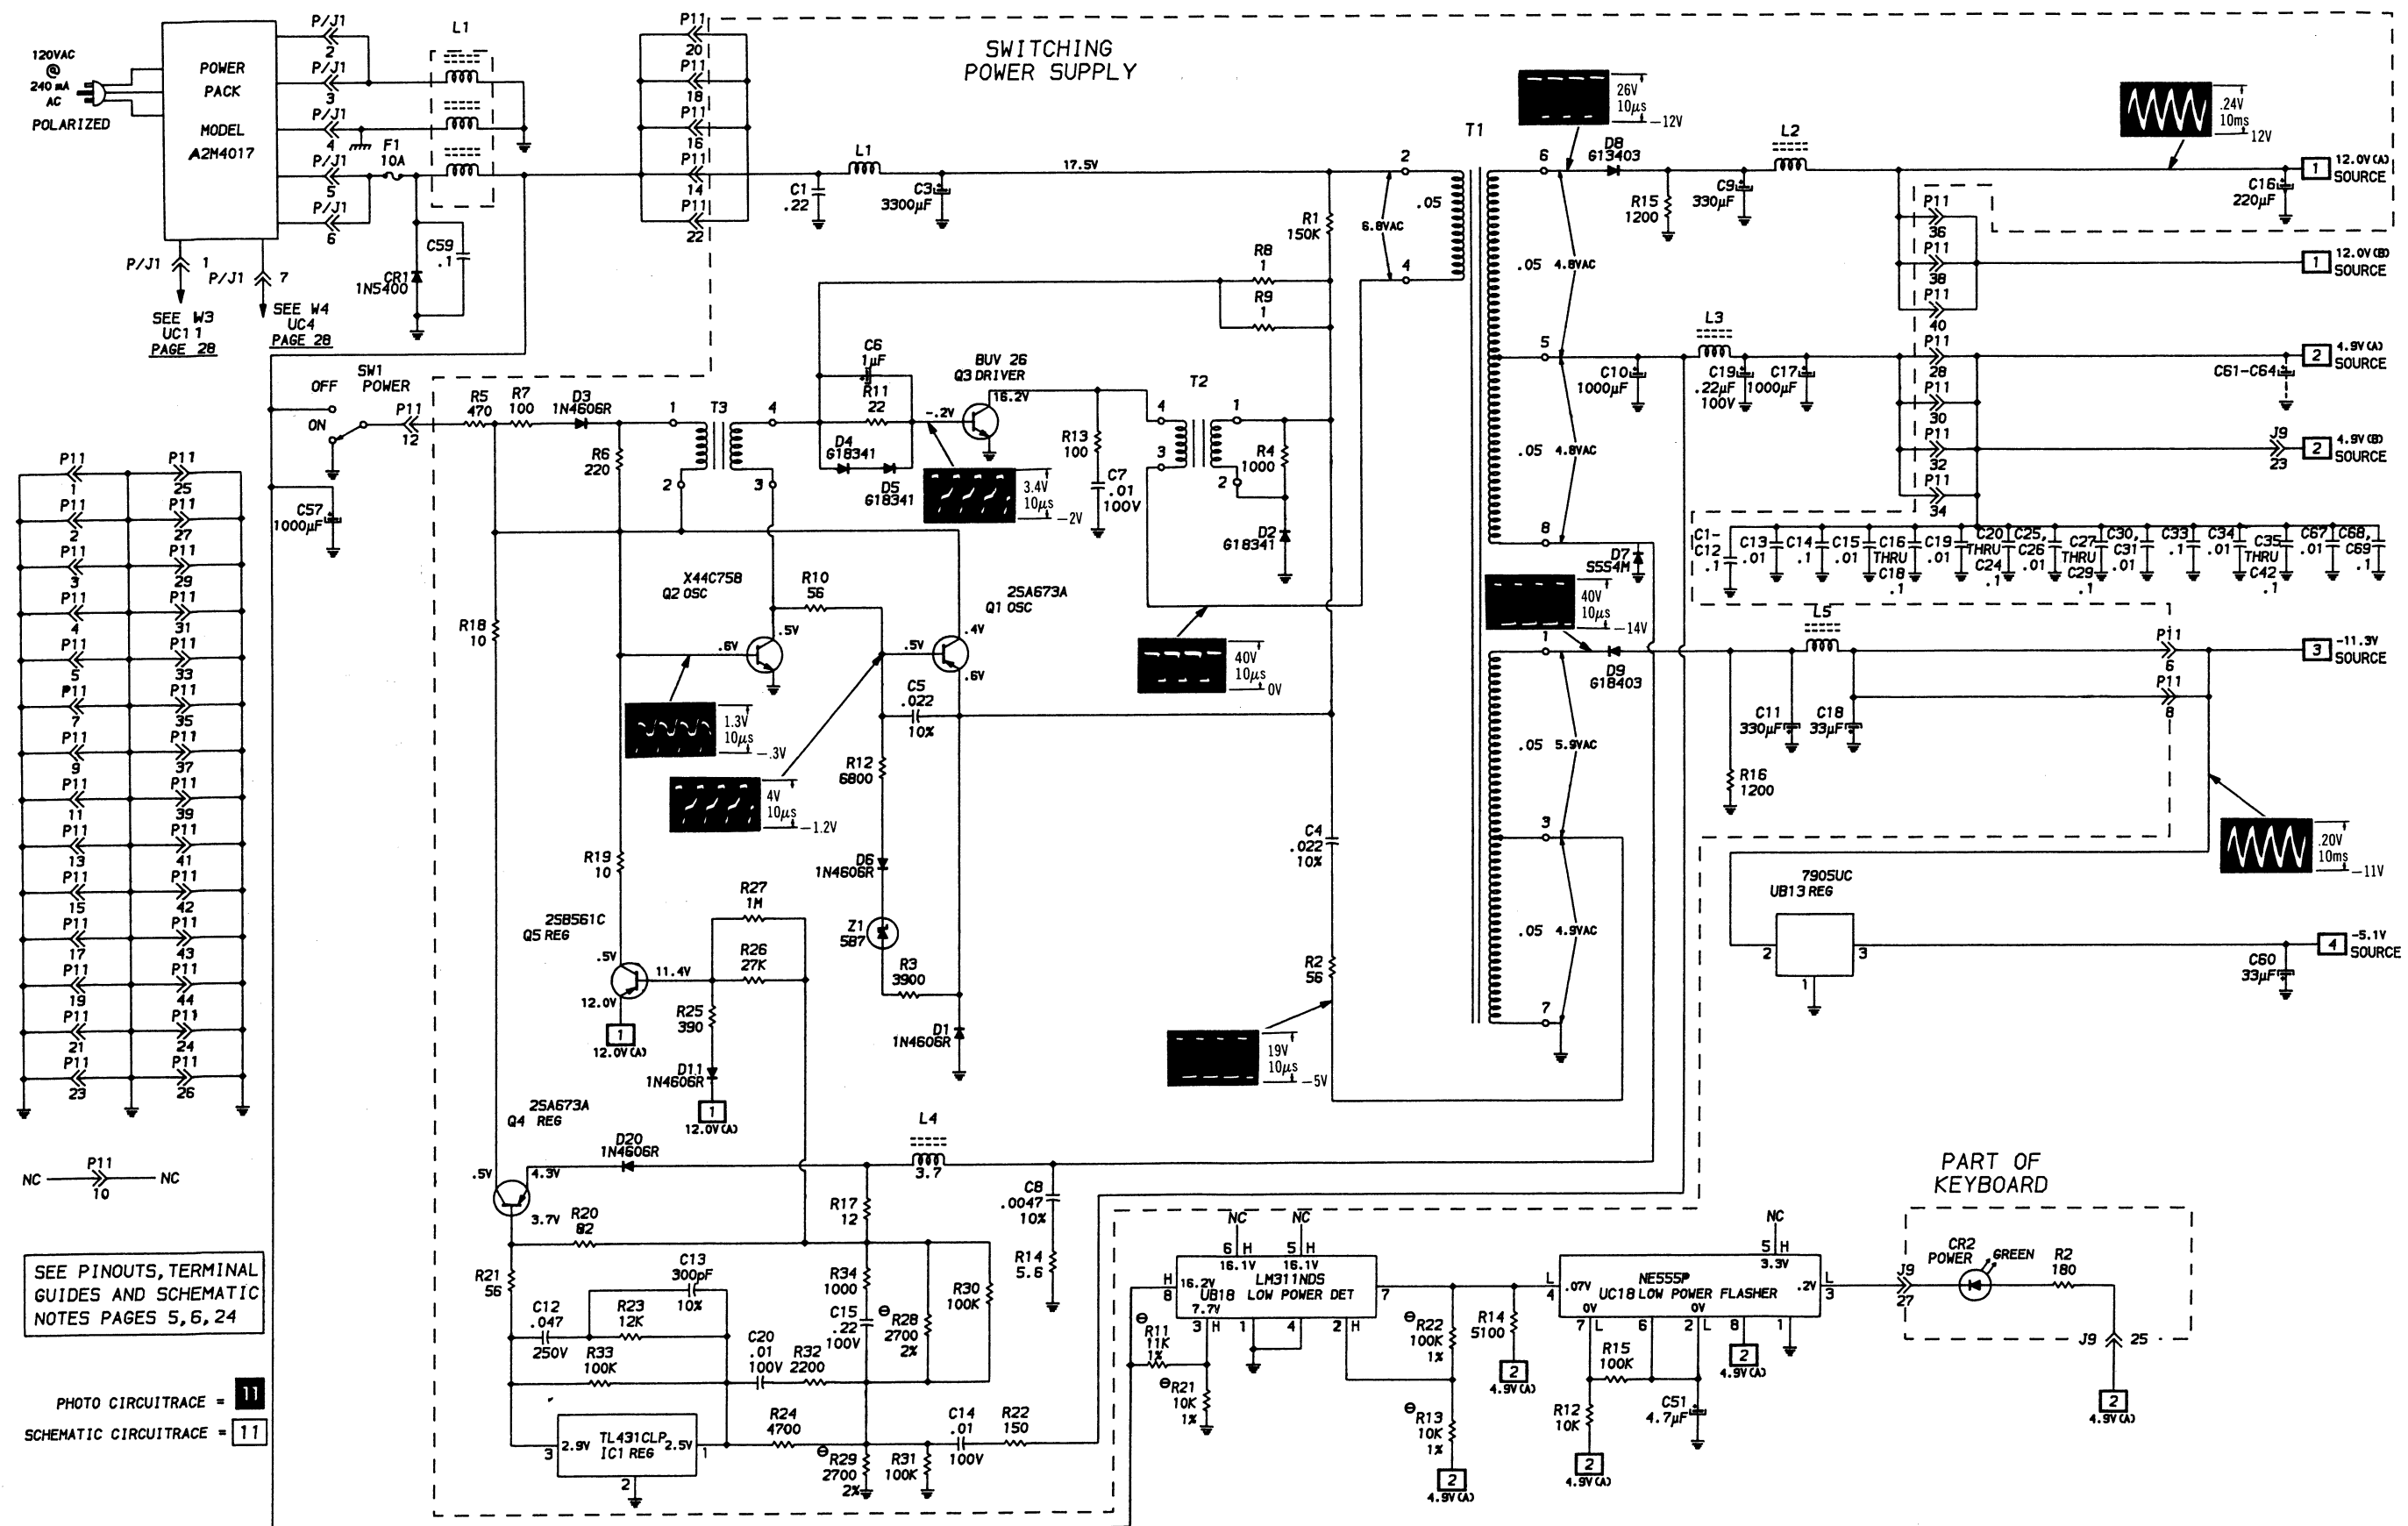

A PHOTOFACT STANDARD NOTATION SCHEMATIC
WITH **CIRCUITACE**
© Howard W. Sams & Co., Inc. 1985

SWITCHING POWER SUPPLY

SWITCHING POWER SUPPLY

CSCS7
APPLE
MODEL IIC

GENERAL OPERATING INSTRUCTIONS

POWER UP

The Computer will boot up automatically on any bootable diskette that is in the Disk Drive when turned On. If no diskette is in the Disk Drive when the Computer is turned On, the Computer will come up with "Apple IIc" and "Check Disk Drive" on the Monitor screen. Press the Control and Reset keys at the same time to put the Computer in Basic mode.

SWITCHING FROM BASIC TO MONITOR MODE

Type CALL-151 and press RETURN key. An asterisk will appear on the Monitor screen indicating the Computer is in the Monitor mode.

SWITCHING FROM MONITOR TO BASIC MODE

Press the CONTROL and C keys at the same time, then press the RETURN key (any Basic program already in memory, before going to the Monitor mode, will remain in memory).

Press the CONTROL and B keys at the same time, then press the RETURN key (any Basic program in memory will be lost).

RESET

Press the CONTROL and RESET keys at the same time to reset the Computer to Basic mode. Press the OPEN APPLE key (located on the left side of SPACE bar), CONTROL key and RESET key at the same time to reboot the system on any bootable diskette in the Disk Drive.

OPERATING THE DISK SYSTEM FROM BASIC MODE (DOS3.3)

Type CATALOG and press the RETURN Key to get a list of the programs which are on the diskette. Type CATALOG, D1 for Disk Drive 1 or CATALOG, D2 for Disk Drive 2 if the current Disk Drive is not the one desired.

Type LOAD and the program name, then press the RETURN key to load a program from the diskette.

Type SAVE and the program name, then press the RETURN key to save a program on the diskette.

BOOTING UP THE DISK OPERATING SYSTEM (DOS)

Insert a diskette containing a DOS into the Disk Drive and turn On the Computer. The Computer will automatically load the DOS and come up in Basic mode if DOS3.3 is used. If PRODOS is used the Computer will come up with menu of PRODOS features on the Monitor screen.

To boot from Basic mode, type PR#6 or 1N#6 and press the RETURN key. If there is no diskette in the Disk Drive, the Disk Drive will stop and the message "Check Disk Drive" will appear on the Monitor screen.

DOS can also be rebooted by pressing the OPEN APPLE key (located on left side of SPACE bar), CONTROL key and RESET key at the same time.

USING BLANK DISKETTES

A blank diskette must be initialized (DOS3.3) or Formatted (PRODOS) before it can be used to save data. To initialize a diskette using DOS3.3, boot the disk operating system from a diskette containing DOS3.3, remove the DOS3.3 diskette and put the blank diskette into the Disk Drive. Type INIT HELLO and press the RETURN key. The diskette will be initialized when the drive stops. NOTE: Any previous information on diskette will be over written and lost when initialized.

If PRODOS is being used, select the PRODOS FILER (press F key) from the menu that comes up when PRODOS is booted up. Select Volume Commands (press V key) from the second menu that comes up and then select Format A Volume (press F key) from the third menu that comes up. Insert the blank diskette into the Disk Drive and follow the instructions on the Monitor screen to format the diskette.

80/40 COLUMN SWITCH

This switch takes effect only if the program being used checks to see if the switch is down (40 column) or up (80 column). The program then automatically sets the 40 or 80 column mode according to the switch setting.

To select 80 column mode manually press the ESC key then press the 8 key or type PR#3 and press the Return key.

To select 40 column mode manually press the ESC key then press the Control and Q keys at the same time or type PR#0 and press the Return key.

DISASSEMBLY INSTRUCTIONS

CABINET REMOVAL

Turn the Computer upside down. Remove four screws from under the keyboard and two screws located in front of the handle. Turn the Computer right side up and extend the handle. Release the front latch tab. Lift the top front up and back to clear the rear panel.

DISK DRIVE REMOVAL


Remove four screws from cabinet bottom. Disconnect Disk Drive from System board and remove Disk Drive.

POWER SUPPLY REMOVAL


















Remove two screws securing Switching Power Supply. Slide Switching Power Supply back and remove from Connector. To remove Switching Power Supply board from shield, remove the two screws near the edge connector and loosen the screw on the side of the shield. Slide the shield backward to free lock tabs and carefully separate from board.

SYSTEM BOARD REMOVAL

Disconnect the speaker. Remove nine screws holding System board and remove.

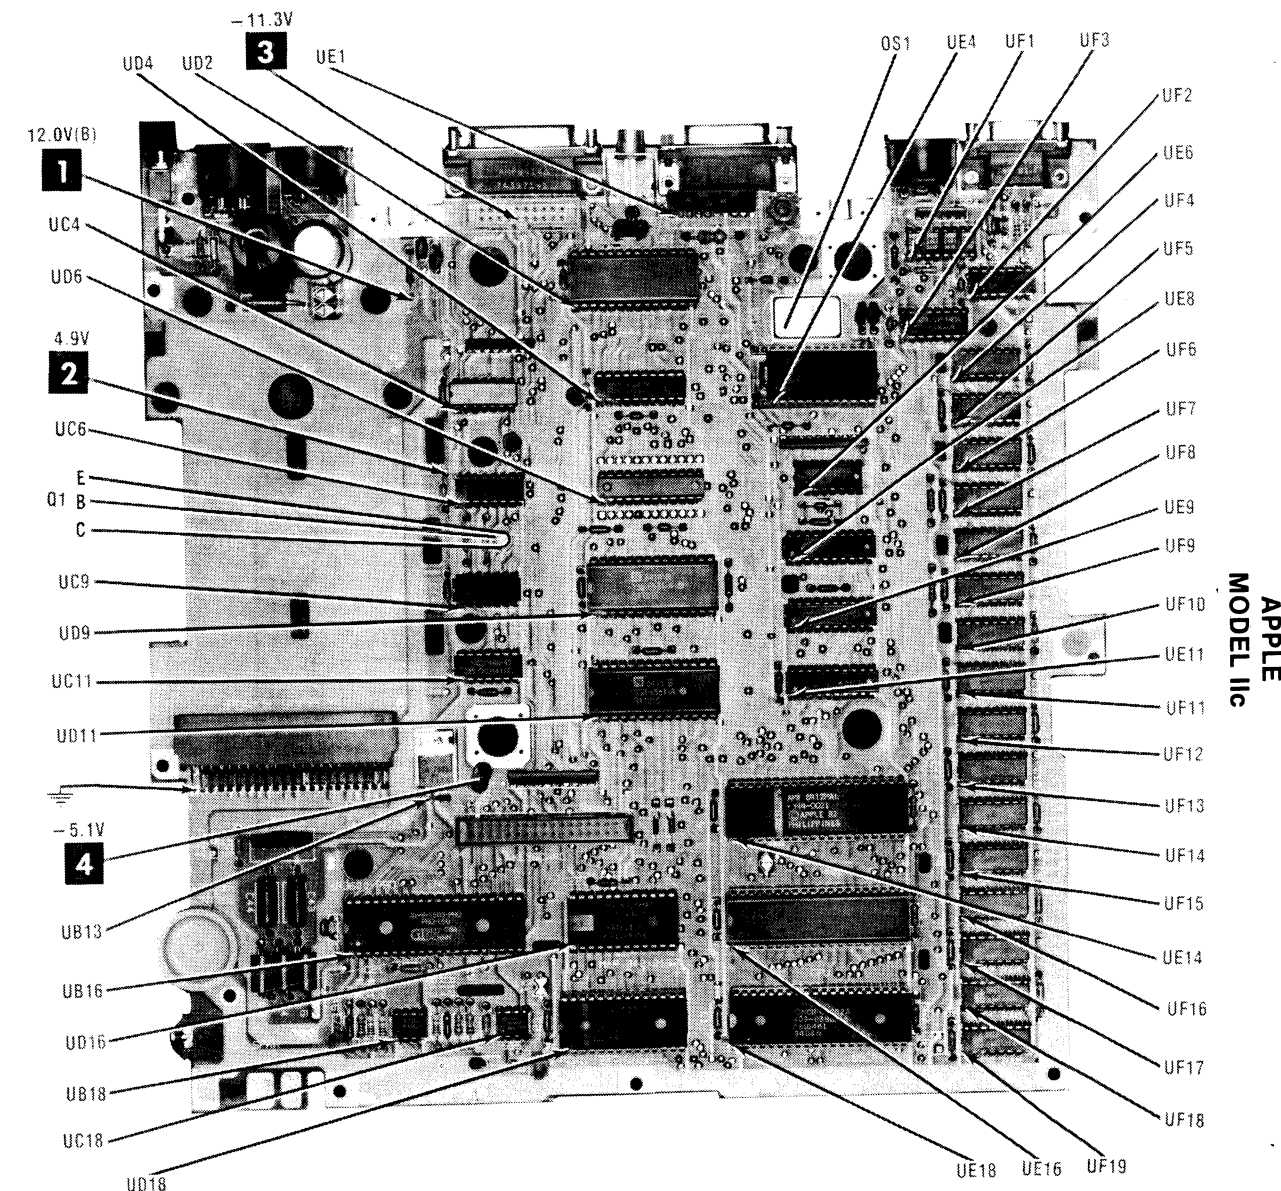

IC PINOUTS & TERMINAL GUIDES

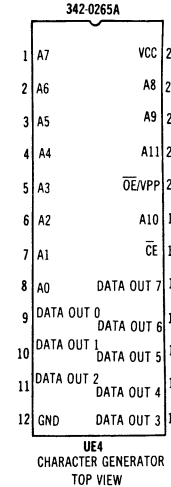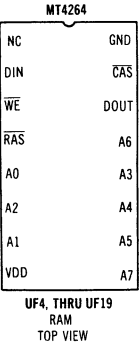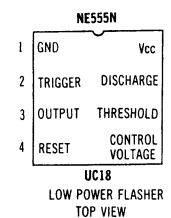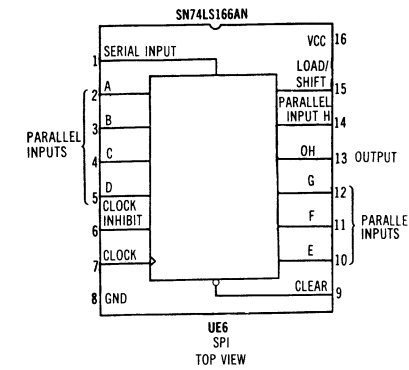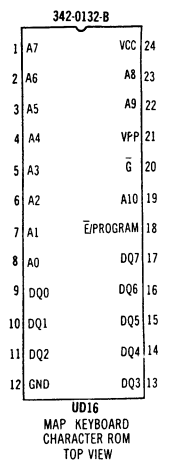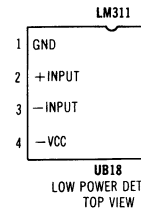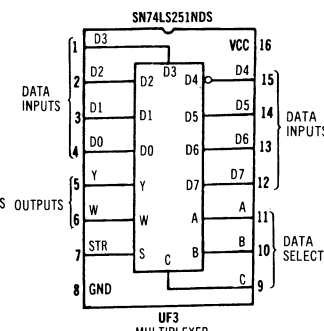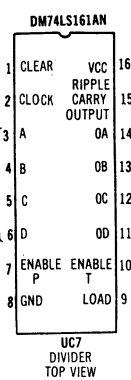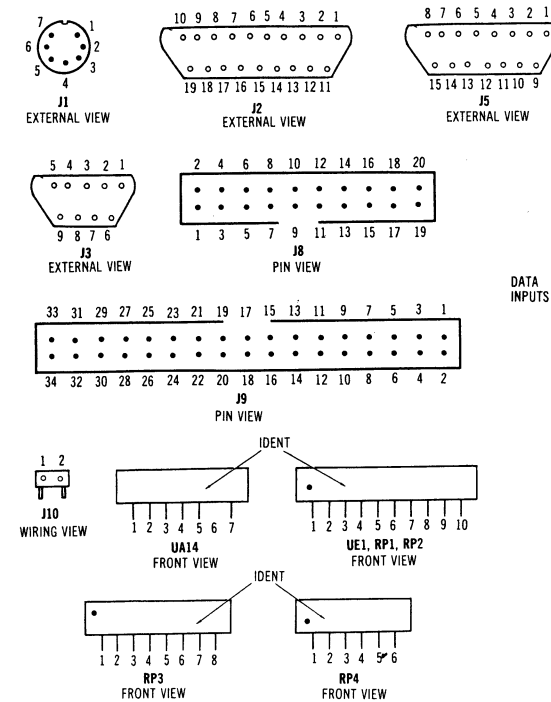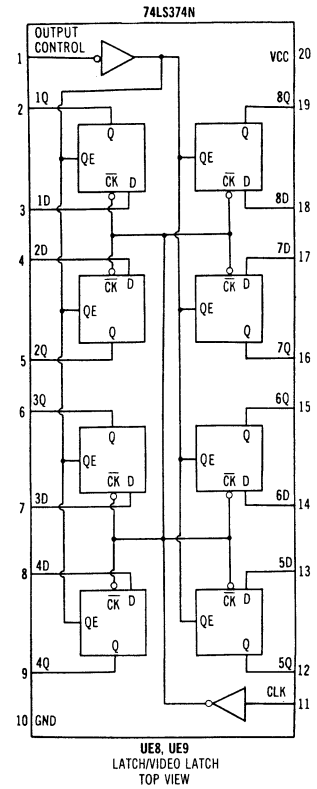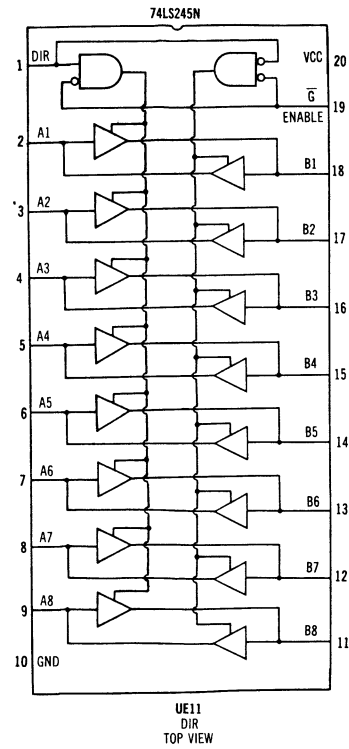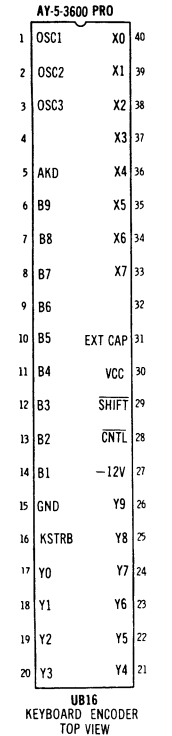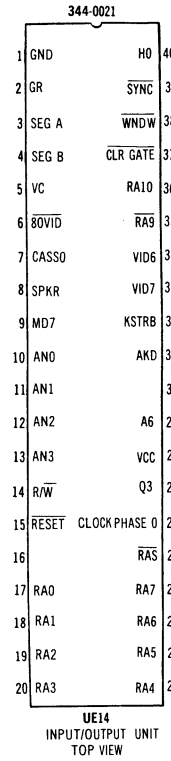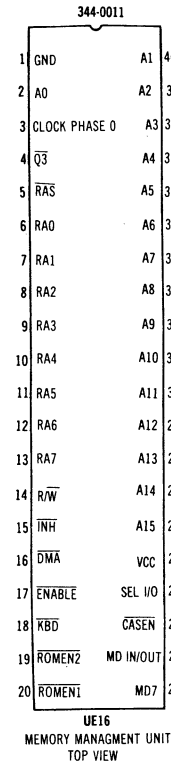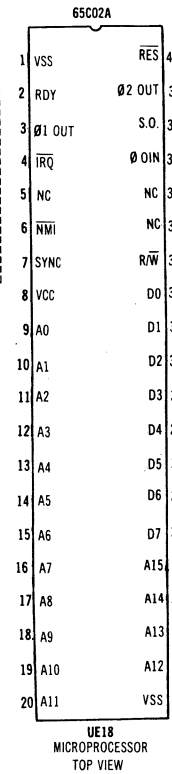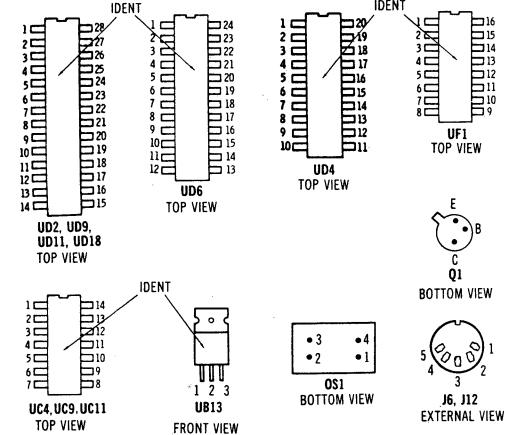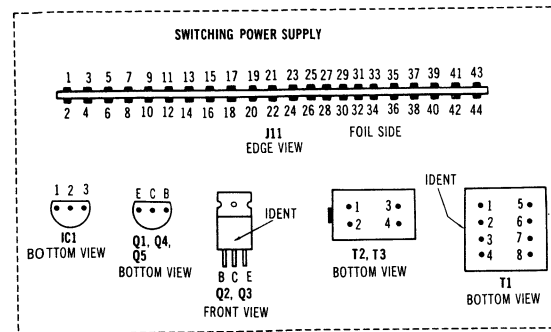

SAFETY PRECAUTIONS

1. Use an isolation transformer for servicing.
2. Maintain AC line voltage at rated input.
3. Remove AC power from the Computer system before servicing or installing electrostatically sensitive devices. Examples of typical ES devices are integrated circuits and semiconductor "chip" components.
4. Use extreme caution when handling the printed circuit boards. Some semiconductor devices can be damaged easily by static electricity. Drain off any electrostatic charge on your body by touching a known earth ground. Wear a commercially available discharging wrist strap device. This should be removed prior to applying power to the unit under test.
5. Use a grounded-tip, low voltage soldering iron.
6. Use an isolation (times 10) probe on scope.
7. Do not remove or install boards, floppy disk drives, printers, or other peripherals with Computer system AC power On.
8. Do not use freon-propelled sprays. These can generate electrical charges sufficient to damage semiconductor devices.
9. This Computer system is equipped with a grounded three-pronged AC plug. This plug must fit into a grounded AC power outlet. Do not defeat the AC plug safety feature.
10. Periodically examine the AC power cord for damaged or cracked insulation.
11. The Computer system cabinet is equipped with vents to prevent heat build-up. Never block, cover, or obstruct these vents.
12. Instructions should be given, especially to children, that objects should not be dropped or pushed into the vents of the cabinet. This could cause shock or equipment damage.
13. Never expose the Computer system to water. If exposed to water turn the unit off. Do not place the Computer system near possible water sources.
14. Never leave the Computer system unattended or plugged into the AC outlet for long periods of time. Remove AC plug from AC outlet during lightning storms.
15. Do not allow anything to rest on AC power cord.
16. Unplug AC power cord from outlet before cleaning Computer system.
17. Never use liquids or aerosols directly on the Computer system. Spray on cloth and then apply to the Computer system cabinet. Make sure the Computer system is disconnected from the AC power line.

SCHEMATIC NOTES

- X— Circuitry not used in some versions
- Circuitry used in some versions
- See parts list
- ⊥ Ground
- Chassis

Waveforms and voltages taken from ground, unless noted otherwise

Voltages, logic readings and waveforms taken in Power Up mode, Caps Lock and 80/40 Column keys down, Keyboard Switch up, no diskette in the Disk Drive "Apple IIc" and "Check Disk Drive" displayed on the Monitor screen.

- (1) Probe indicates H if diskette is write protected or Head Position is operating.
- (2) Probe indicates P when Head Position motor is operating.
- (3) Readings taken after pressing Space Bar on keyboard.
- (4) Probe indicates H when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (5) Probe indicates H when Caps Lock key is up.
- (6) Probe indicates P when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.

- (7) Probe indicates P when Computer is in "Basic" mode.
- (8) Probe indicates L when the Control key is pressed.

Waveforms taken with triggered scope and Sweep/Time switch in Calibrate position, scope input set for DC coupling on 0 reference voltage waveforms. Switch to AC input to view waveforms after DC reference is measured when necessary. Each waveform is 7 cm. width with DC reference voltage given at the bottom line of each waveform.

Time in $\mu\text{sec.}$ per cm, given with p-p reading at the end of each waveform.

Item numbers in rectangles appear in the alignment/adjustment instructions.

Supply voltages maintained as shown at input.

Controls adjusted for normal operation.


Terminal identification may not be found on unit.

Capacitors are 50 volts or less, 5% unless noted.


Electrolytic capacitors are 50 volts or less, 20% unless noted.

Resistors are $\frac{1}{2}W$ or less, 5% unless noted.

Value in () used in some versions.

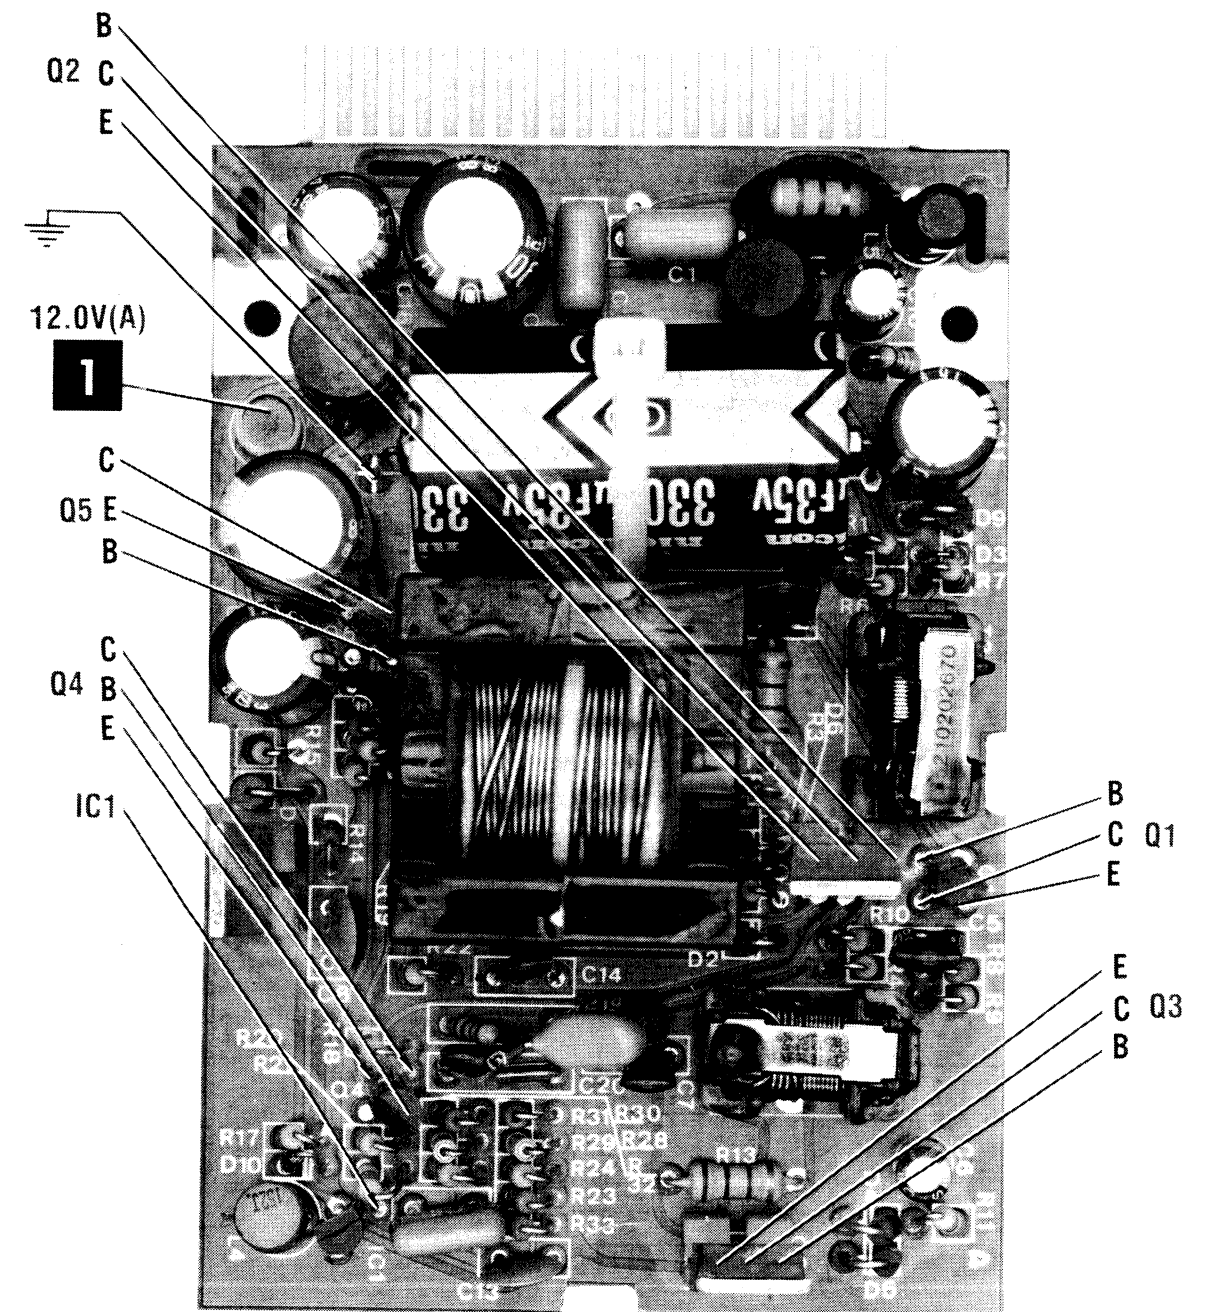

ARROWS ON IC'S INDICATE PIN 1 UNLESS NOTED

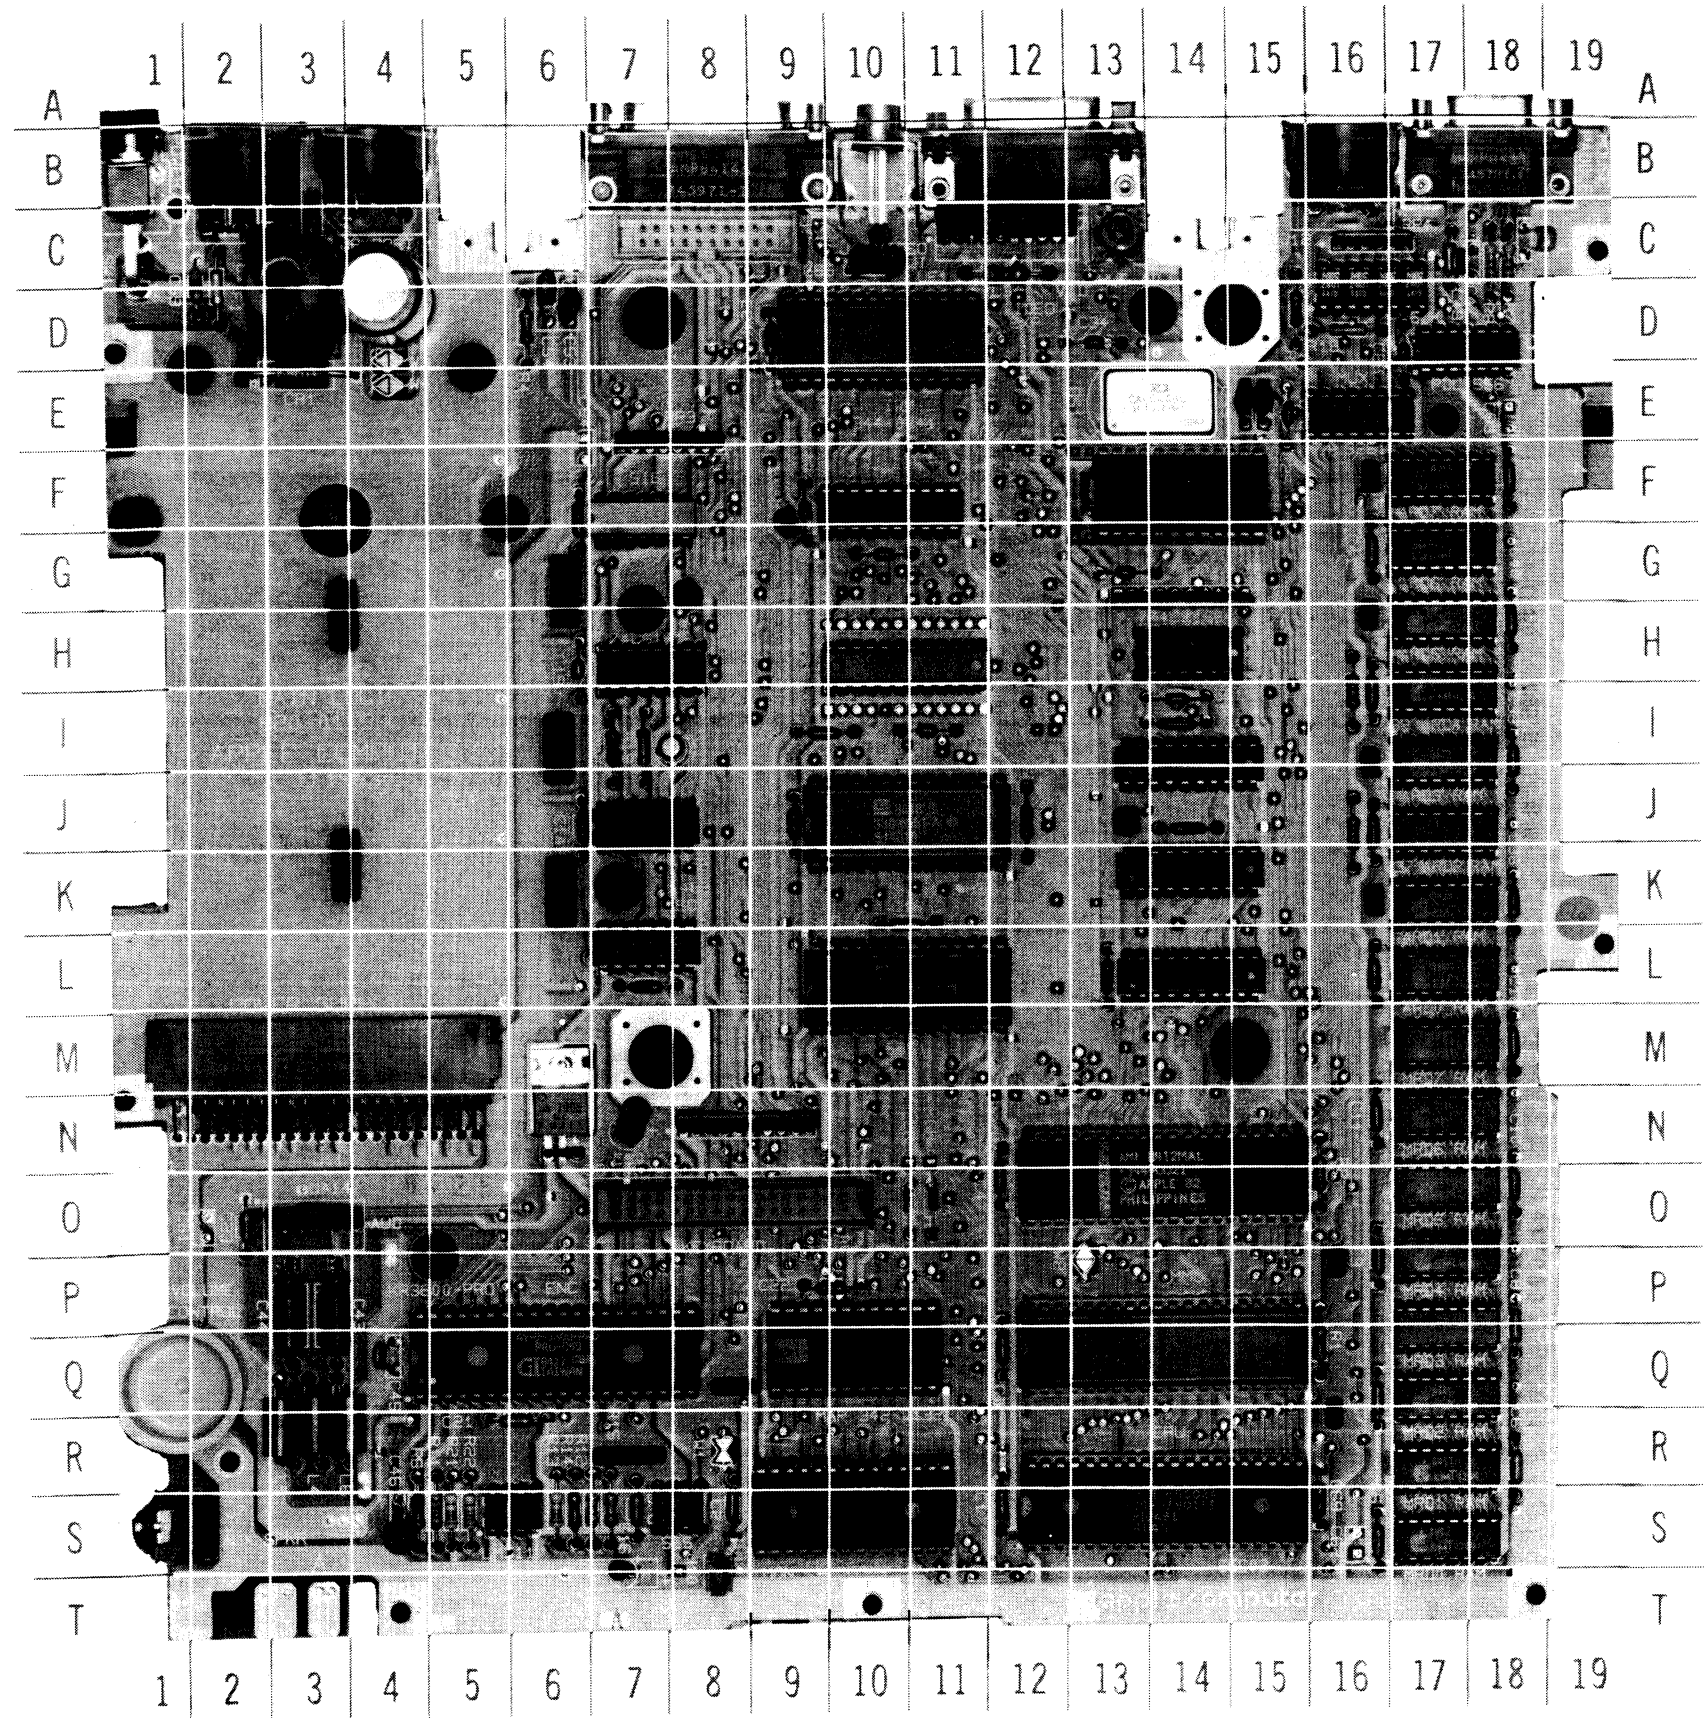

SYSTEM BOARD

A Howard W. Sams GRIDTRACE™ Photo

SYSTEM BOARD

SYSTEM BOARD GridTrace LOCATION GUIDE

C1	S-12	L1	C-3	UF16	Q-17
C2	S-8	L2	C-13	UF17	Q-17
C3	Q-12	L3	C-12	UF18	R-17
C4	Q-12	L4	R-3	UF19	S-17
C5	S-16	L5	R-3		
C6	R-18	L6	R-3		
C7	Q-16	OS1	E-14		
C8	Q-18	Q1	I-8		
C9	P-16	R1	Q-16		
C10	Q-18	R2	Q-16		
C11	N-16	R3	Q-1		
C12	M-18	R4	D-6		
C13	Q-10	R5	D-15		
C14	J-6	R6	S-4		
C15	I-11	R7	C-18		
C16	S-7	R8	C-18		
C17	L-7	R9	J-16		
C18	K-9	R10	I-16		
C19	H-6	R11	S-5		
C20	F-6	R12	S-7		
C21	R-6	R13	S-6		
C22	P-10	R14	S-6		
C23	Q-2	R15	S-7		
C25	E-15	R16	J-12		
C27	L-13	R18	D-16		
C28	I-14	R19	I-7		
C29	J-14	R20	I-7		
C30	G-13	R21	S-5		
C31	I-14	R22	S-5		
C33	J-9	RP1	N-8		
C34	D-13	RP2	G-14		
C35	L-16	RP3	F-7		
C36	K-18	RP4	C-16		
C37	J-16	S1	B-1		
C38	I-18	UA14	Q-3		
C39	I-16	UB13	N-6		
C40	H-18	UB16	Q-6		
C41	G-16	UB18	S-6		
C42	F-18	UC4	F-7		
C43	P-3	UC6	H-7		
C44	P-3	UC10	J-7		
C45	Q-4	UC11	L-7		
C46	S-4	UC18	S-8		
C47	C-17	UD2	D-10		
C48	C-18	UD4	F-10		
C49	C-17	UD6	H-10		
C51	T-7	UD9	J-10		
C53	D-6	UD11	L-10		
C54	D-6	UD16	Q-10		
C55	E-15	UD18	S-10		
C56	E-15	UE1	C-12		
C57	C-4	UE4	F-14		
C59	C-2	UE6	H-14		
C60	N-7	UE8	I-14		
C65	C-10	UE9	K-14		
C67	F-9	UE11	L-14		
C68	I-9	UE14	Q-14		
C69	S-16	UE16	Q-14		
CR1	E-3	UE18	S-14		
CR2	Q-11	UF1	D-16		
CR3	Q-10	UF2	D-17		
F1	D-2	UF3	E-16		
J1	B-2	UF4	F-17		
J2	B-8	UF5	G-17		
J3	B-18	UF6	H-17		
J4	B-10	UF7	I-17		
J5	B-12	UF8	I-17		
J6	B-4	UF9	J-17		
J7	S-1	UF10	K-17		
J8	C-8	UF11	L-17		
J9	Q-8	UF12	M-17		
J10	T-8	UF13	N-17		
J11	M-3	UF14	Q-17		
J12	B-16	UF15	P-17		

TEST EQUIPMENT

Test Equipment listed by Manufacturer illustrates typical or equivalent equipment used by SAMS' Engineers to obtain measurements and is compatible with most types used by field service technicians.

Equipment Name	B & K Precision Equipment No.	Simpson Equipment No.	
OSCILLOSCOPE	1570A,1590A,1596	454	
LOGIC PROBE	DP51		
LOGIC PULSER	DP101		
DIGITAL VOM	2830	463,467,470,474	
ANALOG VOM	277	260-7	
ISOLATION TRANSFORMER	TR110,1604,1653,1655		
FREQUENCY COUNTER	1803,1805	710	
COLOR BAR GENERATOR	1211A,1248,1251,1260	431	
RGB GENERATOR	1260		
FUNCTION GENERATOR	3020	420A,420D	
HI-VOLTAGE PROBE	HV-44	248	
TEMPERATURE PROBE	TP-28	IR-10	
CRT ANALYZER	467,470		

TROUBLESHOOTING

COMPUTER DEAD

No display on the Monitor screen when the Computer is turned On. Verify the green Power LED (CR2) is On. If the LED is not On, refer to the "Power Supply" section of this Troubleshooting guide. If the LED is On, turn the speaker volume control (on left side of the Computer) up and listen for a beep when the Computer is turned On or when the Control and Reset keys are pressed at the same time. If a beep is heard check the cable going to the Monitor and check the Monitor. If the cable and Monitor check good, refer to the "Video" section of this Troubleshooting guide. If no beep is heard refer to the "Microprocessor (CPU) Operation" section of this Troubleshooting guide.

POWER SUPPLY

Computer dead, Power LED not On. Unplug the Power Pack Plug (P1) from the Computer and check for 18.2V from pin 2 to pin 6 of Plug P1. If 18.2V is missing repair or replace the Power Pack. If 18.2V is present plug the Power Pack back into the Computer (with Computer Off) and check for 17.5V at pin 2 of Switching Transformer (T1). If 17.5V is missing check Fuse F1 and Coil L1 on the System board, and Coil L1 on the Switching Power Supply board. Check Connectors J1 and P11 for good connections. If Fuse F1 is bad, unplug the Power Pack and check for a possible short to ground at pin 2 of Transformer T1. If pin 2 of Transformer T1 checks shorted to ground check Diode CR1 and Capacitors C57 and C59 on the System board and check Capacitors C1 and C3 and Driver Transistor Q3 on the Switching Power Supply board.

If 17.5V is present at pin 2 of Transformer T1, turn the Computer On and verify the power supply is oscillating by checking the waveform at the Base of Transistor Q3. If the power supply is not oscillating, check the On-Off Switch (S1) and check pin 12 of Connector P11 for good connection. Also check the voltages and components associated with the Oscillator Transistors (Q1 and Q2), Driver Tran-

sistor (Q3) and Regulator Transistors (Q4 and Q5) and check for possible shorts to ground at pins 1, 3, 5, 6 and 8 of Transformer T1.


If the power supply is oscillating, but the output source voltages are not correct (12V at pin 36, 4.9V at pin 28 and - 11.3V at pin 6 of Connector P11) check the voltages and components associated with the Regulator IC (IC1) and Transistors Q4 and Q5.

MICROPROCESSOR (CPU) OPERATION

Computer is not working and power supply is normal, check the logic reading on pin 40 of the Microprocessor IC (UE18) while turning the Computer On. The logic reading should be Low then change to High. The logic reading is Low as long as the Control and Reset keys are held down. If the logic reading is not correct when turning the Computer On check the Input/Output Unit IC (UE14). If the logic reading does not read Low when the Control and Reset keys are held down check pins 29 and 21 of Connector J9 for good connections and check the Control and Reset keys for continuity when pressed.

If the reset circuit is working, check the 14.318MHz clock waveform at pin 1 of the GLU IC (UD6) if the waveform is missing check the 1K resistor from pin 1 to 2 of Resistor pack RP3 and check the Oscillator Module (OS1). If the 14.31818MHz waveform is present check the 7.159MHz waveform at pin 2 of the TMG IC (UD4), 3.5795MHz waveform at pin 3 of IC UD4 and 1.02MHz waveform at pins 14 and 15 of IC UD4. If any of the waveforms are missing check IC UD4. Check for a High logic reading at pins 2, 4 and 6 of Microprocessor IC (UE18). If any of the readings are not correct check the components and IC's connected to the pin with the incorrect reading and check IC UE18.

If IC UE18 checks good check the MON IC (UD18), Memory Management Unit IC (UE16), Input/Output Unit IC (UE14) and RAM IC's (UF12 thru UF19).

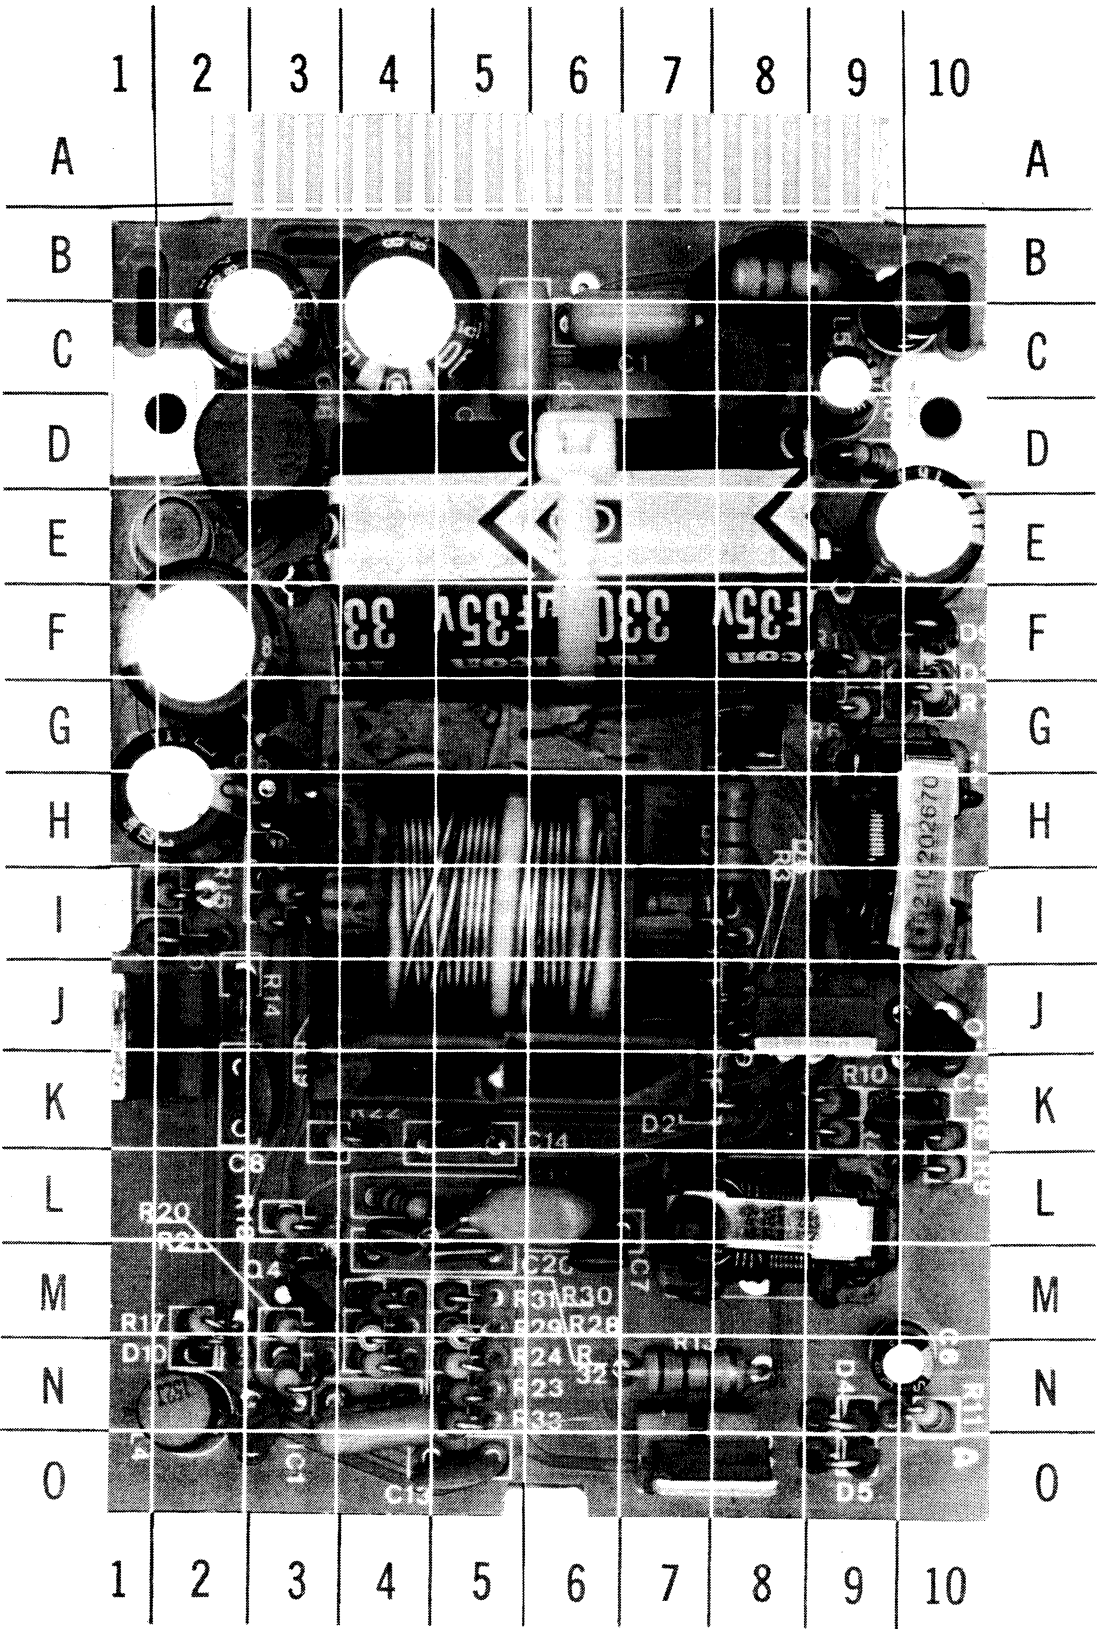

LINE DEFINITIONS

A0 Thru A15	Address Lines
AKD	Any Key Down
ALTVID	Alternate Video
AN0 Thru AN3	Annunciator 0 Thru 3
CASEN	Cassette Enable
CAPL	Closed Apple Control Line
CAPLOCK	Capital (Letter) Lock
CLKEN	Clock Enable
CLRGATE	Color Burst Gate
CNTL	Control
COXX	Hex Addresses
CO6X, CO7X	Hex Addresses
CXXX	Hex Addresses
DMA	Direct Memory Access
D0 Thru D7	Data Lines
DEV1 Thru DEV7	Peripheral Device Select
ENABLE1, ENABLE2	Enable
ENKBD	Enable Keyboard
ENTMG	Enable Master Timing
ENVID	Enable Video
EN80	Enable Auxiliary RAM
EXTINT	External Interrupt
FRCTXT	
GR	Graphics
H0	Horizontal 0
I/OSTROBE	Input/Output Strobe
INH	Inhibits Main Memory
IOSEL	Input/Output Select
IRQ	Input Request
IWM	Integrated Woz Machine (Disk Drive I/O)
KBD	Keyboard
KSTRB	Keyboard Strobe
LANGSW	Keyboard Switch Line
LDPS	Load Parallel to Serial
MD0 Thru MD7	Main Data Lines
MD IN/OUT	Buffered Data Input/Output
MOTOR ON	Motor On
MR	Memory Read
NMI	Non-Maskable Interrupt
OAPL	Open Apple Control Line
PDL0 Thru PDL3	Game Paddle Lines

Any Bar above any alphabetical or numerical combination indicates line active in a low (0) state.

PCAS	Phase 0 Column Address Strobe
PRAS	Phase 0 Row Address Strobe
Q3	General Purpose Clock
RA0 Thru RA7, RA9, RA10	Multiplexed Address Lines
RDY	Ready
RESET	Reset
READ DATA	Read Data
ROMEN1, ROMEN2	ROM Enable Lines
R/W	Read/Write
R/W80	Read/Write 80 Character
SEGA	Segment A
SEGB	Segment B
SEROUT	Serial Output
SHFT	Shift
SPKR	Speaker
STB	Strobe
SW0/OAPL	Switch 0/Open Apple
SW1/CAPL	Switch 1/Closed Apple
SW2	Switch 2
SYNC	Sync
VC	Vertical Counter
VID0 Thru VID7	Video Data 0 Thru 7
VID7M	Video 7 MHz
WNDW	Window
WRITE DATA	Write Data
WRITE PROTECT	Write Protect
WRITE REQ	Write Request
X0 Thru X7	Keyboard Matrix
Y0 Thru Y9	Keyboard Matrix
3.58M	3.58MHz
7M	7MHz
14M	14MHz
80VID	80 Character Video
μPSYNC	Microprocessor Sync
Ø0	Phase 0
Ø1	Phase One
ØA	Phase A
ØB	Phase B
ØC	Phase C
ØD	Phase D

SWITCHING POWER SUPPLY BOARD GridTrace LOCATION GUIDE

C1	C-7	C18	C-9	L2	E-2	R7	G-10	R23	N-5
C3	E-6	C19	C-5	L3	D-3	R8	K-10	R25	H-3
C4	G-8	C20	L-4	L4	N-2	R9	L-10	R26	H-3
C5	K-10	D1	I-7	L5	B-10	R10	K-9	R27	I-3
C6	N-10	D2	K-7	P11	A-6	R11	N-10	R28	M-4
C7	M-6	D3	F-10	Q1	J-10	R12	J-7	R29	M-5
C8	K-3	D4	N-9	Q2	J-9	R13	N-7	R30	M-4
C9	H-2	D5	O-9	Q3	O-8	R14	J-2	R31	M-5
C10	F-2	D6	J-8	Q4	M-3	R15	I-2	R32	N-4
C11	E-10	D7	J-2	Q5	G-3	R16	D-9	R33	N-5
C12	N-4	D8	I-2	R1	F-9	R17	M-2	R34	L-4
C13	O-5	D9	F-10	R2	H-8	R18	L-3	T1	I-5
C14	K-5	D10	N-2	R3	J-7	R19	I-3	T2	L-8
C15	L-6	D11	H-3	R4	K-9	R20	M-3	T3	H-10
C16	C-2	IC1	N-3	R5	B-8	R21	N-3	Z1	J-7
C17	C-4	L1	C-8	R6	G-9	R22	K-4		

TROUBLESHOOTING (Continued)

KEYBOARD

Keyboard is dead or has no response when a key is pressed. Check Connector J9 and the keyboard cable for good connections. Check for -11.3V at pin 27 of the ENC (keyboard encoder) IC (UB16). If -11.3V is missing refer to the "Power Supply" section of this Troubleshooting guide. If -11.3V is present, check the waveform at pin 1 of IC UB16. If the waveform is missing, check Capacitor C46, Resistor R6 and IC UB16. If the waveform is present at pin 1 of IC UB16, check the waveforms on pins 17 thru 26 and 33 thru 40 of IC UB16. The waveforms on pins 17 thru 26 should look similar to the waveform shown on pin 18 with no key pressed and should look similar to the waveform shown on pin 17 when any key connected to the pin being checked is pressed. The waveforms on pins 33 thru 40 should look similar to the waveform shown on pin 40 of IC UB16. If any waveform is missing check IC UB16. If the waveforms on pins 17 thru 26 do not change when a key connected to the pin being checked is pressed check the key for continuity when pressed.

Check for the waveform shown in Figure 6 at pins 17 thru 26 of IC UB16 when any key is pressed repeatedly except the Control Shift, Open Apple, Closed Apple and Reset keys. If the waveform is missing check Capacitor C45 and IC UB16.

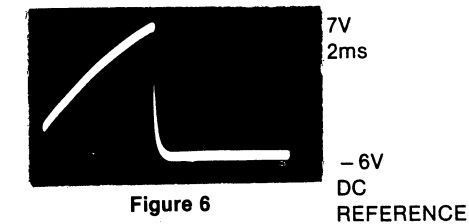


Figure 6

Check the logic readings on pins 5 and 16 of IC UB16. Pin 5 logic reading should be High and pin 16 should read a Pulse when any key is pressed except the Control, Shift, Open Apple, Closed Apple and Reset keys. If either reading is not correct, check IC UB16.

Check the logic readings on pins 6 thru 14 of IC UB16 after pressing the Space Bar. (See logic readings on schematic). If any of the readings are not correct, check IC UB16.

Press the Control and Reset keys to put the Computer in "Basic" mode and check for Pulses at pin 20 of the MAP (Keyboard Character ROM) IC (UD16). If pulses are missing check Memory Management Unit IC (UE16). If pulses are present at pin 20 of IC UD16 and all the previous checks are good, check IC UD16, UE14 and UD9.

If only one key does not work, check the solder connection on the defective key and check the key for continuity when the key is pressed.

If a wrong character appears on the Monitor screen when a key is pressed, check IC's UD16 and UE16.

If a character does not repeat when a key is held down check IC UE14.

If a character appears more than once on the Monitor screen when a key is pressed momentarily, check Capacitor C45 and IC UB16.

If any group of keys do not work, check the Keyboard cable and Connector J9 for good connections and check IC UB16.

DISK DRIVE INTERFACE

Disk Drive Interface circuit does not work. Turn the Computer Off and disconnect the Disk Drives from the Computer. Turn the Computer On, in Basic mode (See General Operating Instructions). Type in and run the following Basic program and make all tests while the program is running. Press the Control and Reset keys to stop the program.

```

10 X = PEEK (- 16151)
20 X = PEEK (- 16150)
30 X = PEEK (- 16148)
40 X = PEEK (- 16146)
50 X = PEEK (- 16145)
60 X = PEEK (- 16147)
70 FOR Y = - 16153 TO - 16160 STEP-1
80 X = PEEK (Y)
90 NEXT Y
100 GOTO 20

```

Check for pulses at pin 7 of the Disk Controller IC (UD2). If pulses are missing, check IC UD6. If pulses are present at pin 7 of IC UD2, check for pulses at pins 1, 2, 8, 9, 27 and 28 of IC UD2. If pulses are missing at any of the pins check IC UD2.

To check the read data circuit, insert a diskette containing data in the Disk Drive. Type in and run the following Basic program.

```

10 X = PEEK (- 16151)
20 X = PEEK (- 16150)
30 X = PEEK (- 16148)
40 X = PEEK (- 16146)

```

Check for data pulses at pin 22 of Disk Controller IC (UD2). If data pulses are present at pin 22 of IC UD2 and the system is not reading data from the disk, check IC UD2. If data pulses are missing at pin 22 of IC UD2, check Connector J8 and the Disk Drive interface cable.

If the Monitor displays an I/O ERROR when attempting to write data on a diskette that is not write protected, check for a logic Low at pin 21 of IC UD2 while running the following program.

```

10 X = PEEK (- 16151): X = PEEK (- 16150)

```

If pin 21 of IC UD2 is Low, check IC UD2. If pin 21 of IC UD2 is High, check the Disk Drive write-protect circuit.

VIDEO DISPLAY

No video on the Monitor screen, check the Video Output Jack (J4) and the cable connecting the Computer to the Monitor for good connections. If the cable and connectors check good, check the waveforms at pins 1 thru 4 of the VID IC (UE1). If the waveforms check good check IC UE1, Capacitor C65 and Coils L2 and L3. If the waveform is missing at pin 1 of IC UE1, check the waveforms on pins 2 thru 7, 10, 11, 12, 14 and 15 of the SPI IC (UE6). If the waveforms are correct at IC UE6, check IC UE6. If the waveform is missing at pins 6 or 15 of IC UE6, check the TMG IC (UD4). If the waveforms are missing at pins 2 thru 5, 10 thru 12 and 14 of IC UE6, check the Char Gen IC (UE4), Input/Output Unit IC (UE14), Video Latch IC (UE9), 80 DIR IC (UE11) and 80 Latch IC (UE8).

Low or high resolution graphics functions do not work check the Input/Output Unit IC (UE14). If the double high resolution graphics do not work, check the GLU IC (UD6).

TROUBLESHOOTING (Continued)

VIDEO SYNC

No horizontal or vertical sync. Check the sync waveforms at pin 2 of the VID IC (UE1). If the waveforms are present, check IC UE1. If the waveforms are missing, check the Input/Output Unit IC (UE14).

COLOR

No color. Check the waveform at pin 3 of the TMG IC (UD4). If the waveform is missing check IC UD4. If the waveform is good at pin 3 of IC UD4, type GR (computer in Basic mode) and press the Return key. Check the waveform at pin 37 of the Input/Output Unit IC (UE14). If the waveform is missing, check IC UE14. If the waveform is good at pin 37 of IC UE14 check the VID IC (UE1).

Hue is not correct. Check the adjustment of the Hue Adjust Coil (L2) (see Miscellaneous Adjustments) and check the frequency of the 14.31813MHz Oscillator Module at pin 1 of the GLU IC (UD6).

INTERNAL SPEAKER

No sound. Check the Speaker (SP1) and check connector J10 and Earphone jack (J7) for good connections. If the Speaker and connections check good, type in and run the following Basic program.

10 PRINT CHR\$(7): GOTO 10

While the program is running, check for pulses at pin 8 of the Input/Output Unit IC (UE14). If pulses are missing, check IC UE14. If pulses are present at pin 8 of IC UE14, check the Volume Control (R3), Electrolytics C43 and C44, Coils L4 and L6 and the Audio IC (UA14).

SERIAL PORT 1 (PRINTER PORT)

Serial Port 1 not working. Check the 1.789MHz baud clock waveform at pin 12 of the Divider IC (UC7). If the waveform is missing check IC UC7. If the waveform is present at pin 12 of IC UC7, type in and run the following Basic program.

10 POKE - 16229,22
20 POKE - 16230,0
30 POKE - 16230,255
40 PRINT "DATA = "; PEEK (- 16232)
50 PRINT "STATUS = "; PEEK (- 16231)
60 FOR T = 1 TO 300: NEXT T
70 PRINT: GOTO 10

Serial Port 1 does not transmit data. While the program is running, check for pulses at pin 3 of the Serial 1 IC (UD11). If pulses are missing at pin 3 of IC UD11, check IC UD6. If pulses are present at pin 3 of IC UD11, check for pulses at pins 8, 10 and 11 of IC UD11. If pulses are missing at pin 8, 10 or 11 of IC UD11, check IC UD11. If pulses are present at pins 8, 10 and 11 of IC UD11, check for pulses at pins 3 and 6 of the Serial Output Buffer IC (UC11). Note: These pulses should have a voltage swing of - 10V to + 10V (20V peak to peak). If pulses are missing at pin 3 of IC UC11, check Capacitor C54 and IC UC11. If pulses are missing at pin 6 of IC UC11, check Capacitor C53 and IC UC11.

Serial Port 1 does not receive data. The Status number that appears on the Monitor screen should be 80. If the Status number is not 80, press the Control and Reset keys to stop

the program and reset IC UD11. Run the program again and note the Status number. If the number is not 80 and pins 12 and 17 of IC UD11 read a logic High and pin 16 of IC UD11 reads logic Low, check IC UD11. If the Status number reads 80, connect a jumper from pin 4 of the Serial Input Buffer IC (UC4) to ground. The Status number should change from 80 to 112. If the Status number is not correct check for a logic High at pin 6 of IC UC4. If the logic reading is not correct, check IC UC4. If the logic reading is correct check IC UD11. If the Status number reads 112 with pin 4 of IC UC4 grounded, remove the jumper from pin 4 of IC UC4 and connect the jumper from pin 17 of IC UD11 to ground. The Status number on the Monitor screen should read 16. If the Status number is not correct check IC UD11. If the Status numbers are correct for pin 4 of IC UC4 and pin 17 of IC UD11, remove the jumper from pin 17 of IC UD11 and inject a 300Hz square wave from a TTL output of a function generator at pin 1 of IC UC4. Vary the frequency of the function generator back and forth between 100Hz and 300Hz. The Data number and Status number on the Monitor screen should change to random values. If neither number changes, check for pulses at pin 3 of IC UC4, while injecting the 300Hz signal at pin 1 of IC UC4. If pulses are missing at pin 3 of IC UC4 check IC UC4. If pulses are present at pin 3 of IC UC4 check IC UD11.

SERIAL PORT 2 (MODEM)

Serial Port 2 not working. Check the 1.789MHz baud clock waveform at pin 12 of the Divider IC (UC7). If the waveform is missing check IC UC7. If the waveform is present at pin 12 of IC UC7, type in and run the following Basic program.

10 POKE - 16213,22
20 POKE - 16214,0
30 POKE - 16214,255
40 PRINT "DATA = "; PEEK (- 16216)
50 PRINT "STATUS = "; PEEK (- 16215)
60 FOR T = 1 TO 300: NEXT T
70 PRINT: GOTO 10

Serial Port 2 does not transmit data. While the program is running, check for pulses at pin 3 of the Serial 2 IC (UD9). If pulses are missing at pin 3 of IC UD9, check IC UD6. If pulses are present at pin 3 of IC UD9, check for pulses at pins 8, 10 and 11 of IC UD9. If pulses are missing at pin 8, 10 or 11 of IC UD9, check IC UD9. If pulses are present at pins 8, 10 and 11 of IC UD9, check for pulses at pins 8 and 11 of the Serial Output Buffer IC (UC11). Note: These pulses should have a voltage swing of - 10V to + 10V (20V peak to peak). If pulses are missing at pin 8 of IC UC11, check Capacitor C56 and IC UC11. If pulses are absent at pin 11 of IC UC11, check Capacitor C55 and IC UC11.

Serial Port 2 does not receive data. The Status number that appears on the Monitor screen should be 16. If the status number is not 16, press the Control and Reset keys to stop the program and reset IC UD9. Run the program again and note the Status number. If the number is not 16 and pins 16 and 17 of IC UD9 read a logic Low and pin 12 of IC UD9 reads logic High, check IC UD9. If the Status number reads 16, connect a jumper from pin 13 of the Serial Input Buffer IC (UC4) to ground. The Status number should change from 16 to 48. If the Status number is not correct check for a logic High at pin 11 of IC UC4. If the logic reading is not correct, check IC UC4. If the logic reading is correct check IC UD9. If the Status number is correct for pin 13 of IC UC4, remove the jumper from pin 13 of IC UC4 and inject a 300Hz square wave from a TTL output of a function generator at pin 10 of

LOGIC (Continued)

PIN NO.	IC UE16	PIN NO.	IC UE16	PIN NO.	IC UE18	PIN NO.	IC UE18	PIN NO.	IC UF1	IC UF2	IC UF3	IC UF4	IC UF5	IC UF6
1	L	21	P	1	L	21	L	1	H	*	H	H	H	H
2	P	22	P	2	H	22	L	2	H	*	L	P	P	P
3	P	23	P	3	P	23	L	3	H	H	L	H	H	H
4	P	24	P	4	H	24	H	4	H	H	H	P	P	P
5	P	25	H	5	H	25	H	5	*	H	P	P	P	P
6	P	26	H	6	H	26	P	6	H	H	*	P	P	P
7	P	27	H	7	P	27	P	7	H	L	H	P	P	P
8	P	28	L	8	H	28	P	8	*	H	L	H	H	H
9	P	29	L	9	P	29	P	9	L	H	P	P	P	P
10	P	30	L	10	P	30	P	10	H	H	P	P	P	P
11	P	31	H	11	P	31	P	11	H	H	P	P	P	P
12	P	32	H	12	P	32	P	12	H	*	*	P	P	P
13	P	33	L	13	P	33	P	13	L	*	*	P	P	P
14	H	34	L	14	L	34	H	14	H	H	H	P	P	P
15	H	35	H	15	H	35	*	15	L		H	P	P	P
16	H	36	L	16	L	36	*	16	H		H	L	L	L
17	H	37	P	17	L	37	P							
18	H	38	P	18	H	38	H							
19	H	39	P	19	H	39	P							
20	P	40	P	20	L	40	H							

PIN NO.	IC UF7	IC UF8	IC UF9	IC UF10	IC UF11	IC UF12	IC UF13	IC UF14	IC UF15	IC UF16	IC UF17	IC UF18	IC UF19
1	H	H	H	H	H	H	H	H	H	H	H	H	H
2	P	P	P	P	P	P	P	P	P	P	P	P	P
3	H	H	H	H	H	H	H	H	H	H	H	H	H
4	P	P	P	P	P	P	P	P	P	P	P	P	P
5	P	P	P	P	P	P	P	P	P	P	P	P	P
6	P	P	P	P	P	P	P	P	P	P	P	P	P
7	P	P	P	P	P	P	P	P	P	P	P	P	P
8	H	H	H	H	H	H	H	H	H	H	H	H	H
9	P	P	P	P	P	P	P	P	P	P	P	P	P
10	P	P	P	P	P	P	P	P	P	P	P	P	P
11	P	P	P	P	P	P	P	P	P	P	P	P	P
12	P	P	P	P	P	P	P	P	P	P	P	P	P
13	P	P	P	P	P	P	P	P	P	P	P	P	P
14	P	P	P	P	P	P	P	P	P	P	P	P	P
15	P	P	P	P	P	P	P	P	P	P	P	P	P
16	L	L	L	L	L	L	L	L	L	L	L	L	L

- Voltages, logic readings and waveforms taken in Power Up mode, Caps Lock and 80/40 Column keys down, Keyboard Switch up, no diskette in the Disk Drive "Apple IIc" and "Check Disk Drive" displayed on the Monitor screen.

Logic Probe Display
L = Low
H = High
P = Pulse
* = Open (No light On)
- (1) Probe indicates H if diskette is write protected or Head Position is operating.
(2) Probe indicates P when Head Position motor is operating.
(3) Readings taken after pressing Space Bar on keyboard.
(4) Probe indicates H when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
(5) Probe indicates H when Caps Lock key is up.
(6) Probe indicates P when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
(7) Probe indicates P when Computer is in "Basic" mode.
(8) Probe indicates L when the Control key is pressed.

LOGIC (Continued)

PIN NO.	IC UD9	PIN NO.	IC UD9	PIN NO.	IC UD11	PIN NO.	IC UD11	PIN NO.	IC UD16	PIN NO.	IC UD16	
1	L	17	L	1	L	17	H	1	L(3)	13	P	
2	L	18	P	2	P	18	P	2	L(3)	14	P	
3	H	19	P	3	H	19	P	3	L(3)	15	P	
4	H	20	P	4	H	20	P	4	H(3)	16	P	
5	*	21	P	5	*	21	P	5	L(3)	17	*	
6	P	22	P	6	P	22	P	6	L(3)	18	L	
7	P	23	P	7	P	23	P	7	H(3)	19	L	
8	H	24	P	8	H	24	P	8	H(3)	20	H(7)	
9	L	25	P	9	L	25	P	9	P	21	H	
10	H	26	H	10	H	26	H	10	P	22	L(5)	
11	H	27	P	11	H	27	P	11	P	23	H(3)	
12	H	28	H	12	H	28	H	12	L	24	H	
13	P			13	P							
14	P			14	P							
15	H			15	H							
16	L			16	L							

PIN NO.	IC UD18	PIN NO.	IC UD18	PIN NO.	IC UE1	IC UE4	IC UE6	IC UE8	IC UE9	IC UE11	PIN NO.	IC UE14	PIN NO.	IC UE14
1	H	17	P	1	P	P	P	P	P	H	1	L	21	P
2	L	18	P	2	P	P	P	P	P	P	2	L	22	P
3	L	19	P	3	P	P	P	P	P	P	3	P	23	P
4	H	20	P	4	H	P	P	P	P	P	4	P	24	P
5	L	21	P	5	L	P	P	P	P	P	5	P	25	P
6	P	22	L	6	L	P	P	P	P	P	6	H	26	P
7	P	23	L	7	L	P	P	P	P	P	7	L	27	P
8	P	24	H	8	L	P	L	P	P	P	8	L	28	H
9	P	25	L	9	L	P	H	P	P	P	9	P	29	H
10	P	26	L	10	H	P	P	L	L	L	10	*	30	H
11	P	27	H	11		P	P	P	P	P	11	L	31	L(4)
12	P	28	H	12		L	P	P	P	P	12	*	32	L
13	P			13		P	P	P	P	P	13	*	33	P
14	L			14		P	P	P	P	P	14	H	34	P
15	P			15		P	P	P	P	P	15	H	35	P
16	P			16		P	H	P	P	P	16	H	36	P
				17		P		P	P	P	17	P	37	H
				18		P		P	P	P	18	P	38	P
				19		P		P	P	H	19	P	39	P
				20		L		H	H	H	20	P	40	P
				21		L								
				22		P								
				23		P								
				24		H								

Voltages, logic readings and waveforms taken in Power Up mode, Caps Lock and 80/40 Column keys down, Keyboard Switch up, no diskette in the Disk Drive "Apple IIc" and "Check Disk Drive" displayed on the Monitor screen.

Logic Probe Display
L = Low
H = High
P = Pulse
* = Open (No light On)

- (1) Probe indicates H if diskette is write protected or Head Position is operating.
- (2) Probe indicates P when Head Position motor is operating.
- (3) Readings taken after pressing Space Bar on keyboard.
- (4) Probe indicates H when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (5) Probe indicates H when Caps Lock key is up.
- (6) Probe indicates P when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (7) Probe indicates P when Computer is in "Basic" mode.
- (8) Probe indicates L when the Control key is pressed.

TROUBLESHOOTING (Continued)

IC UC4. Vary the frequency of the function generator back and forth between 100Hz and 300Hz. The Data number and Status number on the Monitor screen should change to random values. If neither number changes, check for pulses at pin 8 of IC UC4, while injecting the 300Hz signal at pin 10 of IC UC4. If pulses are missing at pin 8 of IC UC4, check IC UC4. If pulses are present at pin 8 of IC UC4 check IC UD9.

GAME PADDLES DO NOT FUNCTION

Type in and run the following Basic program to check the operation of the game paddle circuits.

```
10 HOME
20 PRINT "PADDLE 0", PDL (0)
30 PRINT "PADDLE 1", PDL (1)
40 FOR T = 1 TO 300: NEXT T
50 GOTO 10
```

The program scans the two paddles and displays the paddle numbers (0 and 1) on the Monitor screen along with a number that is read from each paddle. The number read from each paddle should vary between 0 and 255 as that paddle is varied from MINIMUM to maximum. If paddles are not available, a 100K potentiometer can be used by connecting one end of the potentiometer to 5.0V (pin 2 of connector J3) and the center tap to one of the paddle inputs (pin 5 or 8 of connector J3).

If the paddle inputs are not functioning, check connector J3 for good connections. Check for pulses at pin 6 of the Paddle IC (UF2) and pin 7 of the Multiplexer IC (UF3) while the above program is running. If pulses are missing at either pin 6 of IC UF2 or pin 7 of IC UF3, check the Memory Management Unit IC (UE16). If pulses are present at pin 6 of IC UF2 and pin 7 of IC UF3 and Paddle 0 is not working, check for pulses at pin 5 of IC UF2 while the program is running. If pulses are missing at pin 5 of IC UF2, check Capacitor C47, Resistor R7 and IC UF2. If pulses are present at pin 5 of IC UF2, check IC UF3. If Paddle 1 is not working, check for pulses at pin 9 of IC UF2 while the program is running. If pulses are missing at pin 9 of IC UF2, check Capacitor C48, R8, and IC UF2. If pulses are present at pin 9 of IC UF2, check IC UF3.

JOYSTICKS DO NOT FUNCTION

Type in and run the following Basic program to check the operation of the joystick circuits.

```
10 HOME
20 PRINT "X POSITION", PDL (0)
30 PRINT "Y POSITION", PDL (1)
40 PRINT "SWITCH 0 =", PEEK (- 16287)
50 PRINT "SWITCH 1 =", PEEK (- 16286)
60 FOR T = 1 TO 300: NEXT T
70 GOTO 10
```

This program scans the joystick circuit and displays "X POSITION" and "Y POSITION", each followed by a number from 0 to 255. Also displayed on the Monitor is "SWITCH 0" and "SWITCH 1", each followed by a number. When the joystick is moved to the extreme right, the "X POSITION" will read 255 and it will read 0 when the joystick is moved to the extreme left. When the Joystick is moved to the extreme lower position, the "Y POSITION" will read 255 and it will read 0 when the joystick is at the top. The number displayed after "SWITCH 0" and "SWITCH 1" will be 127 or

less until the pushbutton is pressed. When the left pushbutton is pressed "SWITCH 0" will read 128 or more and "SWITCH 1" will read 128 or more when the top pushbutton is pressed.

If the joystick inputs are not functioning, check Connector J3 for good connections. Check for pulses at pin 6 of the Paddle IC (UF2) and at pin 7 of the Multiplexer IC (UF3) while the above program is running. If pulses are missing at either pin 6 of IC UF2 or pin 7 of IC UF3, check the Memory Management Unit IC (UE16). If the pulses are present at pin 6 of IC UF2 and pin 7 of IC UF3 and the X POSITION does not function, check for pulses at pin 5 of IC UF2 while the program is running. If the pulses are missing at pin 5 of IC UF2, check Capacitor C47, Resistor R7 and IC UF2. If the pulses are present at pin 5 of IC UF2, check IC UF3. If the Y POSITION does not function, check for pulses at pin 9 of IC UF2 while the program is running. If the pulses are missing at pin 9 of IC UF2, check Capacitor C48, Resistor R8 and IC UF2. If the pulses are present at pin 9 of IC UF2, check IC UF3. Also check the Input/Output Unit IC (UE14).

If the joystick pushbuttons do not function, check Connector J3 for good connections. Also check the joystick cable. Press the left pushbutton (Switch 0) and check for a logic High at pin 2 of IC UF1. If pin 2 of UF1 is logic High when the pushbutton is pressed, check for a logic High at pin 13 of UF1 when the pushbutton is pressed. If pin 13 of UF1 is not logic High, check IC UF1. If pin 13 of UF1 is logic High, check the Multiplexer IC (UF3).

Press the top pushbutton (Switch 1) and check for a logic High at pin 6 of IC UF1. If pin 6 of IC UF1 is logic High when the pushbutton is pressed, check for a logic High at pin 9 of IC UF1. If pin 9 of UF1 is not logic High, check IC UF1. If pin 9 of UF1 is logic High, check the Multiplexer IC (UF3).

MOUSE

The following program can be used to check the operation of the Mouse. Note: This program will not work with PRODOS. It will work with DOS 3.3 or without any DOS loaded into the Computer (press the Control and Reset keys to put the Computer in Basic mode).

```
10 PR# 4: PRINT CHR$(1)
20 IN#4
30 INPUT " "; X, Y, B
40 IN# 0: PR#0
50 HOME
60 PRINT "X", "Y", "BUTTON"
70 PRINT X, Y, B
80 FOR T = 1 TO 300: NEXT T
90 GOTO 30
```

The program will display the X and Y coordinates (0 to 1023) along with the button Status (4 = button released, 3 = button just released, 2 = button just pressed, and 1 = button held down) on the Monitor screen. The button Status number will be negative if a key on the keyboard is pressed.

If the Mouse is not working, check Connector J3 for good connections. If Connector J3 checks good, check for pulses at pins 4, 5, 8 and 9 of Connector J3 while moving the Mouse in a circle on a flat surface. Note: The above program does not have to be running. If pulses are missing at Connector J3, check the Mouse. If pulses are present at Connector J3, check for pulses at pin 7 of the Multiplexer IC

TROUBLESHOOTING (Continued)

(UF3) while the above program is running. If pulses are missing at pin 7 of IC UF3, check the Memory Management Unit IC (UE16). If pulses are present at pin 7 of IC UF3, check IC UF3 and the Input/Output Unit IC (UE14).

Mouse button does not work. Check for a logic Low at pin 7 of Connector J3 while pressing the Mouse button. If the reading is not correct check Connector J3 for good connections and check the switch inside the Mouse and the Mouse cable. If the logic reading is Low at pin 7 of Connector J3, check for a logic Low at pin 16 of the SJK IC (UF1) while pressing the Mouse button. If the reading is not correct at pin 16 of IC UF1 check IC UF1. If the reading is Low at pin 16 of IC UF1, check IC UF3.

MISCELLANEOUS ADJUSTMENTS

HUE ADJUST

Type in and run the following Basic program.


10 GR
20 FOR X=20 TO 22
30 READ Y: COLOR=Y
40 HLIN 0,39 AT X: NEXT X
50 DATA 2,9,12

LOW POWER INDICATOR

The green Power LED (CR2) will start flashing when the voltage at pin 5 of the Power Connector (J1) drops below 10.0V. To check the low power indicator circuits, connect a variable DC power supply (rated at 2 amps output) to Connector J1 (positive to pin 5 and negative to pin 2 of Connector J1). With the power supply output set to 12V, turn the Computer On. Reduce the power supply output to 9.5V. If the Power LED (CR2) is not flashing, check for 4.9V at pin 7 of the Low Power Detector IC (UB18) with the Power Supply set to 9.5V. If the reading is not correct check Resistors R11, R21, R13 and R22 and IC UB18. If the reading is correct at pin 7 of IC UB18, check Electrolytic C51, Resistors R12, R14 and R15 and Low Power Flasher IC (UC18).

ALIGNMENT TOOLS

GC ELECTRONICS
L29300, 9302, 9304

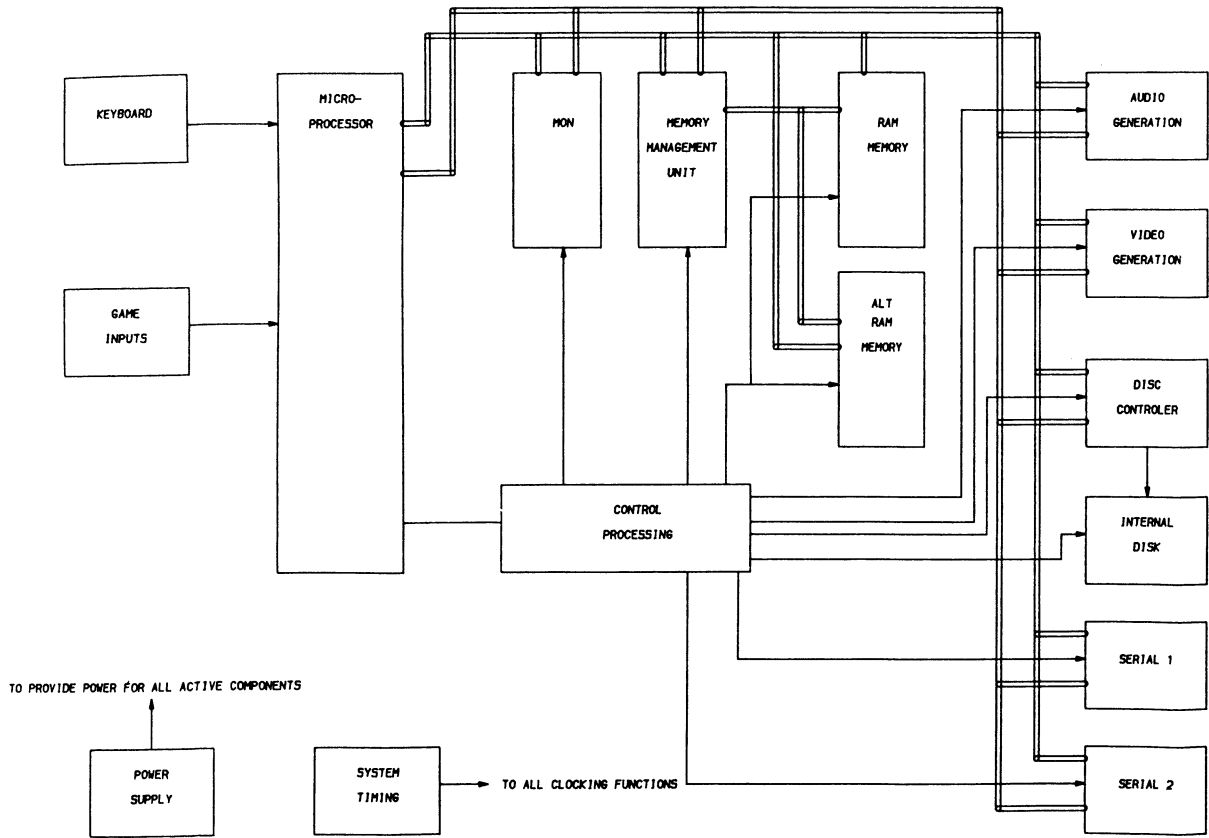


BLOCK DIAGRAM

LOGIC

PIN NO.	IC UA14	PIN NO.	IC UB16	PIN NO.	IC UB16	PIN NO.	IC UB18	IC UC4	IC UC7	IC UC9	IC UC11	IC UC18	IC UD2	IC UD4	IC UD6
1	L	1	P	21	L	1	L	L	H	H	L	L	H	P	P
2	*	2	P	22	L	2	H	L	P	H	H	L	L	P	P
3	H	3	P	23	L	3	H	H	*	H	L	L	P	P	P
4	H	4	L	24	L	4	L	H	*	P	H	L	P	P	P
5	H	5	L(4)	25	L	5	H	P	*	H	H	H	P	P	L
6	H	6	L(3)	26	L	6	H	L	*	H	L	L	P	P	H
7	L	7	L(3)	27	L	7	L	L	H	L	L	L	H	H	L
		8	H(3)	28	H(8)	8	H	H	L	H	L	H	H	H	P
		9	L(3)	29	H	9		L	H	H	H		H	H	H
		10	L(3)	30	H	10		L	H	L	H		P	L	L
		11	L(3)	31	L(6)	11		L	P	H	L		P	L	H
		12	H(3)	32	P	12		P	P	*	H		P	P	L
		13	H(3)	33	P	13		H	P	*	H		P	P	L
		14	H(3)	34	P	14		H	P	H	H		L	P	P
		15	L	35	P	15			P				P	P	H
		16	L(6)	36	P	16			H				P	P	H
		17	L	37	P	17							P	P	H
		18	L	38	P	18							P	P	H
		19	L	39	P	19							H	P	H
		20	L	40	P	20							H	P	H
						21							H		H
						22							H		H
						23							H		H
						24							P		H
						25							P		
						26							H		
						27							L		
						28							L		

Voltages, logic readings and waveforms taken in Power Up mode, Caps Lock and 80/40 Column keys down, Keyboard Switch up, no diskette in the Disk Drive "Apple IIc" and "Check Disk Drive" displayed on the Monitor screen.
Logic Probe Display
L = Low
H = High
P = Pulse
* = Open (No light On)
(1) Probe indicates H if diskette is write protected or Head Position is operating.

- (2) Probe indicates P when Head Position motor is operating.
- (3) Readings taken after pressing Space Bar on keyboard.
- (4) Probe indicates H when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (5) Probe indicates H when Caps Lock key is up.
- (6) Probe indicates P when any key pressed except Control, Shift, Open Apple, Closed Apple and Reset keys.
- (7) Probe indicates P when Computer is in "Basic" mode.
- (8) Probe indicates L when the Control key is pressed.

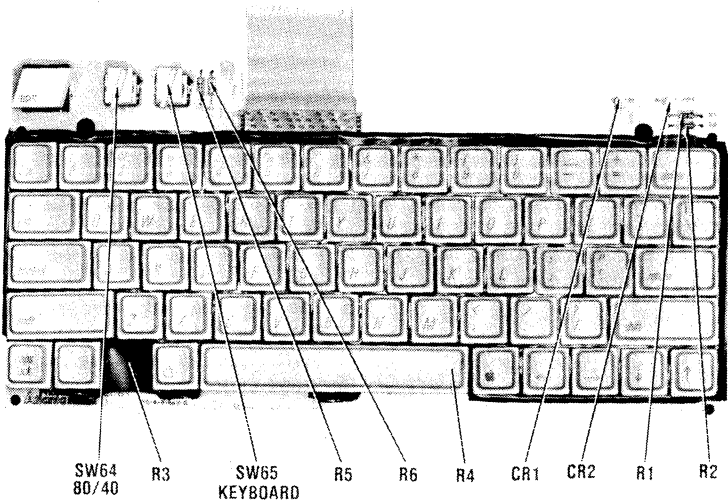

KEYBOARD

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

COILS & TRANSFORMERS

ITEM No.	FUNCTION	MFGR. PART No.	OTHER IDENTIFICATION	NOTES
T1	Switching Feedback Feedback		85210202650 (1)	
T2			85210202670 (1)	
T3				

(1) Number on unit.

FUSE DEVICES

ITEM NO.	DESCRIPTION	MFGR. PART NO.		NOTES
		DEVICE	HOLDER	
F1	SYSTEM BOARD 10A @ 32V Fast Acting			

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		MFGR. PART No.	QUAM PART No.	
SP1	1.5" PM 8 Ohms .1W	A0102-1 (1)		

(1) Number on unit.

CABINET & CABINET PARTS (When ordering specify model, chassis & color)

MISCELLANEOUS

ITEM No.	PART NAME	MFGR. PART No.	NOTES
OS1 S1 Y1	SYSTEM BOARD	CK0044AC	14.31818MHz Power, On-Off Future Optional Part
		A2M4017	System Board Input (120VAC, 60Hz, 25W, .2A) Output (15VDC, 18W, 1.2A)
	KEYBOARD		
CR1	LED		Disk Use, Red.
CR2	LED		Power, Green.
SW1	Switch		Keyboard Keys
thru SW62 SW63 SW64 SW65	Switch Switch Switch		Reset Key 80/40 Column Select Key Keyboard Select Key

PARTS LIST AND DESCRIPTION

When ordering parts, state Model, Part Number, and Description

SEMICONDUCTORS (Select replacement for best results)

ITEM No.	TYPE No.	MFGR. PART No.	REPLACEMENT DATA					
			GENERAL ELECTRIC PART No.	NTE PART No.	ECG PART No.	RCA PART No.	WORKMAN PART No.	ZENITH PART No.
CR1 CR2,3 Q1 UA14 UB13 UB16 UB18 UC4 UC7 UC9 UC11 UC18 UD2 UD4 UD6 UD9,11 UD16 UD18 UE1 UE4 UE6 UE8,9 UE11 UE14	SYSTEM BOARD		GE-512	NTE156 NTE584 NTE123A	ECG156 ECG584 ECG123A	SK3051/156 -SK3444/123A	WEP4008/5809 WEP736/123A	212-Z9000 121-Z9000A
			GE-961	NTE961	ECG961	SK3671/961		HE-442-630
				NTE922M NTE75189	ECG922M ECG75189	SK3668/922M SK5189/75189		HE-442-75 HE-443-795
			74LS161A 74LS32	NTE74LS161A NTE74LS32 NTE75188	ECG74LS161A ECG74LS32 ECG75188	SK74LS161 SK74LS32 SK5188/75188		HE-443-795 HE-443-757 HE-443-875 HE-443-794
			GE IC-269	NTE955M	ECG955M	SK3564/955M	WEP2119/955M	221-Z9042
		</						

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

SEMICONDUCTORS (Select replacement for best results)

ITEM No.	TYPE No.	MFR. PART No.	REPLACEMENT DATA					
			GENERAL ELECTRIC PART No.	NTE PART No.	ECG PART No.	RCA PART No.	WORKMAN PART No.	ZENITH PART No.
UE16 UE18 UF1 UF2 UF3 UF4 thru UF19	344-0011 65Q02A 2401 NE556N SN74LS251NDS MT4264 6664	SWITCHING POWER SUPPLY BOARD		NTE978 NTE74LS251	ECG978 ECG74LS251 ECG6664	SK3689/978		221-29152
D1 D2 D3 D4,5 D6	1N4606R G18341 1N4606R G18341 1N4606R		GE-300	NTE177	ECG177	SK9091/177	WEP1062/177	103-131
D7 D8 D9	S5S4M G13403 G18403		GE-300	NTE177	ECG177	SK9091/177	WEP1062/177	103-131
D10,11 IC1	1N4606R TL431CLP		GE-300	NTE177	ECG177	SK9091/177	WEP1062/177	103-131
Q1 Q2 Q3 Q4 Q5 Z1	2SA673A X44C758 BUV26 2SA673A 2SB561C 5B7		GE-269	NTE290A	ECG290A	SK9132	WEP911/290A	121-Z9003*
			GE-269 GE-272	NTE290A NTE298	ECG290A ECG298	SK9132 SK3450/298	WEP911/290A WEP915/298	121-Z9003* 121-Z9103

* Lead configuration may vary from original.

WIRING DATA

Shielded Hook-up Wire Use BELDEN No. 8401 or 8421 (Single-Conductor)
8208 (Two-Conductor)
9534 (Four-Conductor)
General-use Unshielded Hook-up Wire Use BELDEN No. 8529 (Solid) Available In 13 Colors
75-Ohm Input Lead Use BELDEN No. 8241

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part Number, and Description

CAPACITORS Items Not Listed Are Normally Available At Local Distributors.

ITEM No.	RATING	MFGR. PART No.	ITEM No.	RATING	MFGR. PART No.
C46	47 N470 50V 5%				

CONTROLS (All wattages ½ watt, or less, unless listed)

ITEM NO.	FUNCTION	RESISTANCE	MFGR. PART NO.	NOTES
R3	SYSTEM BOARD Volume Control	500		


RESISTORS (Power and Special)

ITEM No.	RATING	REPLACEMENT DATA		
		MFGR. PART No.	NTE PART No.	WORKMAN PART No.
R11 R13 R21 R22 RP1 RP2 RP3 RP4	SYSTEM BOARD 11K 1½ 1/4W Metal Film 10K 1½ 1/4W Metal Film 10K 1½ 1/4W Metal Film 100K 1½ 1/4W Metal Film Resistor Network Resistor Network Resistor Network Resistor Network	(1) (2) (3) 112-0315 (4)		
R28 R29	SWITCHING POWER SUPPLY BOARD 2700 2½ 1/4W Metal Film 2700 2½ 1/4W Metal Film		QW227 QW227	22-2246 22-2246

- (1) Contains nine 1000
(2) Contains nine 3300
(3) Contains seven 1000
(4) Number on unit

COILS (RF-IF)

ITEM No.	FUNCTION	MFGR. PART No.	ITEM No.	FUNCTION	MFGR. PART No.
L1 L2 L3 L4 L5 L6	SYSTEM BOARD Line Choke Hue Adjust Peaking RF Choke RF Choke RF Choke RF Choke		L1 L2 L3 L4 L5	SWITCHING POWER SUPPLY BOARD RF Choke RF Choke RF Choke RF Choke RF Choke	

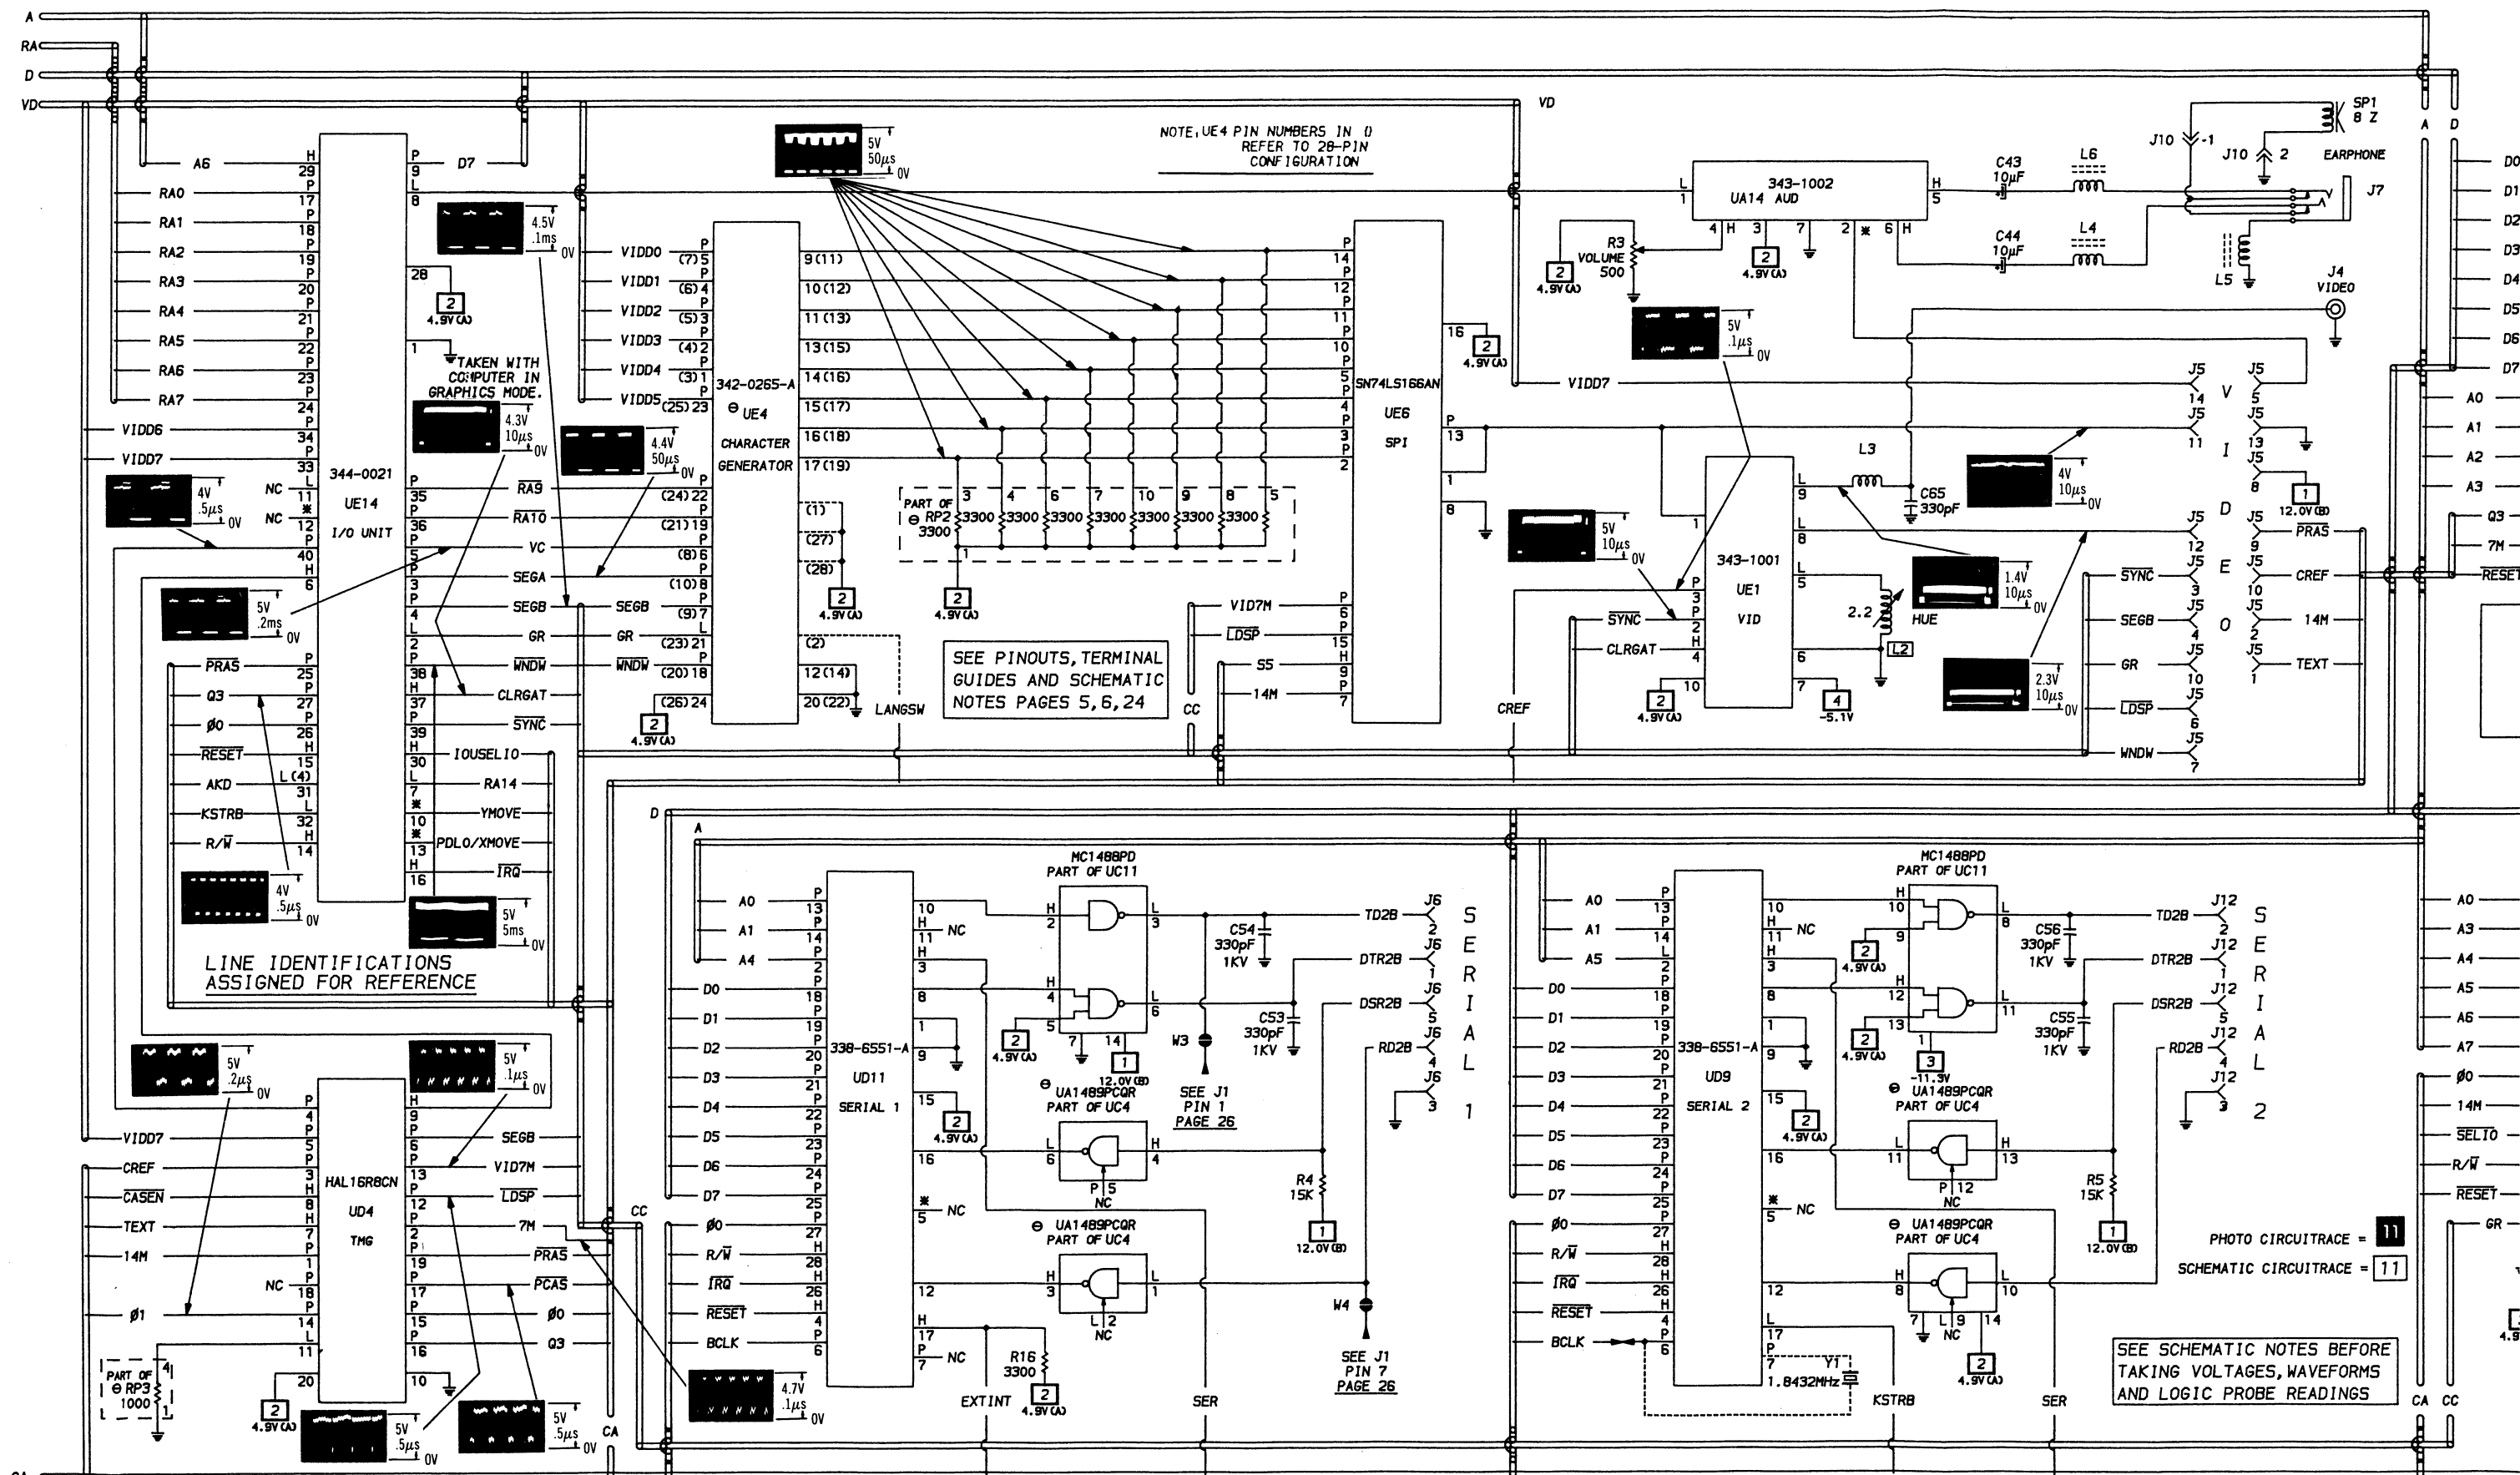


CA
A PHOTOFAC STANDARD NOTATION SCHEMATIC

WITH CIRCUITRACE

© Howard W. Sams & Co., Inc. 1985

SYSTEM BOARD

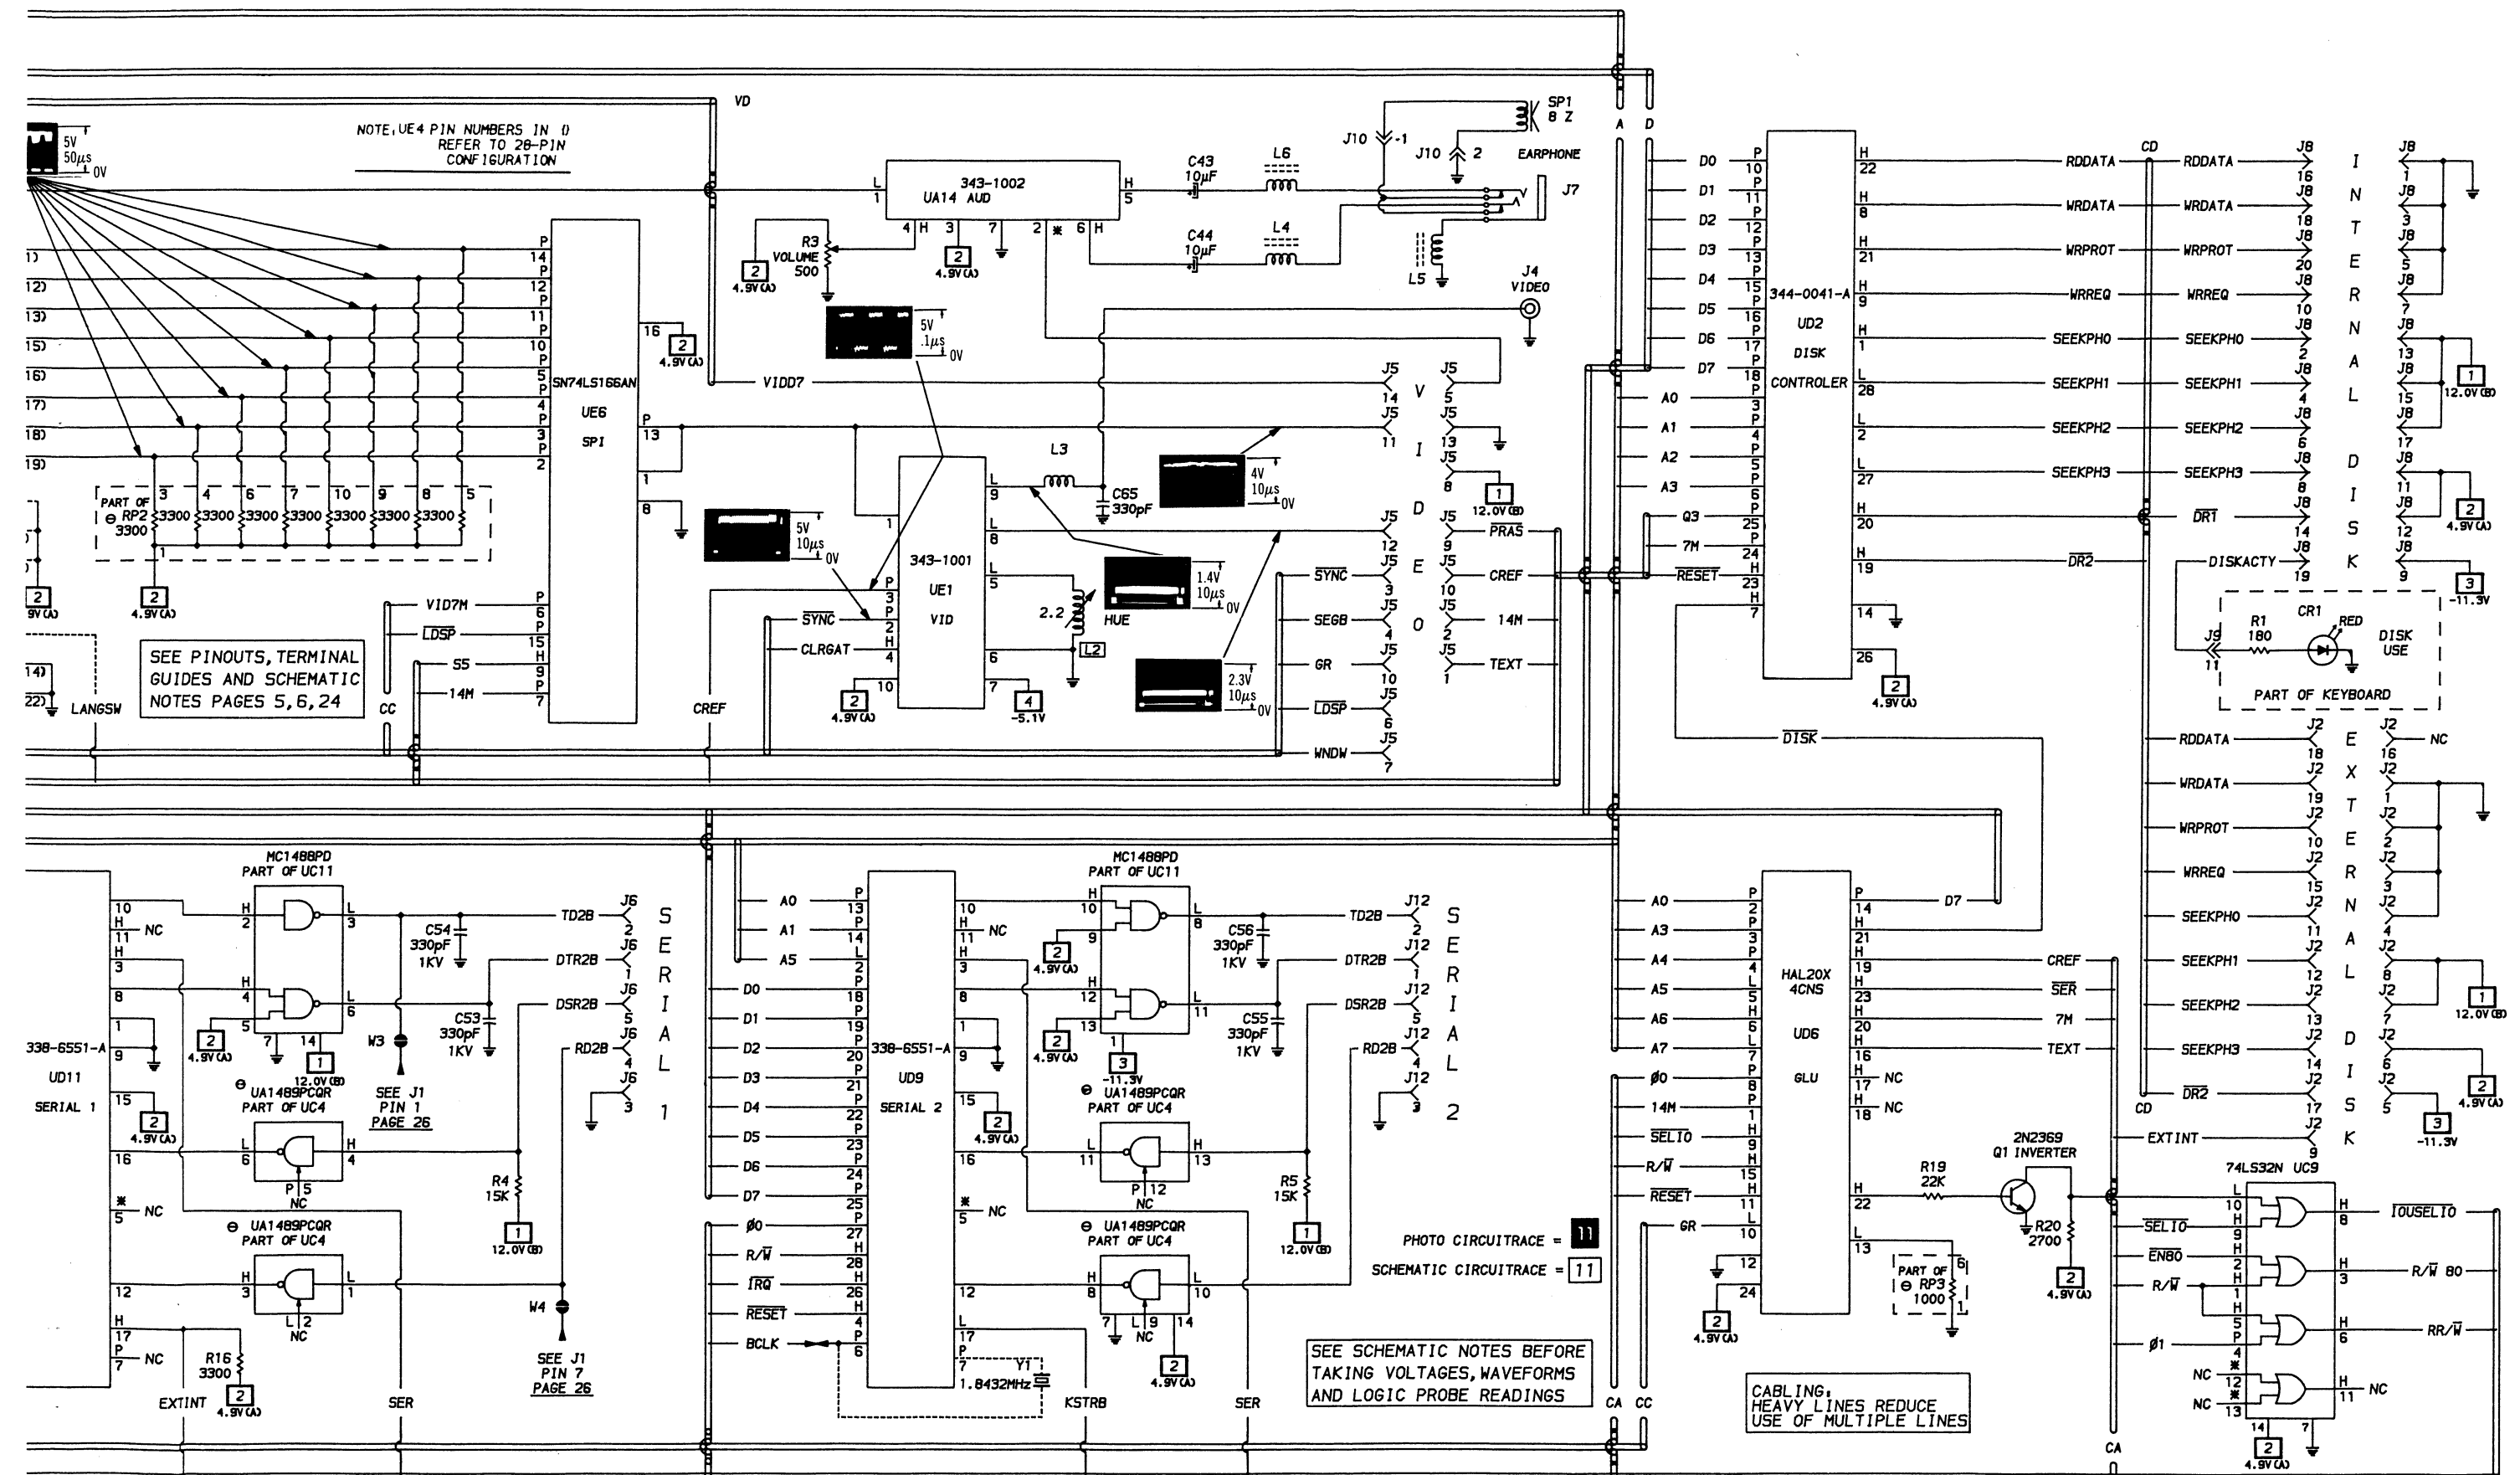

APPLE
SYSTEM BOARD MODEL IIc

PRELIMINARY SERVICE CHECKS (Continued)
GENERAL OPERATING INSTRUCTIONS

POWER UP

The Computer will boot up automatically on any bootable diskette that is in the Disk Drive when turned On. If no diskette is in the Disk Drive when the Computer is turned On, the Computer will come up with "Apple IIc" and "Check Disk Drive" on the Monitor screen. Press the Control and Reset keys at the same time to put the Computer in Basic mode.

SWITCHING FROM BASIC TO MONITOR MODE

Type CALL-151 and press RETURN key. An asterisk will appear on the Monitor screen indicating the Computer is in the Monitor mode.

SWITCHING FROM MONITOR TO BASIC MODE

Press the CONTROL and C keys at the same time, then press the RETURN key (any Basic program already in memory, before going to the Monitor mode, will remain in memory).

Press the CONTROL and B keys at the same time, then press the RETURN key (any Basic program in memory will be lost).

RESET

Press the CONTROL and RESET keys at the same time to reset the Computer to Basic mode. Press the OPEN APPLE key (located on the left side of SPACE bar), CONTROL key and RESET key at the same time to reboot the system on any bootable diskette in the Disk Drive.

OPERATING THE DISK SYSTEM FROM BASIC MODE (DOS3.3)

Type CATALOG and press the RETURN Key to get a list of the programs which are on the diskette. Type CATALOG, D1 for Disk Drive 1 or CATALOG, D2 for Disk Drive 2 if the current Disk Drive is not the one desired.

Type LOAD and the program name, then press the RETURN key to load a program from the diskette.

Type SAVE and the program name, then press the RETURN key to save a program on the diskette.

BOOTING UP THE DISK OPERATING SYSTEM (DOS)

Insert a diskette containing a DOS into the Disk Drive and turn On the Computer. The Computer will automatically load the DOS and come up in Basic mode if DOS3.3 is used. If PRODOS is used the Computer will come up with menu of PRODOS features on the Monitor screen.

To boot from Basic mode, type PR#6 or 1N#6 and press the RETURN key. If there is no diskette in the Disk Drive, the Disk Drive will stop and the message "Check Disk Drive" will appear on the Monitor screen.

DOS can also be rebooted by pressing the OPEN APPLE key (located on left side of SPACE bar), CONTROL key and RESET key at the same time.

USING BLANK DISKETTES

A blank diskette must be initialized (DOS3.3) or Formatted (PRODOS) before it can be used to save data. To initialize a diskette using DOS3.3, boot the disk operating system from a diskette containing DOS3.3, remove the DOS3.3 diskette and put the blank diskette into the Disk Drive. Type INIT HELLO and press the RETURN key. The diskette will be initialized when the drive stops. NOTE: Any previous information on diskette will be over written and lost when initialized.

If PRODOS is being used, select the PRODOS FILER (press F key) from the menu that comes up when PRODOS is booted up. Select Volume Commands (press V key) from the second menu that comes up and then select Format A Volume (press F key) from the third menu that comes up. Insert the blank diskette into the Disk Drive and follow the instructions on the Monitor screen to format the diskette.

80/40 COLUMN SWITCH

This switch takes effect only if the program being used checks to see if the switch is down (40 column) or up (80 column). The program then automatically sets the 40 or 80 column mode according to the switch setting.

To select 80 column mode manually press the ESC key then press the 8 key or type PR#3 and press the Return key.

To select 40 column mode manually press the ESC key then press the Control and Q keys at the same time or type PR#0 and press the Return key.

DISASSEMBLY INSTRUCTIONS

CABINET REMOVAL

Turn the Computer upside down. Remove four screws from under the keyboard and two screws located in front of the handle. Turn the Computer right side up and extend the handle. Release the front latch tab. Lift the top front up and back to clear the rear panel.

DISK DRIVE REMOVAL

Remove four screws from cabinet bottom. Disconnect Disk Drive from System board and remove Disk Drive.

POWER SUPPLY REMOVAL

Remove two screws securing Switching Power Supply. Slide Switching Power Supply back and remove from Connector. To remove Switching Power Supply board from shield, remove the two screws near the edge connector and loosen the screw on the side of the shield. Slide the shield backward to free lock tabs and carefully separate from board.

SYSTEM BOARD REMOVAL

Disconnect the speaker. Remove nine screws holding System board and remove.

PRELIMINARY SERVICE CHECKS

This data provides the user with a time-saving service tool which is designed for quick isolation and repair of Computer malfunctions.

Check all interconnecting cables for good connection and correct hookup before making service checks.

Disconnect all peripherals except the Monitor from the Computer to eliminate possible external malfunctions.

Replacement or repair of the Power Pack, Switching Power Supply Module, System Board, Keyboard, or Connectors may be necessary after the malfunction has been isolated.

TEST EQUIPMENT AND TOOLS

TEST EQUIPMENT

Digital Volt/Ohm Meter
Logic Probe

TOOLS

Low Wattage Soldering Iron
Desoldering Equipment
Head Cleaning Equipment
Switch Cleaner (non spray type)
Phillips Screwdriver
Flat Blade Screwdriver
IC Insertion and Removal Tools 24, 28 and 40 pin

REPLACEMENT PARTS AND DESCRIPTION

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
DISK DRIVE			POWER SUPPLY		
M1		Drive Motor	A2M4017		Power Pack
			AA7341B		Switching Power Supply
MONITOR			SYSTEM BOARD		
D701 thru			C57		Electrolytic, 1000μF 25V
D704		Rectifier Diode, G2GD1	C59		Capacitor, .1μF 50V
F701		Fuse, 1.5A @250V	CR1		Diode, 1N5400
F771		Fuse, 750mA @250V	F1		Fuse, 10A GFA Subminiature
Q18		Horizontal Output Transistor, BU406	SP1		Pigtail
Q701		DC Voltage Regulator Transistor, BD534L	SW1		Speaker
			UD18	342-0272-A	Power Switch
			UE4	342-0265-A	IC, ROM, 27128A
			UE14	344-0021	IC, Character Generator
			UE16	344-0011	IC, Input/Output Unit
			UE18		IC, Memory Management Unit
					IC, CPU, 65C02

SAMS™ Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

© 1985 Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.
Printed in U.S. of America.

85CS14956 DATE 9-85

APPLE
MODEL IIc
CSCS7

APPLE
MODEL IIc
CSCS7

PRELIMINARY SERVICE CHECKS (Continued)
SERVICE CHECKS

SEE INTERCONNECTING DIAGRAM AND PHOTOS TO MATCH THE NUMBER IN THE CIRCLES WITH THOSE IN THE FOLLOWING DATA FOR SERVICE CHECKS TO BE PERFORMED.

1 COMPUTER DEAD

- (A) Unplug the Power Pack from the Computer and check for 18.2V between pins 2 and 6 of Power Pack Plug P1. If the 18.2V is missing, replace the Power Pack.
- (B) If 18.2V is present at Plug P1, plug the Power Pack back into the Computer. With the Computer turned Off, check for 17.5V at the junction of Fuse F1 and Capacitor C59. If the voltage is missing at the junction of F1 and C59, check Fuse F1.
- (C) If the fuse is open, unplug the Power Pack (P1) and check for a short to ground at the junction of F1 and C59. If there is a short, remove the Switching Power Supply Module and check the junction of F1 and C59 again for a short. If the short is removed, replace the Switching Power Supply Module.
- (D) If the short is still present after the Switching Power Supply is removed, check Diode CR1 and Capacitors C57 and C59 on the System board.
- (E) If 17.5V is present at the junction of F1 and C59, check Power Switch (S1). If the Power Switch checks good, replace the Switching Power Supply Module.
- (F) Check the CPU IC (UE18), the MON IC (UD18), the Memory Management Unit IC (UE16) and the Input/Output Unit IC (UE14) by substitution.

2 VIDEO DISPLAY (Computer)

- (A) If there is no video, check Connector J4 on the System board and the video interface cable.
- (B) If there is no video or the characters displayed on the screen are not correct, check Character Generator ROM IC (UE4) by substitution.

3 VIDEO DISPLAY (Monitor)

- (A) If there is no video, check Connector J1 on the Monitor board and the video interface cable.
- (B) Turn the Monitor On and check for 120VAC across the primary winding of Power Transformer (T2). If 120VAC is missing, check Fuse F771, Power Switch (SW1) and Line Choke (L771). Also check for an open power cord.
- (C) If Fuse F771 is open, check for a shorted Diode (D701 thru D704) in the DC power supply on the Monitor board.

- (D) If 120VAC is present across the primary winding of Power Transformer T2, check for 12.0V on both sides of Fuse F701. If 12.0V is missing on one side of F701, check Fuse F701. If F701 is open, check for a possible short on the load side of the power supply. If no short is found, replace Fuse F701.
- (E) If 12.0V is missing from both sides of Fuse F701, check Power Transformer T2 for an open winding. Also check Diodes D701 thru D704 and Regulator Transistor Q701. Adjust B+ Control VR701 for 12.0V at Fuse F701.
- (F) Check the voltages on the CRT socket and on the HV anode. Make sure that the CRT socket is making good contact with the CRT pins, especially filament pins 3 and 4. If the CRT voltages are normal, check the CRT with a CRT tester.
- (G) If there is no high voltage at the HV anode, check Horizontal Output Transistor Q18.
- (H) Check the adjustment of the Sub-Brightness Control (VR503) and the Sub-Contrast Control (VR101).

4 KEYBOARD

- (A) If the keyboard is dead or one group of keys does not work, check Connector J9 on the System board and Connector J1 on the keyboard. Also check the keyboard interface cable.
- (B) If one key does not work or is erratic, clean the keyswitches with contact cleaner. Use an ohmmeter to check for an open keyswitch.
- (C) If the wrong character appears on the Monitor screen when a key is pressed, check the Character Generator ROM IC (UE4) by substitution.

5 DISK DRIVE

WARNING

It is possible for a defective Disk Drive to write on or erase information on a diskette even when the diskette is write protected. Check a questionable Disk Drive by first using a diskette that contains programs that have been duplicated on another diskette.

- (A) Disk Drive is dead. Check Connector J1 on the Disk Drive and Connector J8 on the System board. Also check the Disk Drive interface cable.
- (B) Check for 11.5V at pin 13 of Connector J1, 5.0V at pin 11 of Connector J1, and -11.25V at pin 9 of Connector J1. Also check for a logic Low reading at pin 14 of Connector J1. If the voltages and logic reading are normal, replace or repair the Disk Drive Analog board.

PRELIMINARY SERVICE CHECKS (Continued)

PREVENTATIVE MAINTENANCE

ENVIRONMENT

Computers perform best in a clean, cool area that is below 80 degrees Fahrenheit and free of dust and smoke particles. Even though home Computers are not affected by cigarette smoke as much as commercial Computers are affected, it is better to maintain a smoke-free area around the Computer. Do not block cabinet vents of any of the Computer system; Computer, Monitor, Printer, or other power devices.

ELECTRICAL POWER

Variations in the line voltage can affect the Computer. Try to avoid these fluctuations by using an AC receptacle that is on a power line not used by appliances or other heavy current demand devices. A power-surge protector, power-line conditioner, or non-interruptible power supply may be needed to cure the problem. Do not switch power On and Off frequently.

KEYBOARD

Liquids spilled into the Keyboard can ruin it. Immediately after a spill occurs, disconnect the Computer power plug from AC power outlet. Then, if circuitry or contacts are contaminated, disassemble the Keyboard and carefully rinse the Keyboard printed circuit board with distilled water and let it dry. Use a cotton swab to clean between the keys. Use a non-abrasive contact cleaner and lint-free wipers on accessible connectors and contacts.

DISK DRIVES

Clean the read/write heads of the Disk Drives about once a month or after 100 hours usage. Use only an approved head cleaning kit.

Handle carefully to preserve proper disk head alignment. A sudden bump or jolt to the Disk Drives can knock the disk head out of alignment. If the disk drive must be transported, place an old disk in slot and close door during transport.

Store disks in their protective covers and never touch the disk surface. Observe the disk handling precautions usually found on the back of disk protective covers.

PRINTERS

Carefully vacuum the Printer regularly. Wipe surface areas clean using a light all-purpose cleaner. Do not oil the machine. The oil will collect abrasive grit and dust. The dust will act as a blanket. This can cause components to overheat and fail.

STATIC ELECTRICITY

Static electricity discharge can affect the Computer. In order to minimize the possibility, use anti-static mats, sprays, tools and materials, and maintain good humidity in the Computer environment.

MONITOR

Use an isolation transformer with any Monitor that does not come as part of the system since some Monitors use a HOT chassis (chassis connected to one side of the AC line). The face of the Monitor should never be left on for long periods of time at high brightness level except when pattern is being changed periodically. Use caution when cleaning anti-glare screens, to preserve the glare-reduction feature.

APPLE
MODEL IIC

XIV

- (C) Disk Drive operation is erratic. Check Connector J8 on the System board and Connector J1 on the Disk Drive.
- (D) Clean the head and check the Spindle Speed Adjustment (VR1), see "Miscellaneous Adjustments".
- (E) Will not write or read. Check Connector J3 on the Disk Drive Analog board for good connections. It may be necessary to repair or replace the Disk Drive Analog board.
- (F) Writes on a write protected diskette. Check for a shorted write protect sensor. It may be necessary to repair or replace the Disk Drive Analog board.
- (G) Disk Drive will not run. Check for a broken drive belt. Check for approximately 6.3V at the red Drive Motor lead on the Motor Speed Control board. If the voltage is present, check the Drive Motor by substitution. If the voltage is missing, it may be necessary to replace or repair the Motor Speed Control board.

(A) No sound. Check the Speaker (SP1), Connector J10 and the Earphone jack (J7) for good connections.

(A) If Serial Port is not working, check Connector J6 for good connections.

(A) If Serial Port 2 is not working, check Connector J12 for good connection.

(A) Type in and run the following Basic program to check the operation of the game paddle circuits.

This program scans the two paddles and displays the paddle numbers (0 and 1) on the Monitor screen along with a number that is read from each

(D) If the pulses are present at pin 6 of IC U2 and pin 7 of IC 3F and the paddles are not functioning, check the IOU (Input/Output Unit) IC (UE14) by substitution.

(A) Type in and run the following Basic program to check the Mouse circuits. NOTE: This program will not work with PRODOS.

This program will print the X and Y coordinates (0 to 1023) and the button Status (4=button released, 3=button just released, 2=button just pressed, and 1=button held down) on the Monitor screen. The button Status number will be negative if a key on the keyboard is pressed.

(D) If the pulses are present at pin 7 of IC UF3, check IOU (Input/Output Unit) IC (UE14) by substitution.

PRELIMINARY SERVICE CHECKS (Continued)
SERVICE CHECKS (Continued)

11 JOYSTICKS

(A) Type in and run the following Basic program to check the operation of the joystick circuits.


```
10 HOME
20 PRINT "X POSITION", PDL(0)
30 PRINT "Y POSITION", PDL(1)
40 PRINT "SWITCH 0=", PEEK (- 16287)
50 PRINT "SWITCH 1=", PEEK (- 16286)
60 FOR T=1 TO 300: NEXT T
70 GOTO 10
```

This program scans the joystick circuit and displays "X POSITION" and "Y POSITION", each followed by a number from 0 to 255. Also displayed on the Monitor is "SWITCH 0" and "SWITCH 1", each followed by a number. When the joystick is moved to the extreme right, the "X POSITION" will read 255 and it will read 0 when the joystick is moved to the extreme left. When the joystick is moved to the extreme lower position, the "Y POSITION" will read 255 and will read 0 when the joystick is at the top. The number displayed after "SWITCH 0" and "SWITCH 1" will be 127 or less until the pushbutton is pressed. When the left pushbutton is pressed "SWITCH 0" will read 128 or more and "SWITCH 1" will read 128 or more when the top pushbutton is pressed.

- (B) If the joystick inputs are not functioning, check Connector J3 for good connections. Also check the joystick cable.
- (C) With the above program running, check for pulses at pin 6 of the Paddle IC (UF2) and at pin 7 of the MUX (Multiplexer) IC (UF3). If the pulses are missing at either pin 6 of UF2 or pin 7 of UF3, check the MMU (Memory Management Unit) IC (UE16) by substitution.
- (D) If pulses are present at pin 6 of IC UF2 and at pin 7 of IC UF3 and the joysticks are not functioning, check the IOU (Input/Output Unit) IC (UE14) by substitution.
- (E) With the above program running, check for pulses at pins 5 and 9 of Paddle IC (UF2). If the pulses are present at both pins 5 and 9 of IC UF2, check the IOU (Input/Output Unit) IC (UE14) by substitution.


12 LOW POWER MONITOR

(A) If the green Power LED is flashing, check the DC power at pin 5 of Power Connector J1. If the voltage is below 10V, replace or repair the Power Pack. If the voltage is above 10V, the Low Power Detector circuit is defective.

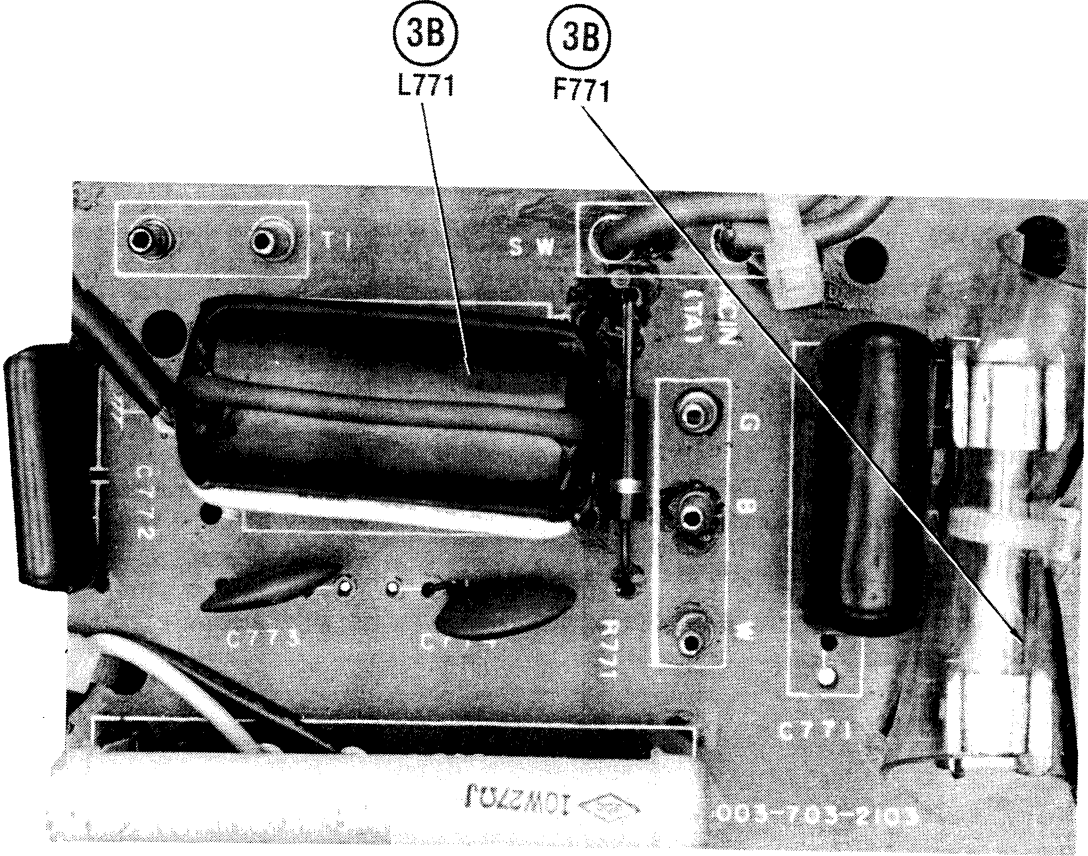


MONITOR POWER SUPPLY BOARD

PRELIMINARY SERVICE CHECKS (Continued)

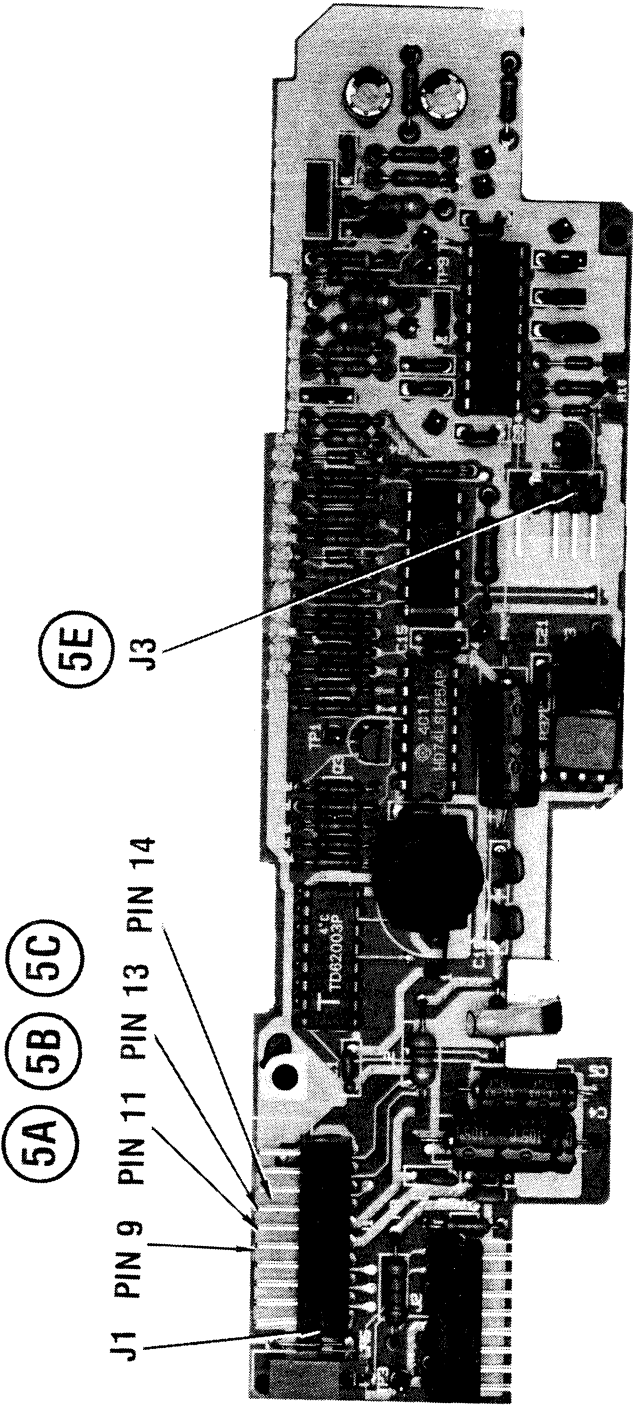


DISK DRIVE ANALOG BOARD

PRELIMINARY SERVICE CHECKS (Continued)

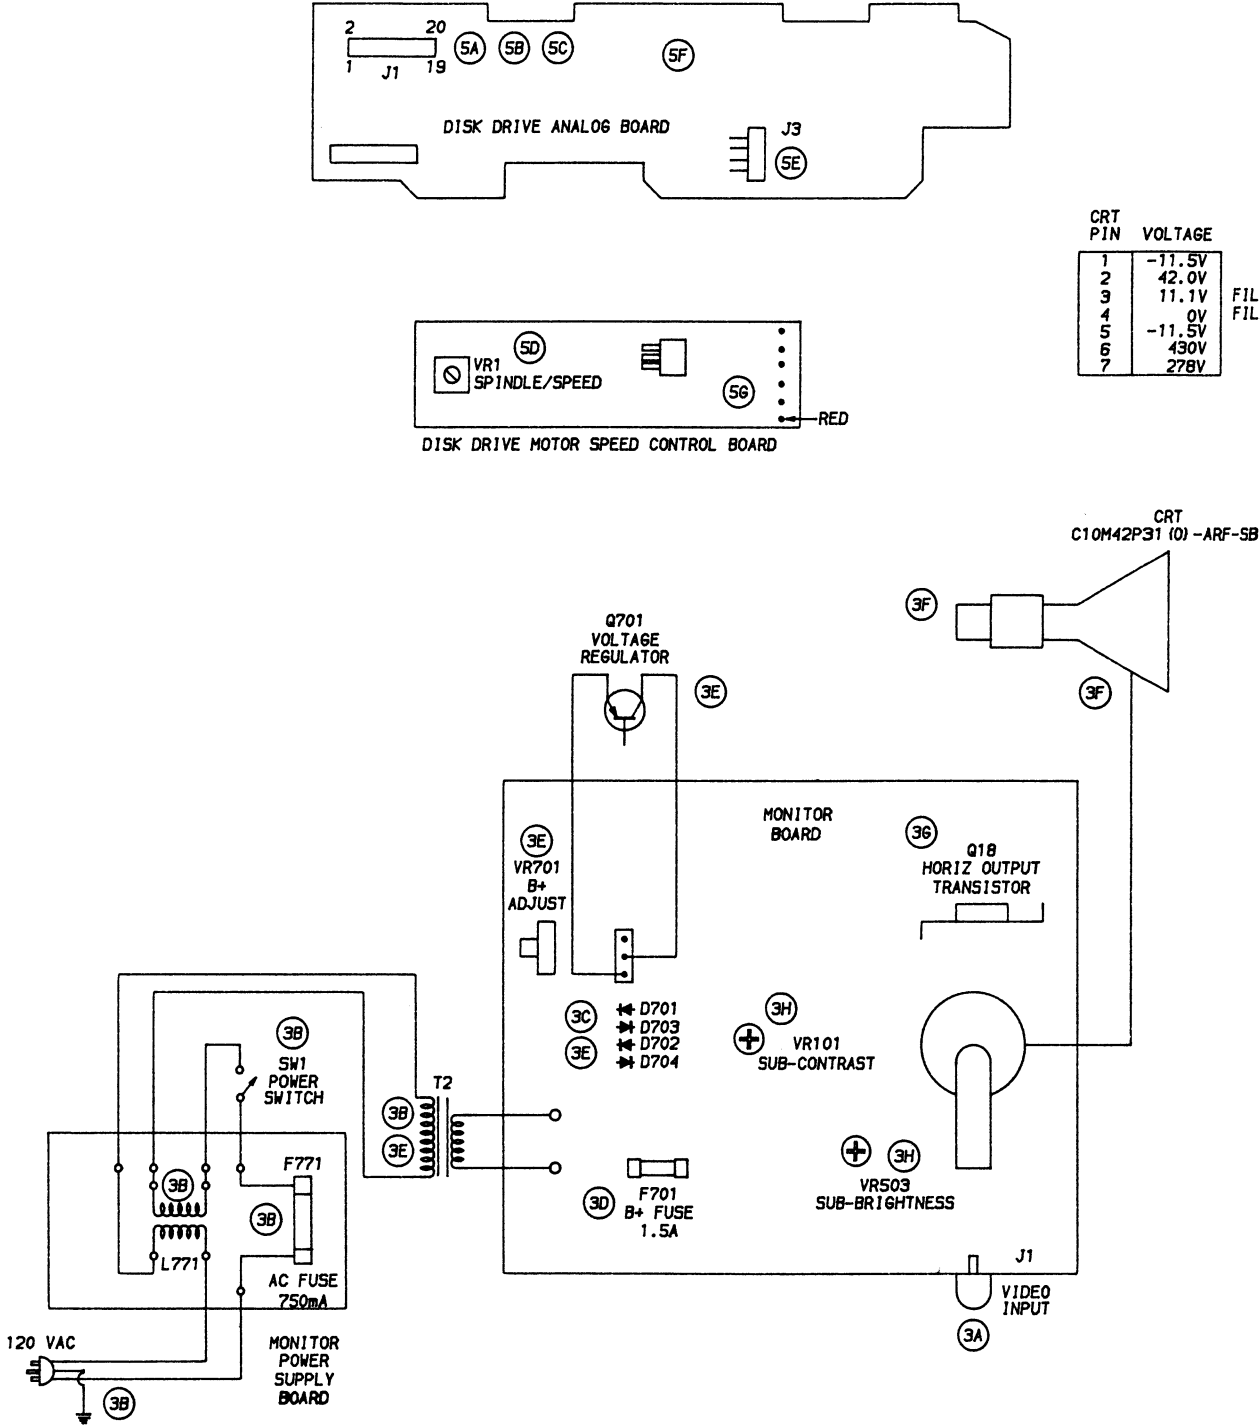

PRELIMINARY SERVICE CHECKS (Continued)

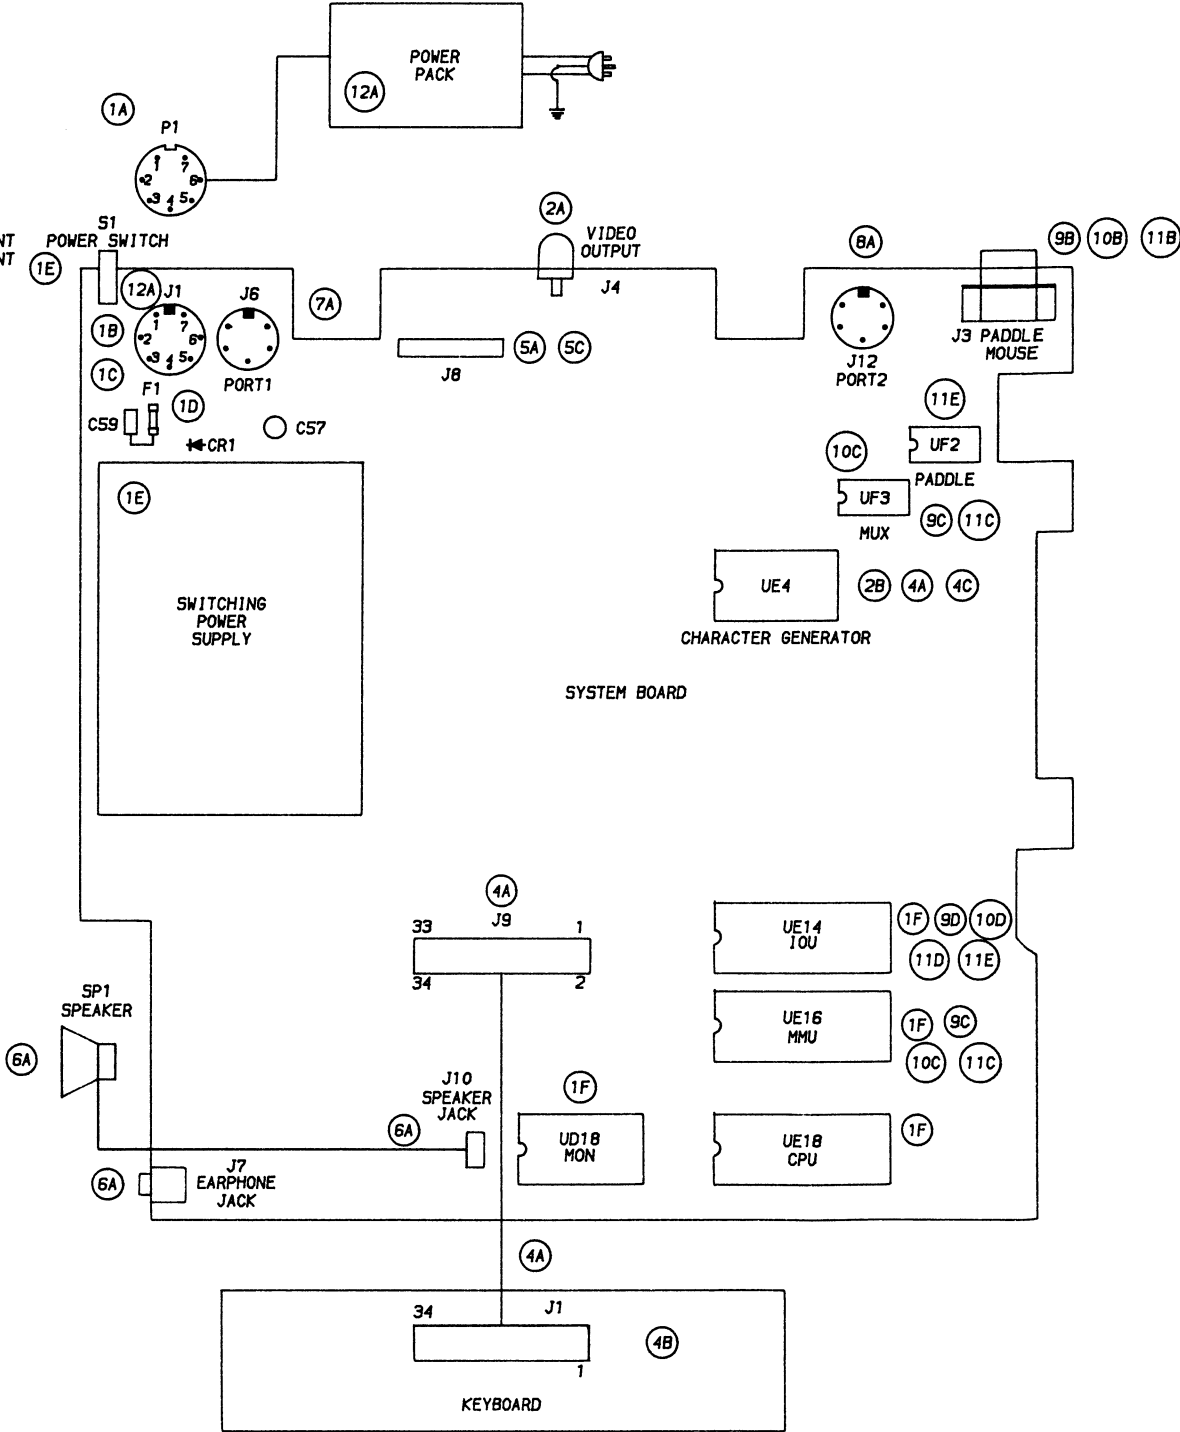

PRELIMINARY SERVICE CHECKS (Continued)

MISCELLANEOUS ADJUSTMENTS

DISK DRIVE

MOTOR SPEED ADJUSTMENT

Run the following program to keep the Disk Drive running continuously.

10 X = PEEK (- 16151); X = PEEK (- 16150)

Insert a diskette into the Disk Drive and close the door. Set the Disk Drive on its side so the strobe pattern on the spindle pulley is visible. Use a fluorescent light to view the strobe pattern. Use the outside pattern if a 60 cycle light is being used or the inside pattern if a 50 cycle light is being used. Adjust the Speed Control (VR1) until the strobe pattern appears to stand still.

MONITOR BOARD

ALIGNMENT TOOLS	GC ELECTRONICS
L503	5000, 5009, 8276
L505	9440, 8282, 8606

NOTE: Pattern generator with 1Vp-p into 75 ohms (VTR Standard) output used with appropriate pattern.

INITIAL MONITOR TEST

Connect a crosshatch generator to the Video In Jack. Turn the Monitor On and adjust the Brightness and Contrast controls for the best display. Check the adjustment of the Vert Hold, Horiz Hold, Vert Lin, Vert Size and Focus controls. If any of these controls produce erratic operation, clean that control with contact cleaner and recheck.

ADJUSTMENTS

NOTE: Connect a crosshatch generator to the Video In Jack for the following adjustments.

FOCUS ADJUSTMENT

Adjust the Focus Control (VR502) for sharp, well defined lines on the display.

VERT AND HORIZ HOLD ADJUSTMENT

Adjust the Vert Hold Control (VR401) and Horiz Hold Control (VR501) for the most stable display.

VERT SIZE ADJUSTMENT

Adjust the Vert Size Control (VR403) for the desired height on the display.

VERT LIN ADJUSTMENT

Adjust the Vert Lin Control (VR402) for even spacing between the vertical lines on the display.

VOLTAGE REGULATOR ADJUSTMENT

Connect a voltmeter to the collector of Voltage Regulator Transistor (Q701). Adjust the Voltage Regulator Control (VR701) for 12.0V.

SUB BRIGHTNESS ADJUSTMENT

Connect a crosshatch generator to the Video In Jack. Set the Brightness and Contrast Controls to Maximum clockwise position.

Adjust the Sub Brightness Control (VR503) for Maximum brightness without retrace lines.

CENTERING ADJUSTMENT

Center the CRT display by adjusting the two magnetic centering rings located on the deflection yoke rear cover.

HORIZ LIN ADJUSTMENT

Adjust the Horiz Lin Coil (L503) for even spacing between the horizontal lines on the display.

WIDTH ADJUSTMENT

Adjust the Width Coil (L505) for the desired width on the display.

SUB CONTRAST

Set the Brightness and Contrast Controls to Maximum clockwise position. Adjust the Sub Contrast Control for best display with no distortion.

SYSTEM BOARD

ALIGNMENT TOOLS	GC ELECTRONICS
L2	9300, 9302, 9304


HUE ADJUST

Type in and run the following Basic program.

```
10 GR
20 FOR X = 20 TO 22
30 READ Y: COLOR = Y
40 HLIN 0,39 AT X: NEXT X
50 DATA 2,9,12
```


The program produces blue, orange and green lines on a color Monitor screen. Adjust Hue Adjust Coil (L2) for proper blue, orange and green hues.

PRELIMINARY SERVICE CHECKS (Continued)

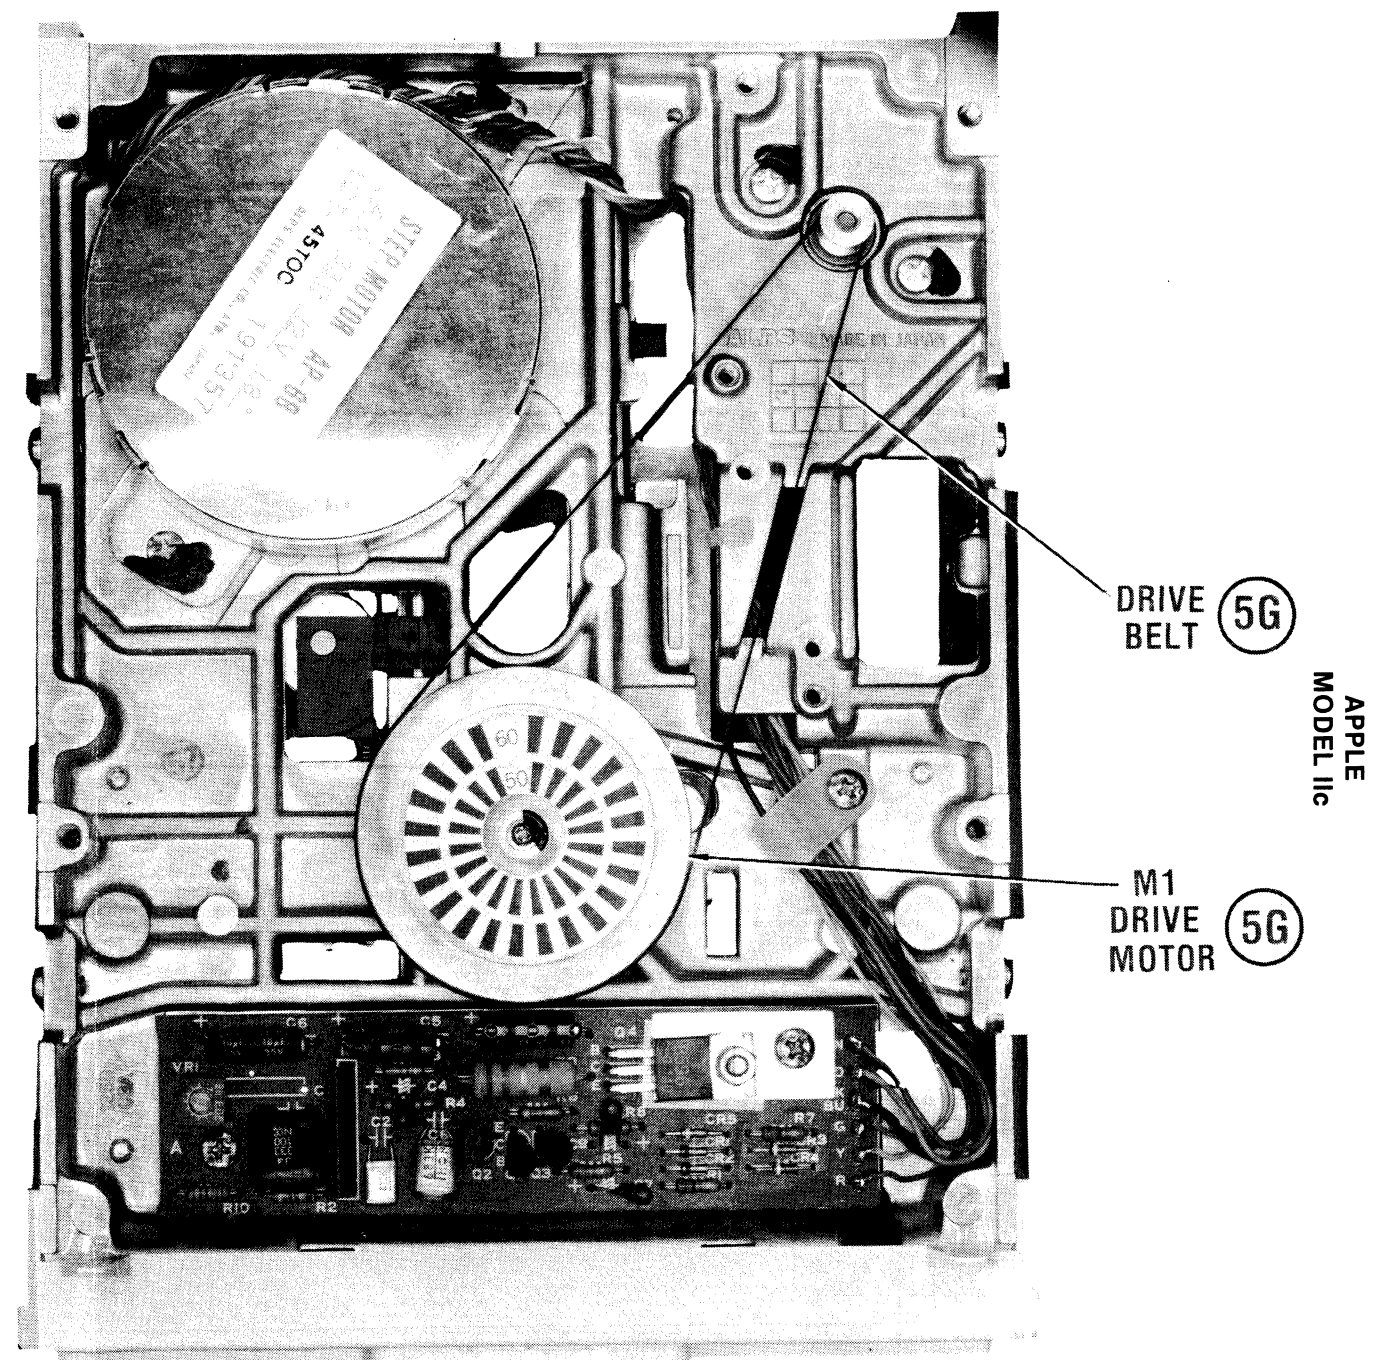


MECHANICAL-BOTTOM VIEW

PRELIMINARY SERVICE CHECKS (Continued)

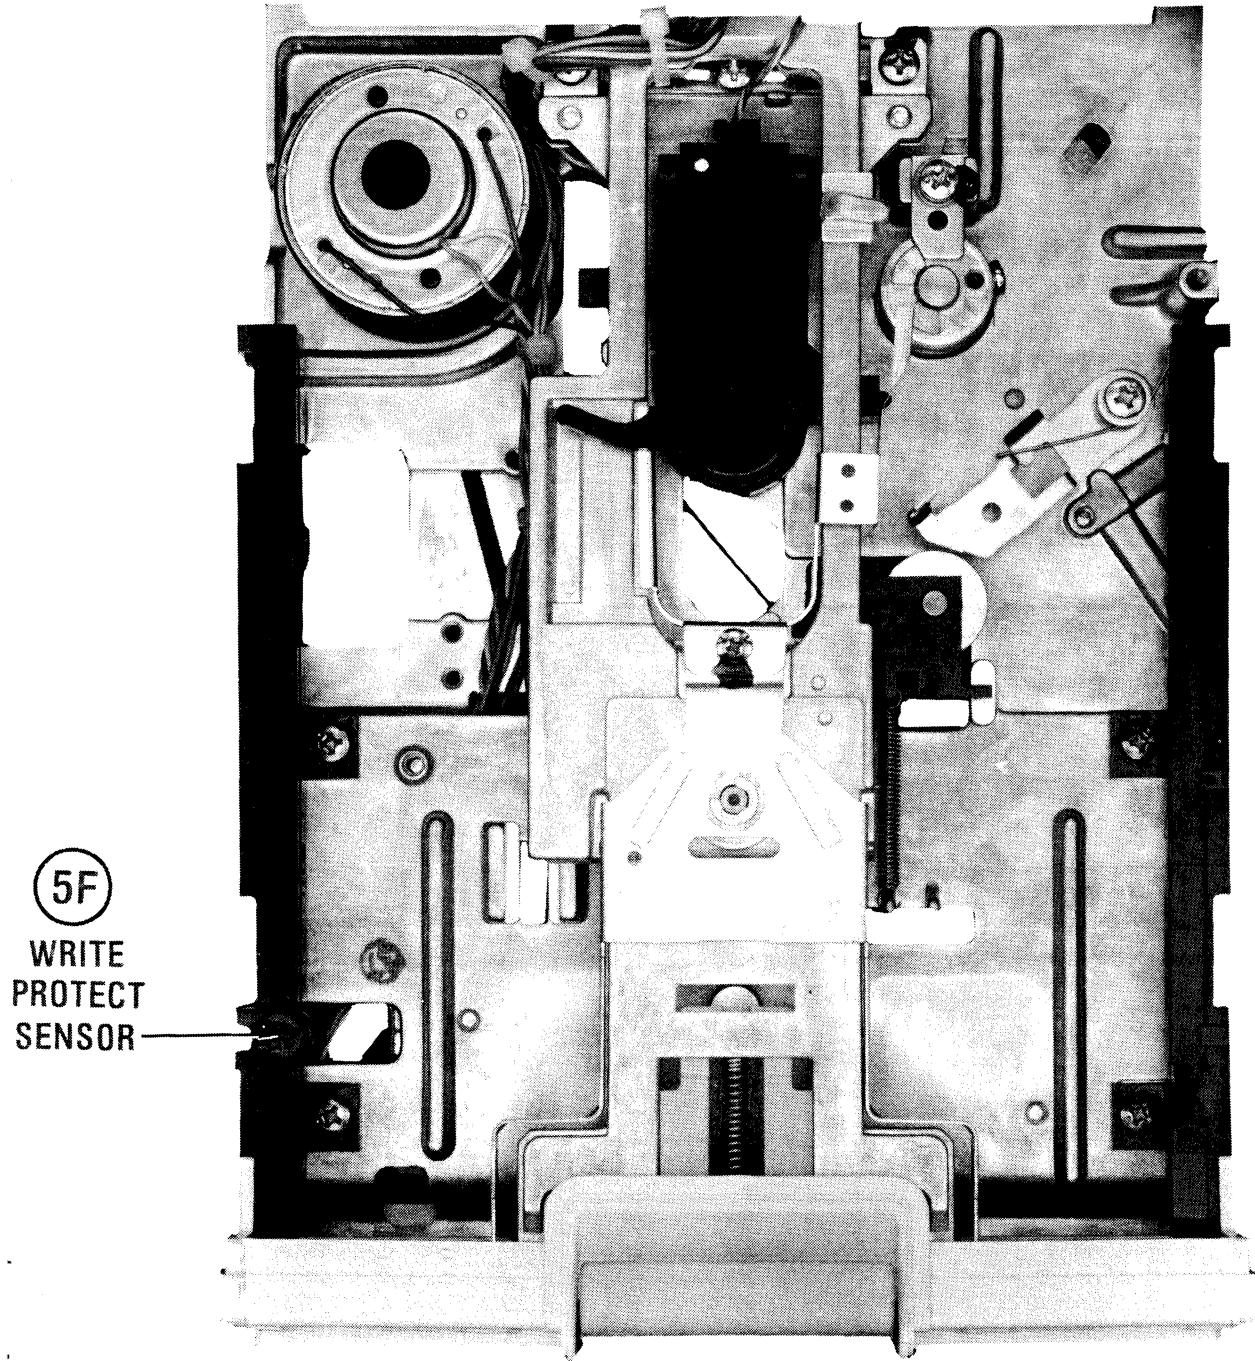


MECHANICAL-TOP VIEW

PRELIMINARY SERVICE CHECKS (Continued)

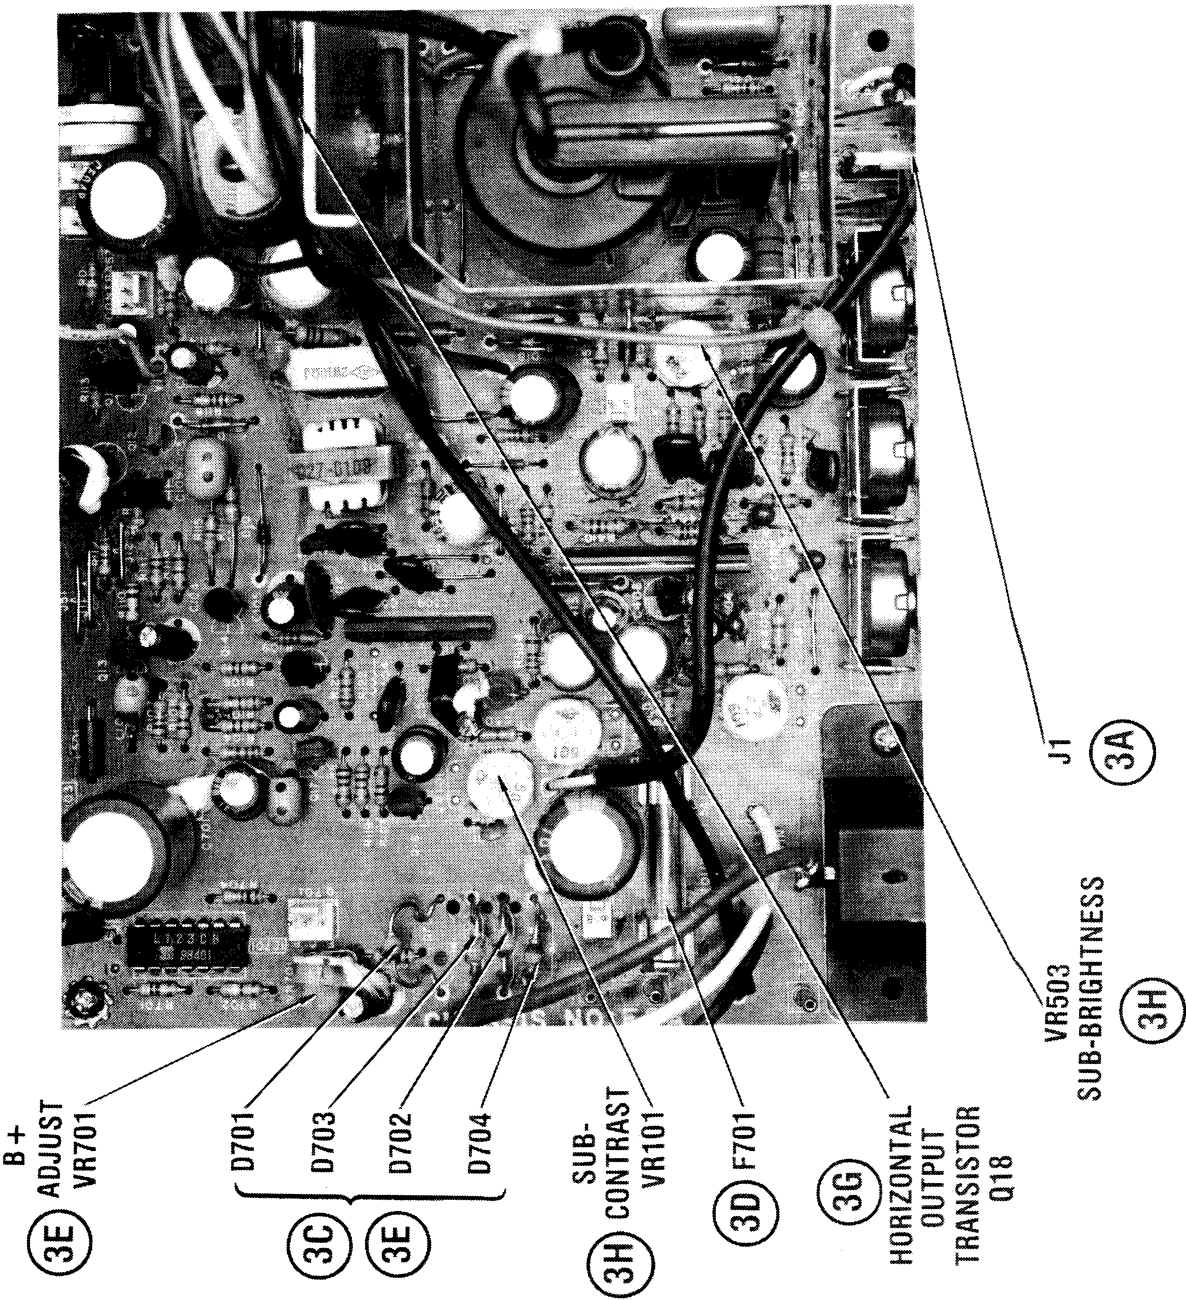

MONITOR BOARD


PRELIMINARY SERVICE CHECKS (Continued)

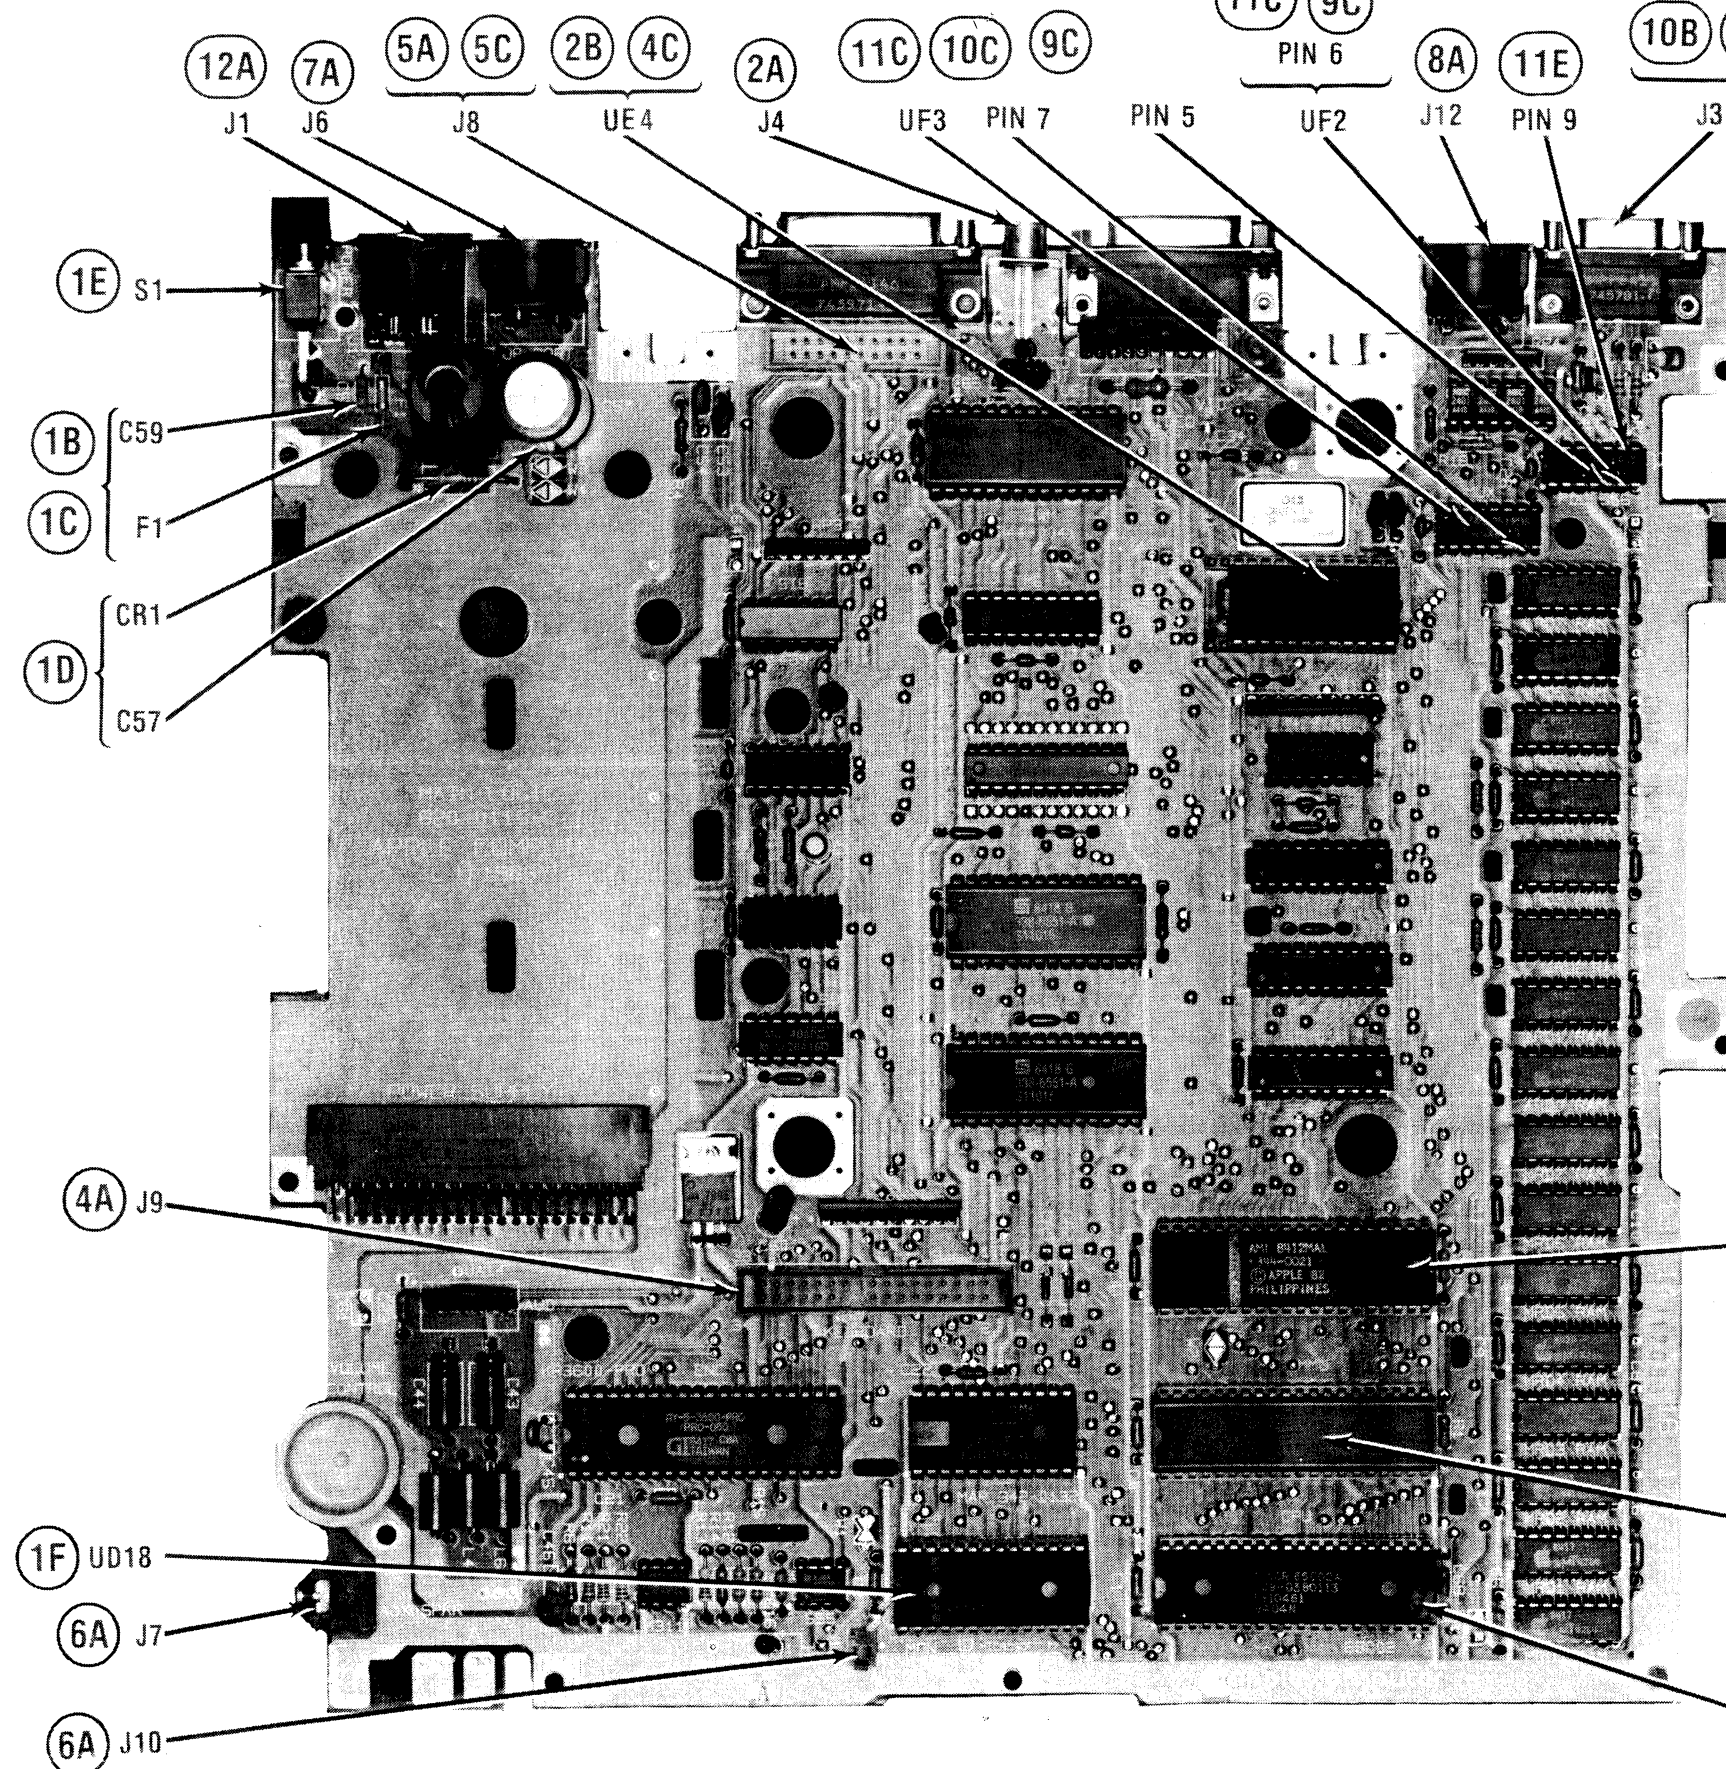





PRELIMINARY SERVICE CHECKS (Continued)

APPLE
MODEL IIc

IC PINOUTS, TERMINAL GUIDES & SCHEMATIC NOTES

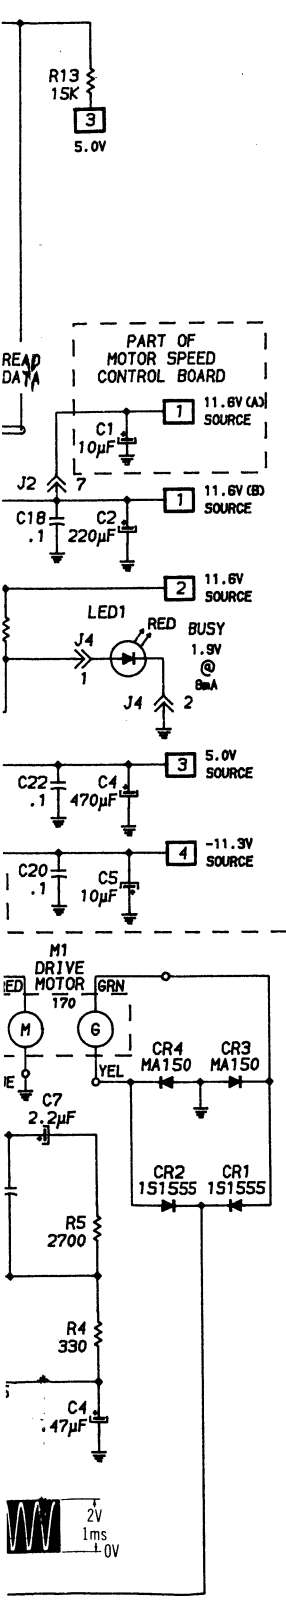

APPLE MODEL IIc DRIVE

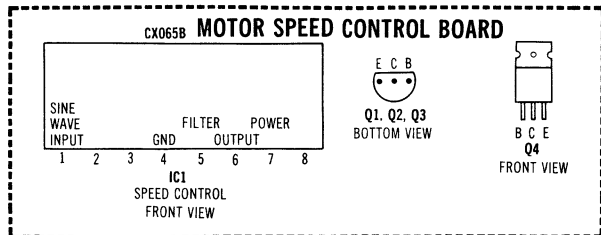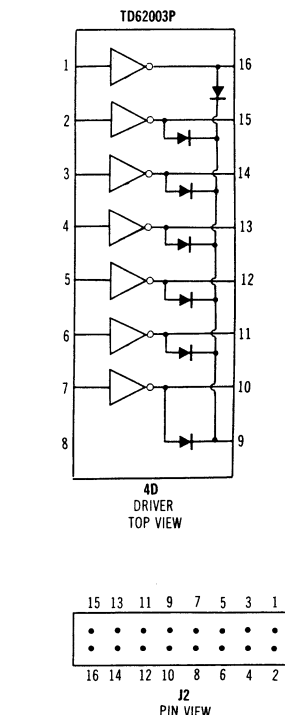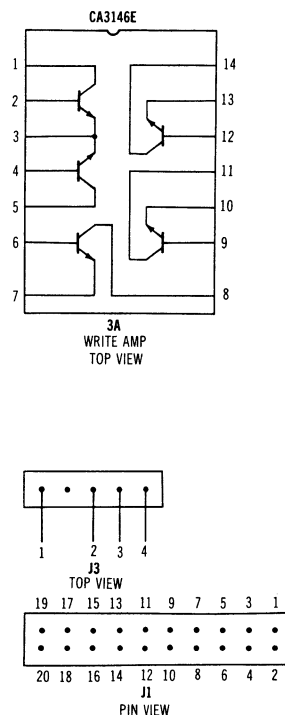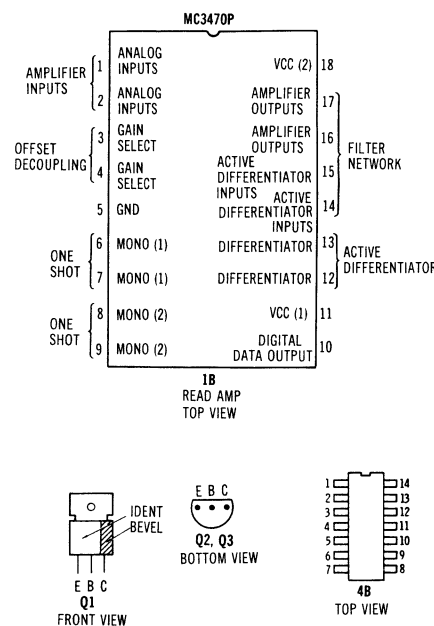

SCHEMATIC NOTES

- Circuitry not used in some versions
- Circuitry used in some versions
- See parts list
- ⊥ Ground
- Chassis
- Waveforms and voltages taken from ground, unless noted otherwise
- Voltages, logic readings and waveforms taken on the Disk Drive while running the following program (with DOS 3.3) and during the period when the Head is not moving unless noted. An initialized diskette, with DOS 3.3 only (no other programs or data), was used in the Disk Drive. Note: Put the Caps Lock key in the down position.
- 10 DS = CHRS(4)
- 20 PRINT DS; "OPEN SAMS"
- 30 PRINT DS; "WRITE SAMS"
- 40 FOR X = 1 TO 50
- 50 PRINT "THIS IS A TEST"
- 60 NEXT X
- 70 PRINT DS; "CLOSE"
- 80 GOTO 20

Waveforms taken with triggered scope and Sweep/Time switch in Calibrate position, scope input set for DC coupling on 0 reference voltage waveforms. Switch to AC input to view waveforms after DC reference is measured when necessary. Each waveform is 7 cm. width with DC reference voltage given at the bottom line of each waveform.

Time in $\mu\text{sec.}$ per cm, given with p-p reading at the end of each waveform.

Item numbers in rectangles appear in the alignment/adjustment instructions.

Supply voltages maintained as shown at input.

Controls adjusted for normal operation.


Terminal identification may not be found on unit.

Capacitors are 50 volts or less, 5% unless noted.


Electrolytic capacitors are 50 volts or less, 20% unless noted.

Resistors are $\frac{1}{2}W$ or less, 5% unless noted.

Value in () used in some versions.

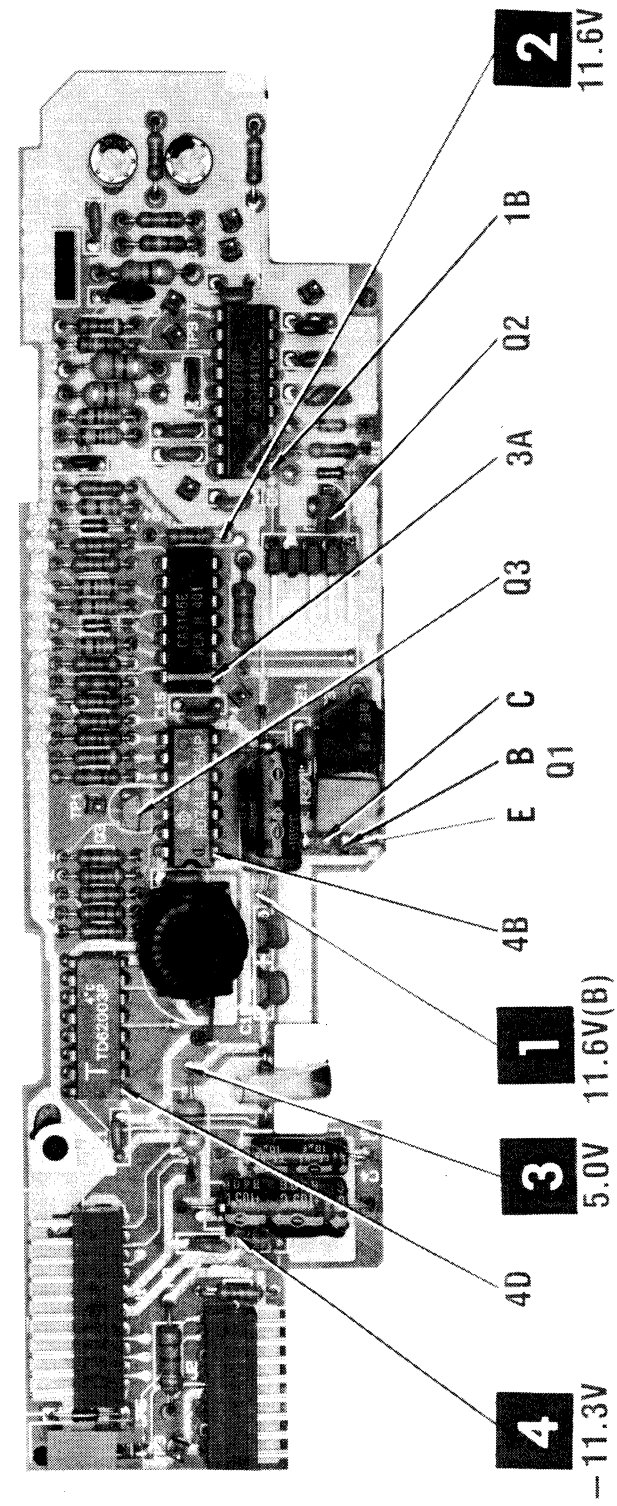


ARROWS ON IC'S INDICATE PIN 1 UNLESS NOTED.

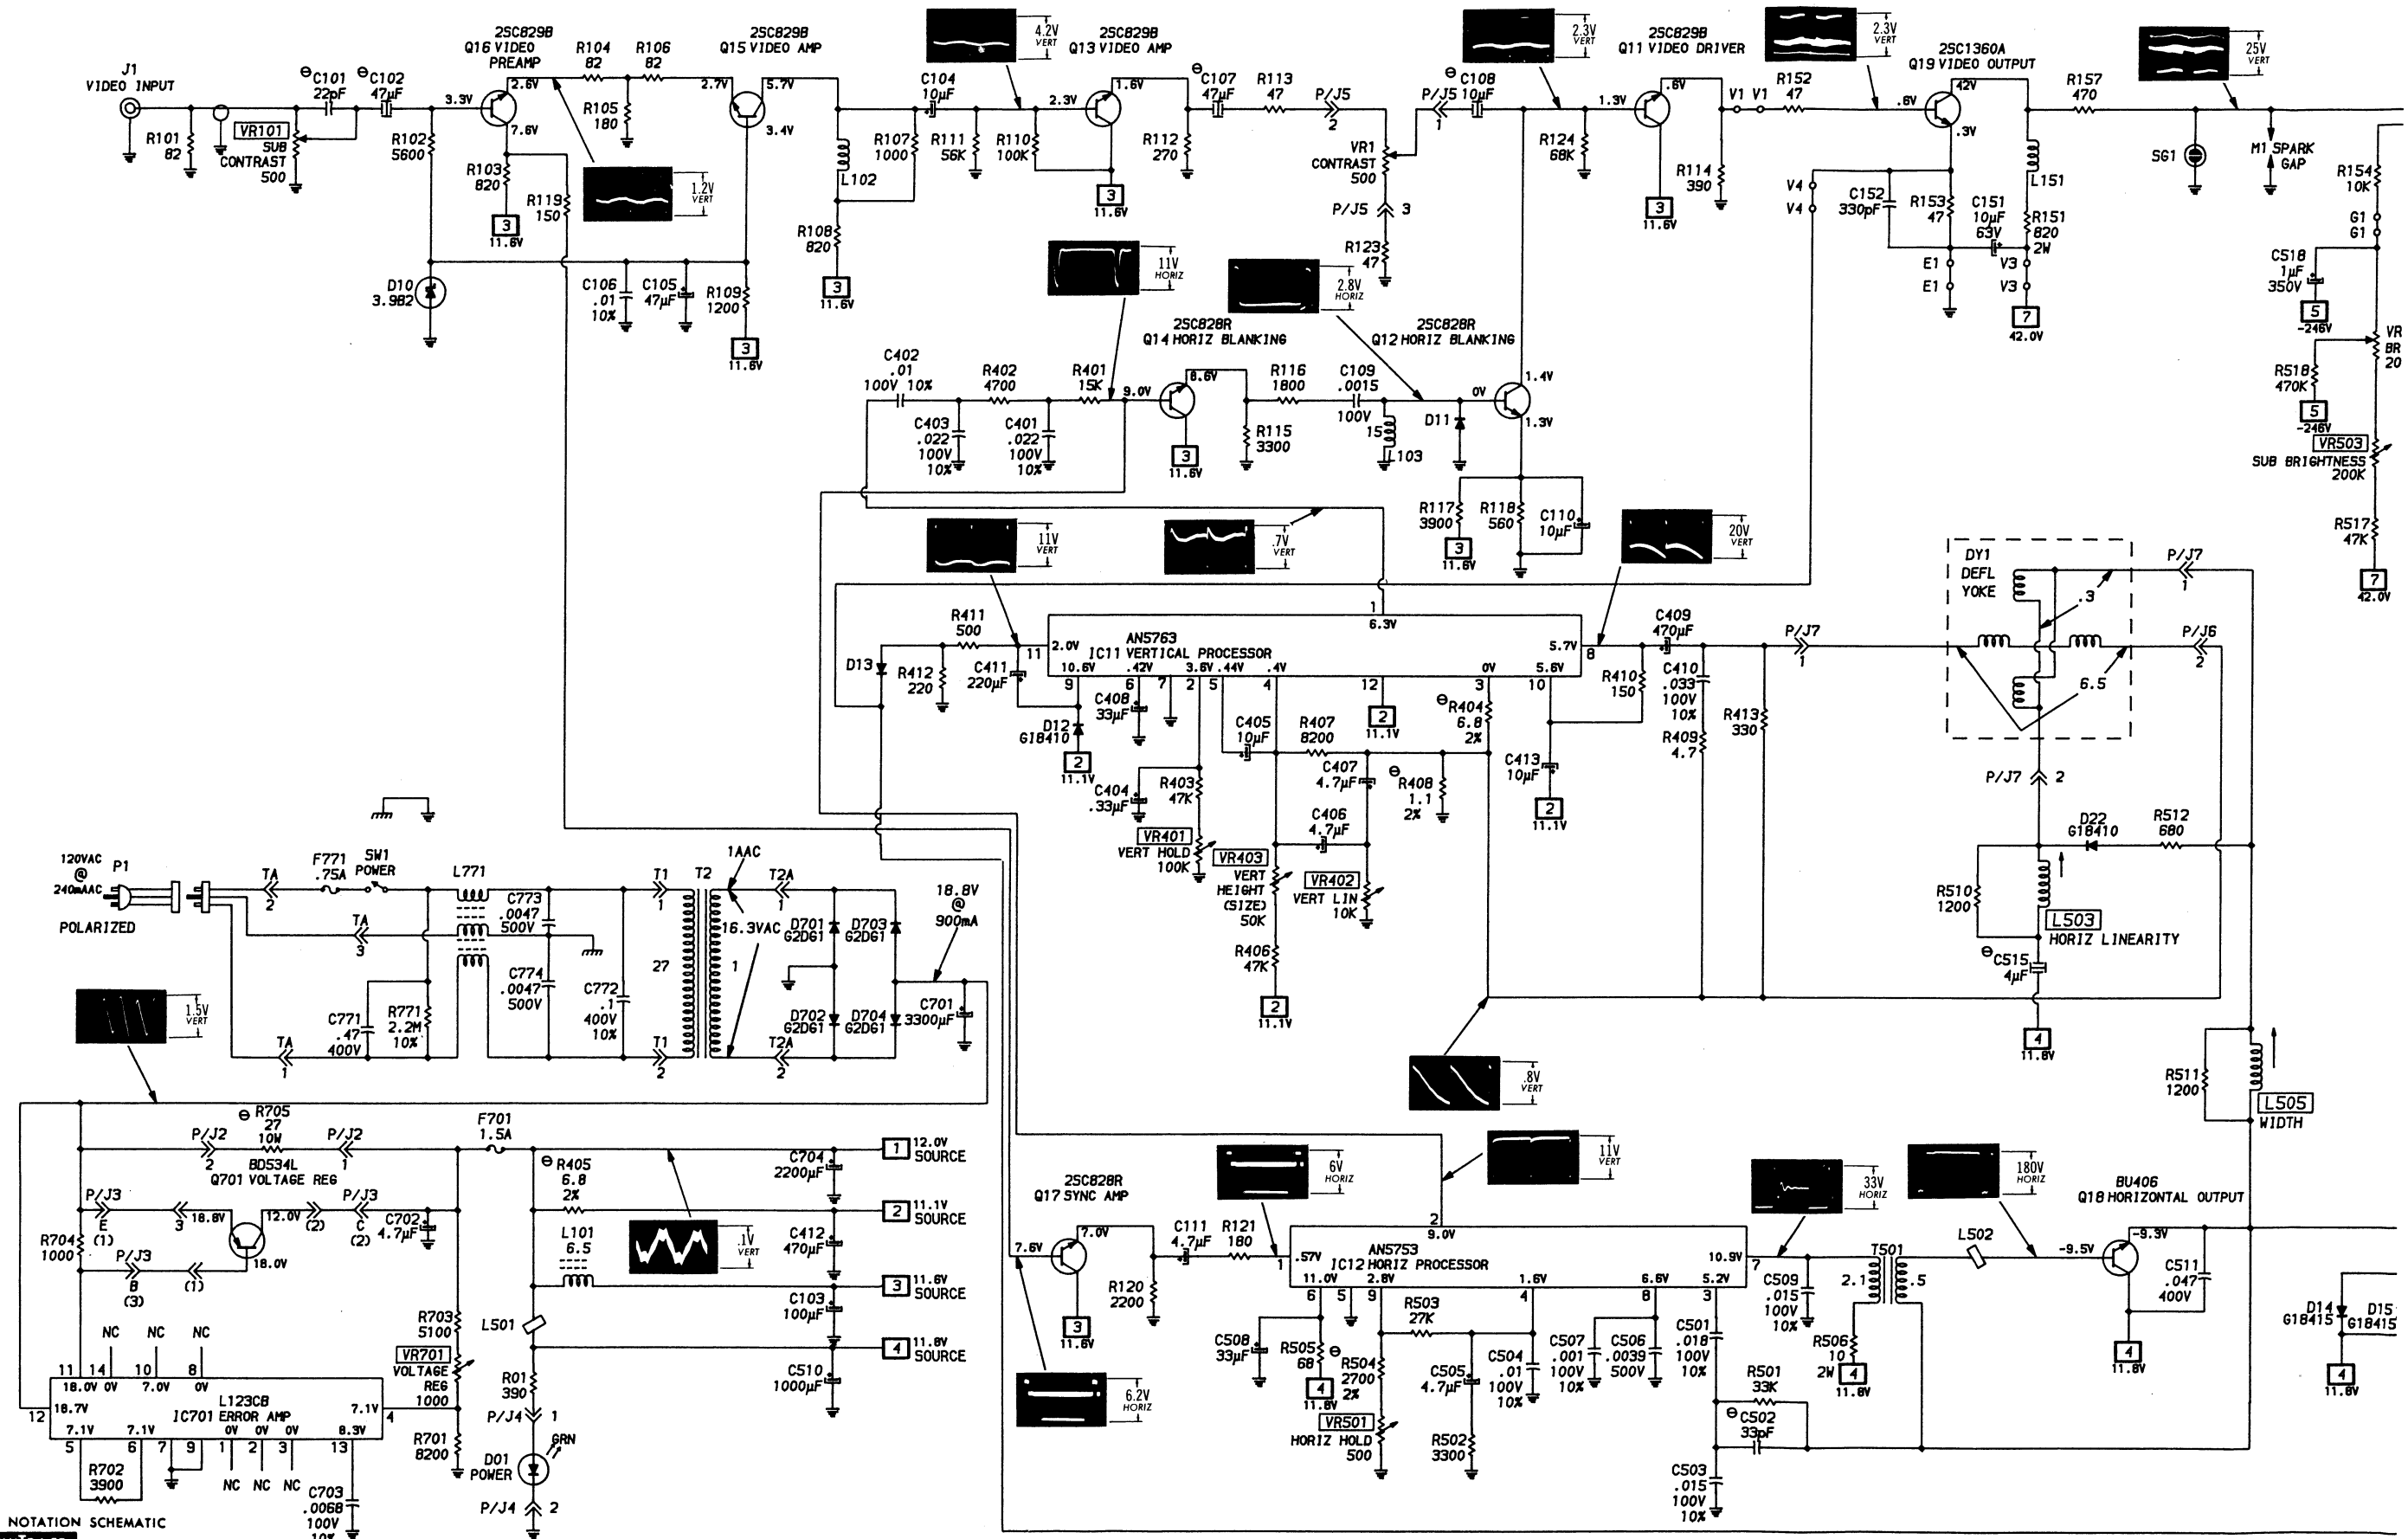

A PHOTOFAC STANDARD NOTATION SCHEMATIC
WITH CIRCUITRACE


© Howard W. Sams & Co., Inc. 1985

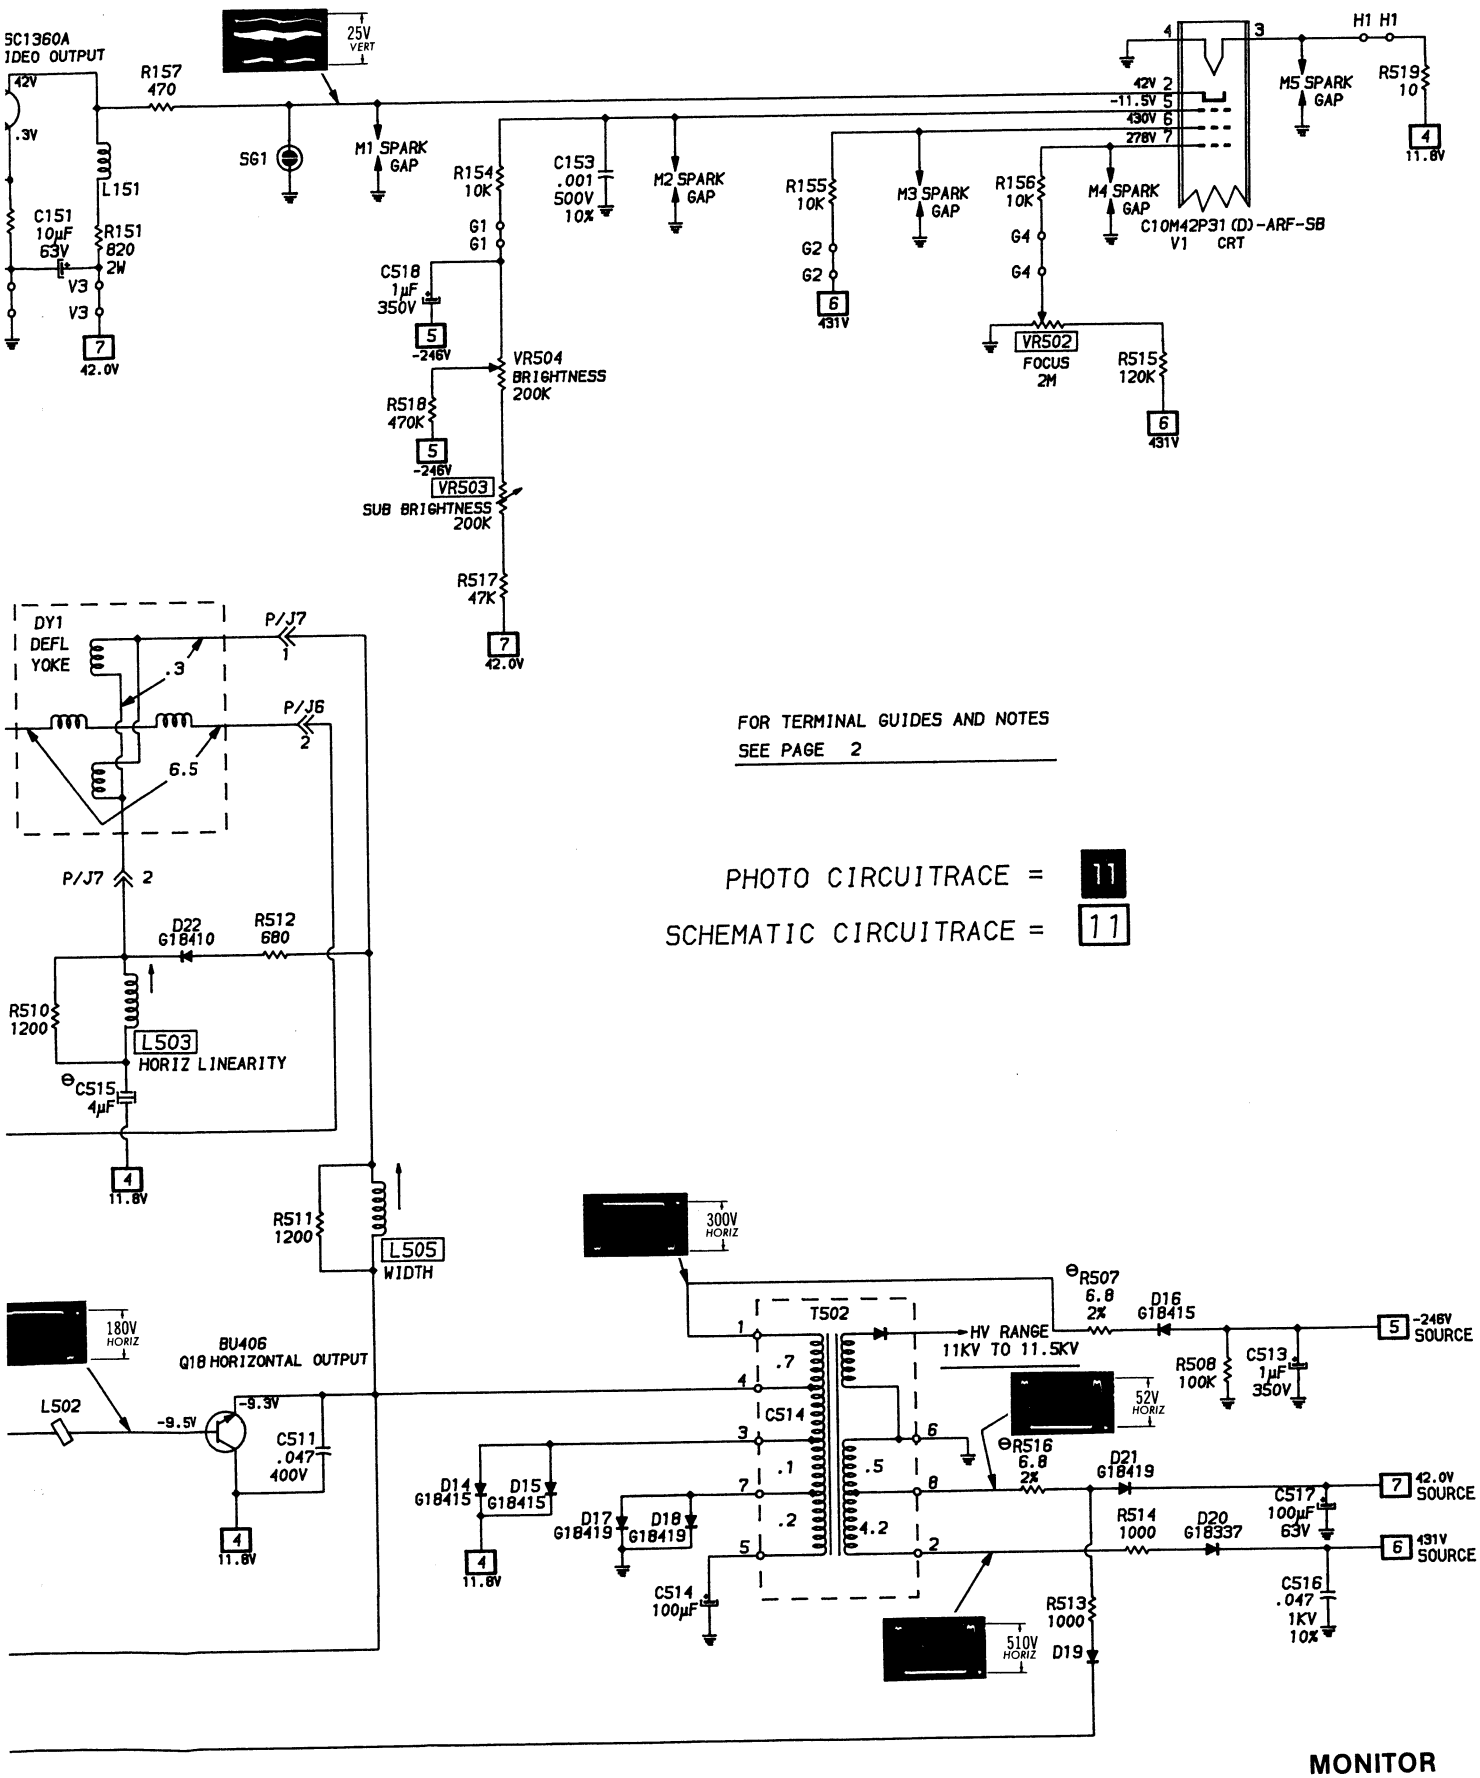

FOR TERMINAL GUIDES AND NOTES
SEE PAGE 2

PHOTO CIRCUITRACE = 11
SCHEMATIC CIRCUITRACE = 11

MONITOR
APPLE
MODEL IIc

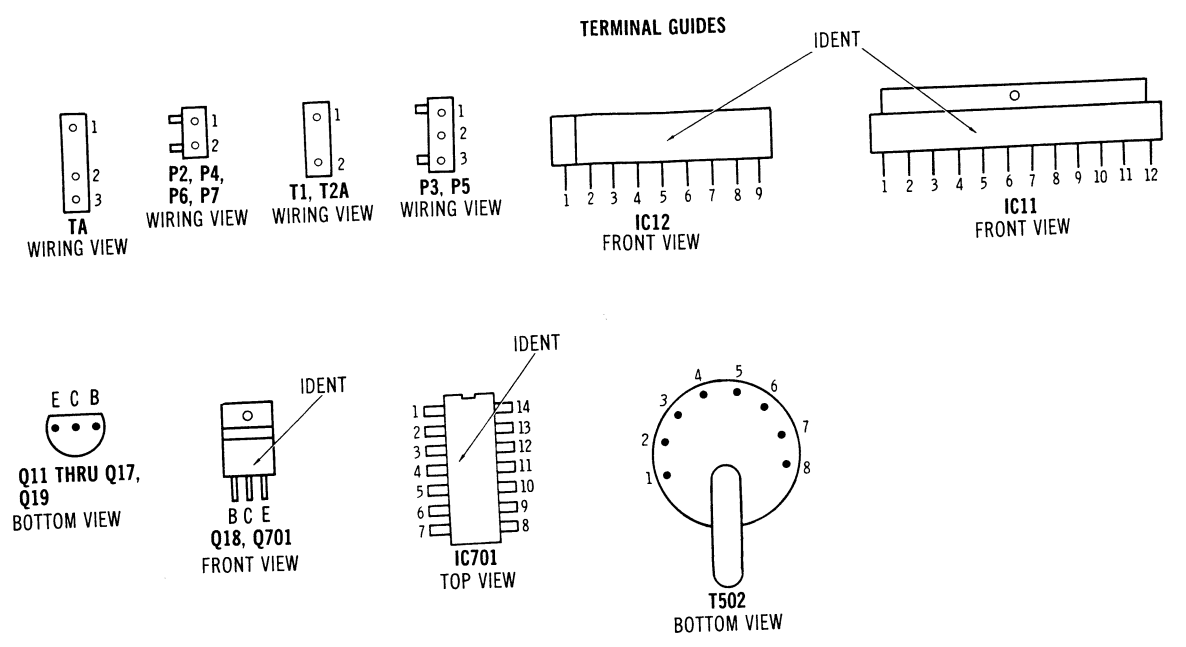

RESISTANCE MEASUREMENTS

MEASUREMENTS TAKEN WITH LOW POWER OHMS METER														
ITEM	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9	PIN 10	PIN 11	PIN 12	PIN 13	PIN 14
IC11	26K	82K	8	7400	10.3K	552	0	10.3K(1)	18K(1)	10.1K	715	45		
IC12	20.8K	1NF	18.7K	30.5K	0	105	50	1NF	2960					
IC701	1NF	1NF	1NF	3350	1NF	1NF	0	1NF	0	1NF	1061	65	1NF	1NF
V1	470K	450K	28	0	2.2M	2M	1.4M							
ITEM	E	B	C		ITEM	E	B	C		ITEM	E	B	C	
Q11	387	68K	44		Q16	260	6760	858						
Q12	485	15	68K		Q17	2190	1008	44						
Q13	266	36K	44		Q18	1NF	1NF	38						
Q14	3300	1NF	44		Q19	47	434	1NF						
Q15	259	1233	861		Q701	65	1061	38						

(1) Reading may vary according to the condition of the electrolytic in the circuit.

SCHEMATIC NOTES

- Circuitry not used in some versions
 - Circuitry used in some versions
 - See parts list
 - ⊥ Ground
 - Chassis
- Waveforms and voltages taken from ground, unless noted otherwise
- Voltages, logic readings and waveforms taken in Power Up mode, Caps Lock and 80/40 Column keys down, Keyboard Switch up, no diskette in the Disk Drive "Apple IIc" and "Check Disk Drive" displayed on the Monitor screen.
- Waveforms taken with triggered scope and Sweep/Time switch in Calibrate position, scope input set for DC coupling on 0 reference voltage waveforms. Switch to AC input to view waveforms after DC reference is measured

when necessary. Each waveform is 7 cm. width with DC reference voltage given at the bottom line of each waveform.

Time in μ sec. per cm, given with p-p reading at the end of each waveform.

Item numbers in rectangles appear in the alignment/adjustment instructions.

Supply voltages maintained as shown at input.

Controls adjusted for normal operation.


Terminal identification may not be found on unit.

Capacitors are 50 volts or less, 5% unless noted.

Electrolytic capacitors are 50 volts or less, 20% unless noted.


Resistors are $\frac{1}{2}$ W or less, 5% unless noted.

Value in () used in some versions.

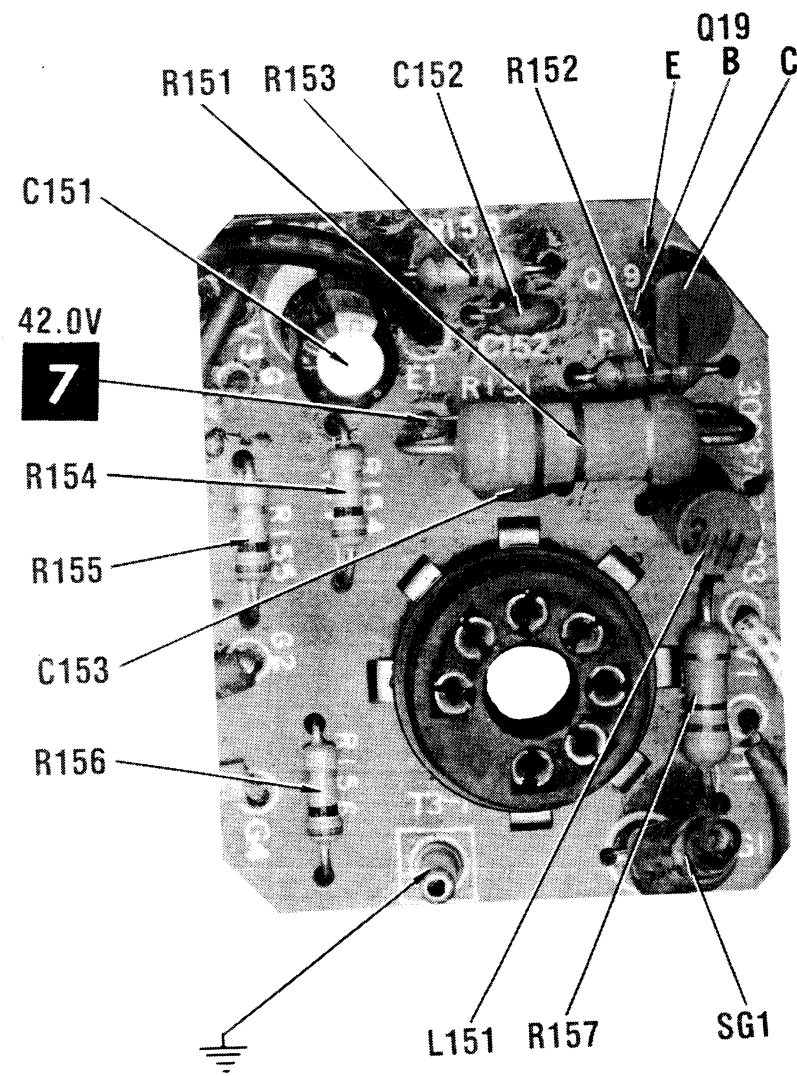

CRT SOCKET BOARD

A Howard W. Sams CIRCUITRACE® Photo

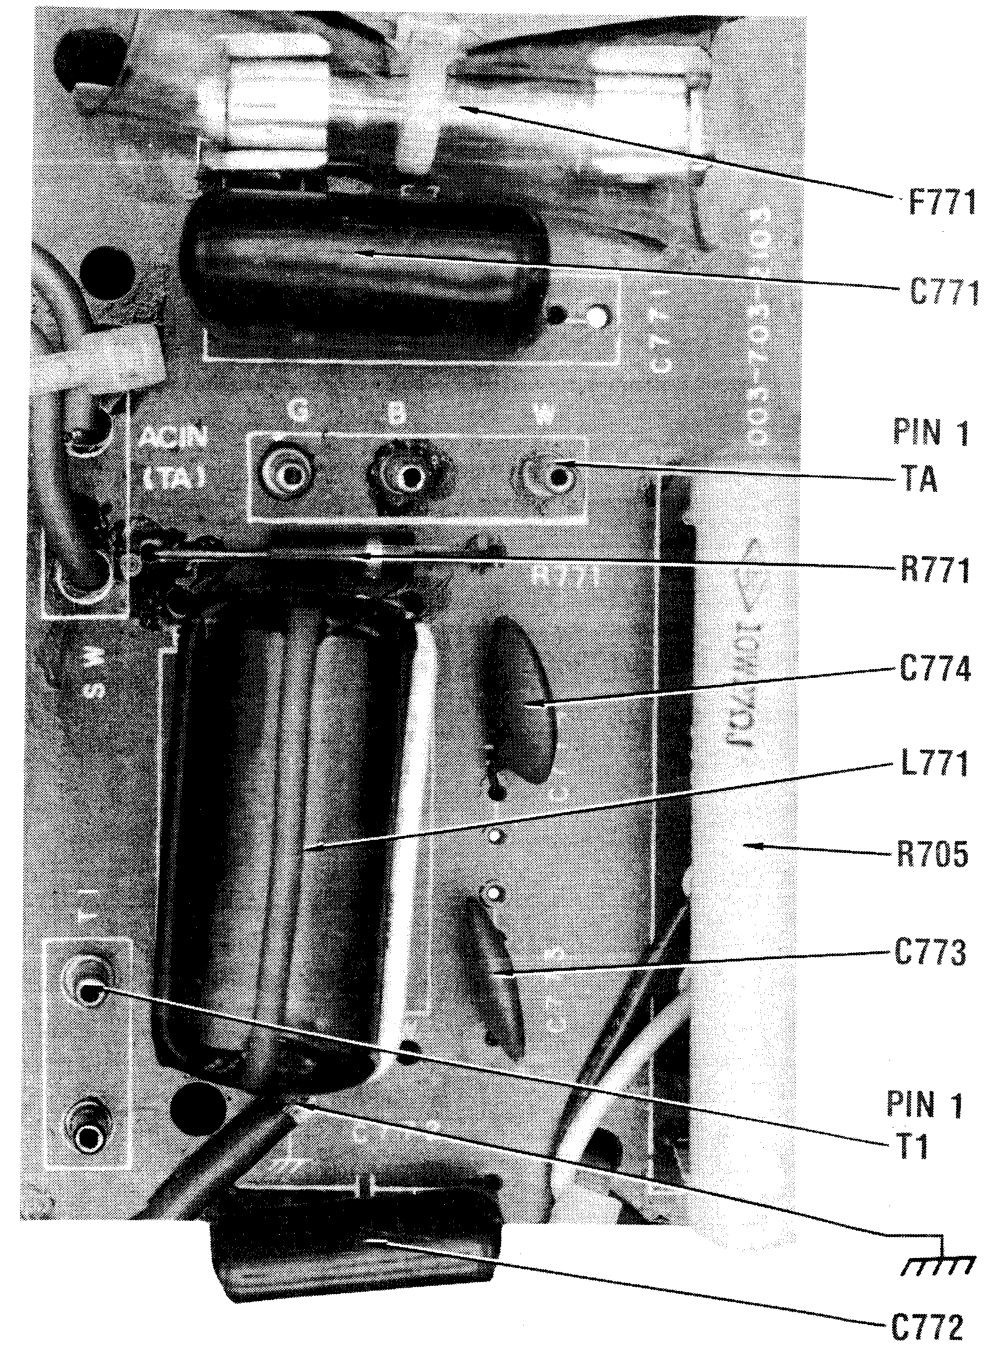

MONITOR POWER SUPPLY BOARD

CABINET REMOVAL

Remove two screws holding rear panel out and lift it. Remove two screws holding top vent panel. Remove two screws holding rear panel. Remove two screws holding cabinet bottom. Remove four screws holding front cabinet from CR.

MAIN BOARD REMOVAL

Remove ten screws holding main board shield. Remove two screws from front panel.

CRT IMPLOSION PROTECTION

Implosion protection is an internal feature of the CRT. It is accomplished without the need for a separate device.


FUSE DEVICES

A 1.5-amp fuse is used for low voltage protection.


A .75-amp fuse is used for AC line protection.

HORIZONTAL OSCILLATOR

Adjustment of the horizontal position is accomplished by the Horizontal Position Control (HPC) potentiometer.

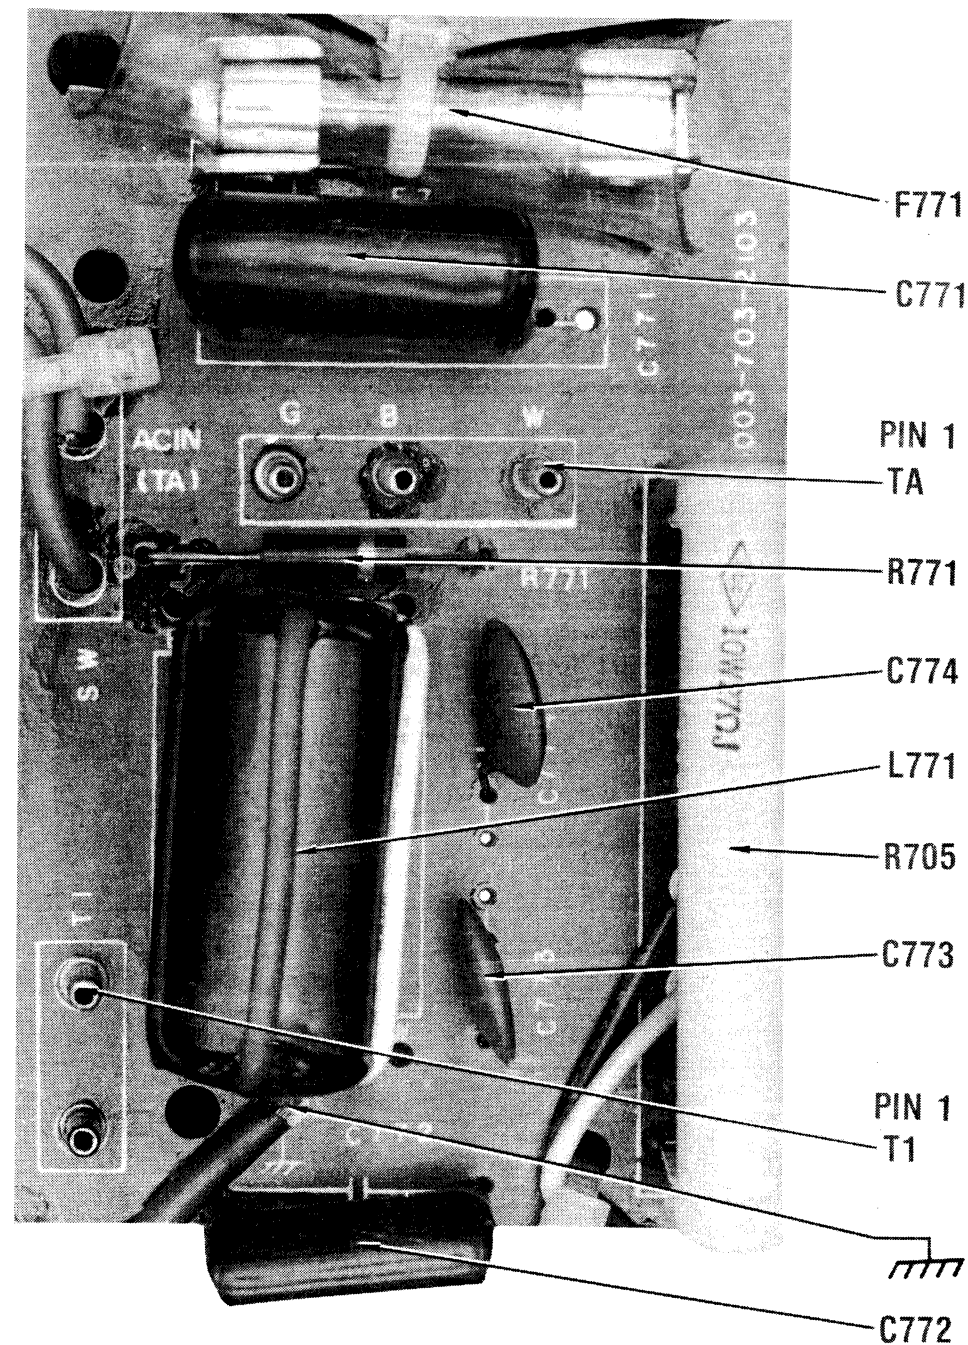

MONITOR POWER SUPPLY BOARD

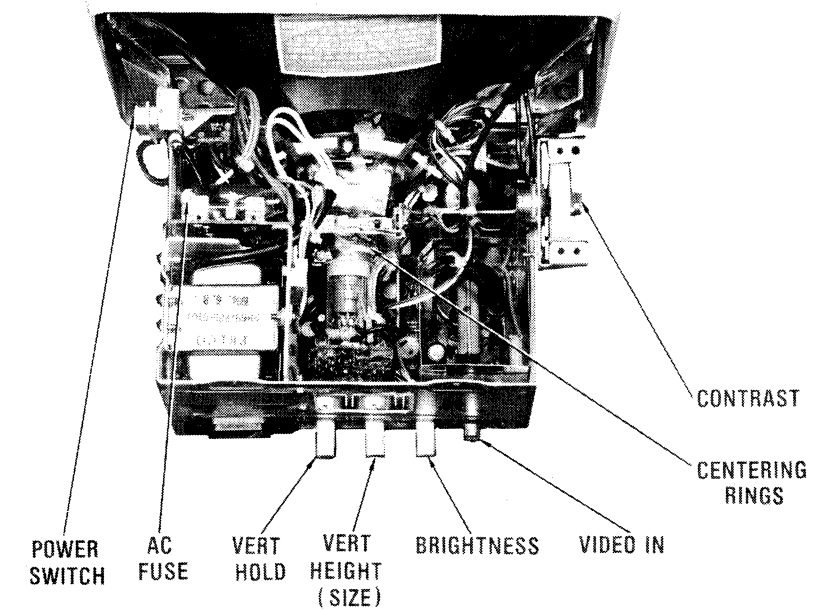

CABINET VIEW DISASSEMBLY INSTRUCTIONS

CABINET REMOVAL

Remove two screws holding rear panel. Pull the lower part of the rear panel out and lift up to remove panel. Remove two screws holding top vent panel and slide panel out. Remove two screws holding recessed handle section and remove handle. Remove two screws holding contrast control and two screws holding cabinet bottom and remove cabinet bottom. Remove four screws holding the front cabinet and remove front cabinet from CRT.

MAIN BOARD REMOVAL

Remove ten screws holding bottom shield and remove shield. Remove two screws from bottom of Main board and

two screws from sides of chassis holding front brackets to Main board. Pull the Main board down. Disconnect CRT socket and HV anode lead. Disconnect eight connectors from Main board and one connector from AC input board. Remove Main board.

CRT REMOVAL

Follow the "Cabinet Removal" procedure. Disconnect CRT socket, HV anode lead and the deflection yoke. Remove four screws holding CRT to cabinet front. Remove the CRT. Loosen and remove the deflection yoke from neck of CRT.

SERVICING IN THE FIELD

CRT IMPLOSION PROTECTION AND CLEANING

Implosion protection is an integral part of the picture tube, cleaning accomplished without CRT removal.

FUSE DEVICES

A 1.5-amp fuse is used for low-voltage power-supply protection.

A .75-amp fuse is used for AC line protection.

HORIZONTAL OSCILLATOR

Adjustment of the horizontal hold is accomplished by the proper setting of the Horizontal Hold Control.

WIDTH

The width may be varied by adjusting the width coil.

FOCUS

The focus may be varied by a focus control.

CENTERING

Centering is accomplished by proper adjustment of two magnetic rings located on the yoke rear cover.